

Receiver and sender units must be set to the identical coding regarding DIP-switch 1 to 4. For changing the setting, use a small screw driver or ball pen.

The LED-Lamp included is dimmable. Before operation, the DIP-switch 5 inside the battery compartment of the remote must be set to "DIM".

When using non-dimmable lamps, DIP-switch 5 must be set to "On/Off".

After changing the DIP-switch setting within the remote, briefly remove and re-insert the battery.

Caution: Trying to dim non-dimmable lamps may cause damage to the lamp or the fan's electronic parts.

