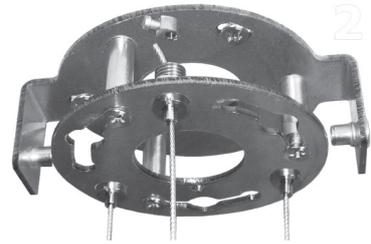
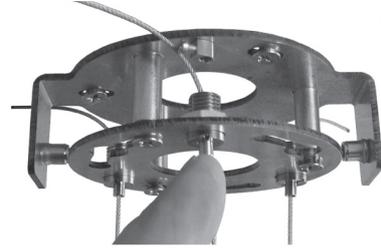



OFF

TRILOGY

1

2

3

4

5

6


- 1 - Fissare la staffa a soffitto.
- 2 - Inserire il disco porta cavi ruotando dino a fine corsa, avvitare le viti. Non portare il disco porta cavi in alto insieme al rosone perchè i cavi si sfilano.
- 3 - Regolare l'altezza facendo scorrere i cavi verso l'alto all'interno dei bloccavi.
- 4 - Per regolare l'altezza verso il basso agire sul pernetto del bloccacavo spingendolo verso l'alto e tirando il cavo in basso, dopo la regolazione tagliare il cavo in eccesso.
- 5 - Fare scorrere il rosone in alto per riagganciarlo alla staffa con le due viti precedentemente svitate.
- 6 - Per regolare la lunghezza del cavo elettrico agire sul grano posto sotto il rosone. Svitare per farlo scorrere e riavvitare per bloccarlo.



- 1 - Secure the bracket to the ceiling with the appropriate caps
- 2 - Insert the disk containing the cables turning until stops and then screw the screws. Do not bring the cable tray up with the canopy.
- 3 - Adjust the height sliding up the cables through the stop cable.
- 4 - To low down the height push up the support of the cable stoppage and pull down the cable in excess.
- 5 - Slide up the ceiling rose to hook it to the bracket.
- 6 - To adjust the length of the electric cable, unscrew the stoppage under the ceiling rose, then screw it until stops.