



CARE INSTRUCTIONS

Daily cleaning can be done by wiping the frame with a clean dry cloth. Should the surface need more attention this can be cleaned with water and a light detergent or soap applied with a damp cloth. Wipe after with a clean dry cloth. Avoid any abrasive materials.

TROUBLESHOOTING

If lamp does not light, turn off the power. Check the bulb for a broken filament. Replace bulb if necessary, then turn it on. If the lamp still does not light, please contact customer service at the local dealer. If the external flexible cable or cord of this lamp is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.

TECHNICAL INFORMATION

Recommended light source:

Stemlite Table H42 and H70: E27, 470 Lumen (40W Halogen, ~4-5W LED).

Stemlite Floor H110 and H150: E27, 810 Lumen (60W Halogen, ~8-9W LED).

With LED you can increase the light output up to 1530 Lumen (~13-16W).

Turn power off when changing light bulb. Isolation class II. The lamp is not approved for outdoor use or use in damp/wet rooms (IP20)



For enquiries contact GUBI A/S - CVR: 17940384

Klubiensvej 7-9. 2150 Nordhavn. Copenhagen, Denmark

T +45 69 15 60 60 – order@gubi.com

GUBI.COM

 
118-20-001-03 Assembly Instructions Stemlite Table and Floor Lamps EU.

GUBI


ASSEMBLY INSTRUCTIONS

for


Stemlite Table & Floor Lamps

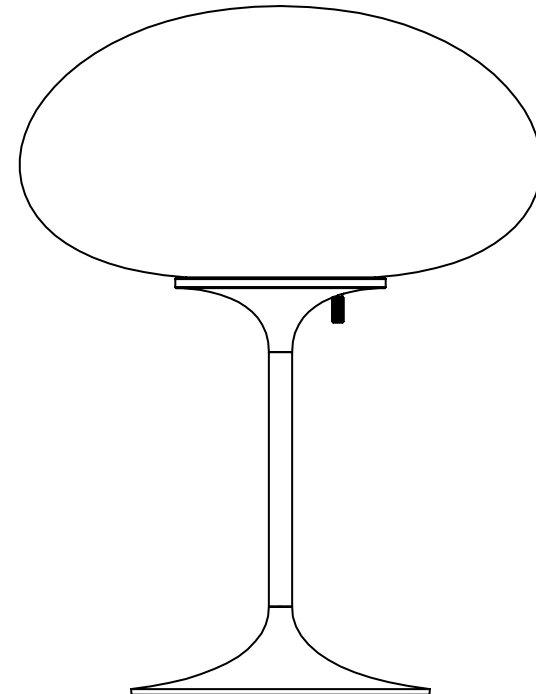

CONTENTS

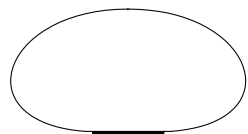 


x1

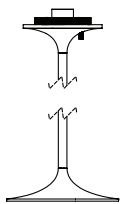 

x1


1.

 Insert light bulb.

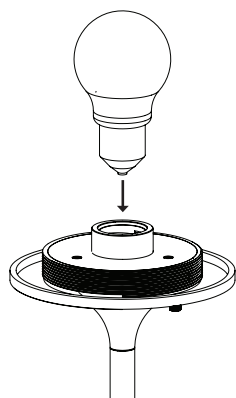

2.

 Screw the shade on to the threaded base.

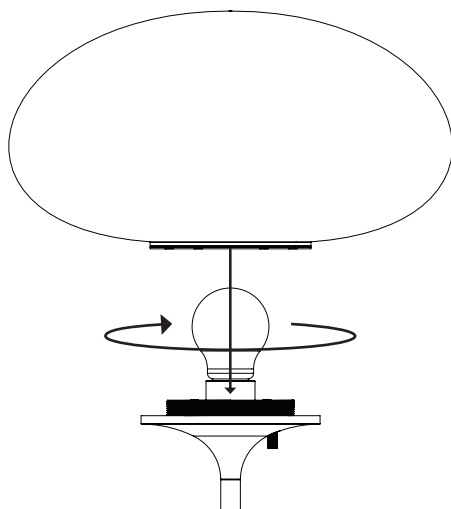

3.

Plug the lamp in and rotate the switch counter-clockwise to switch the lamp on and off.

