




7626-000

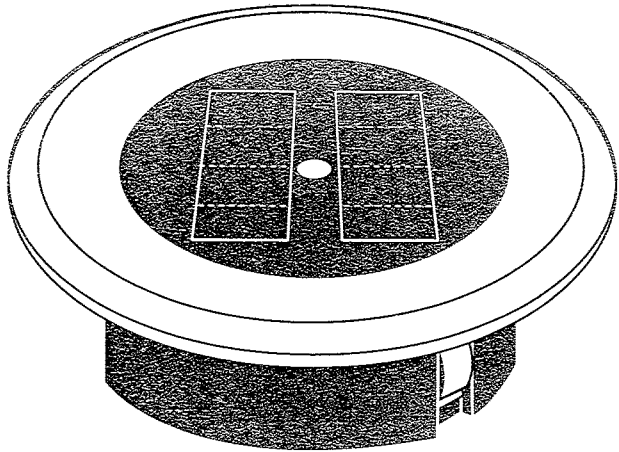


1.

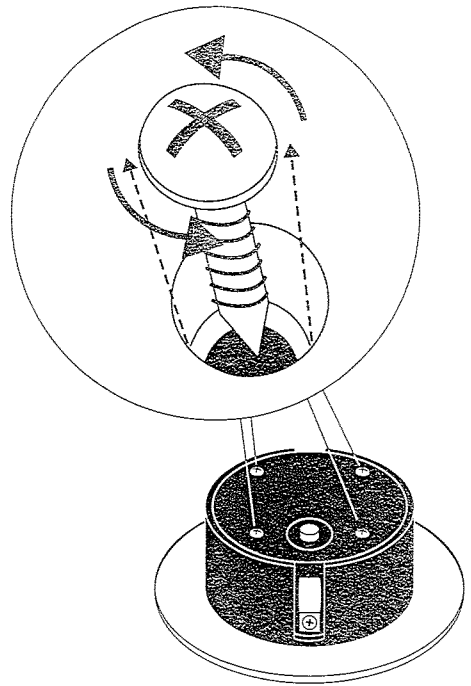


2.

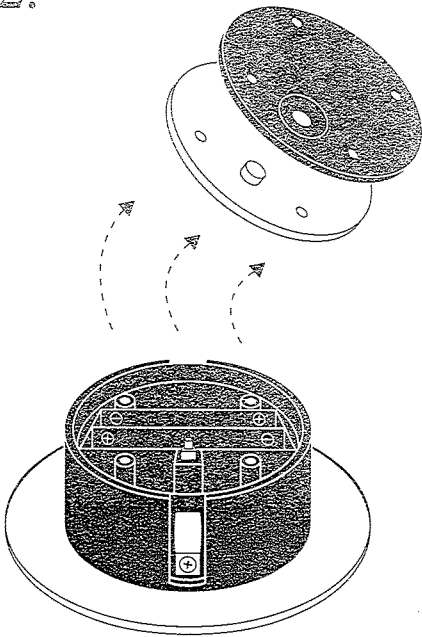


3.

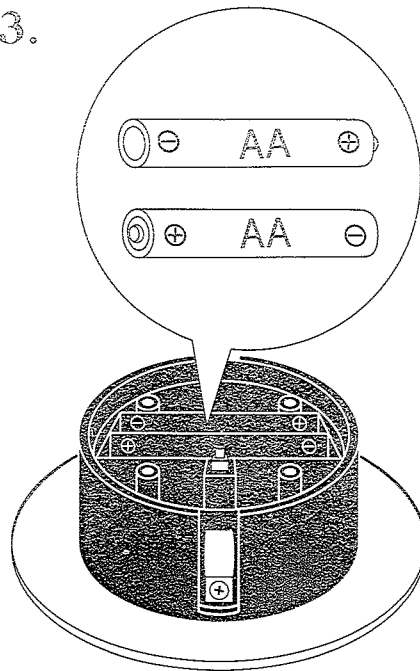


4.

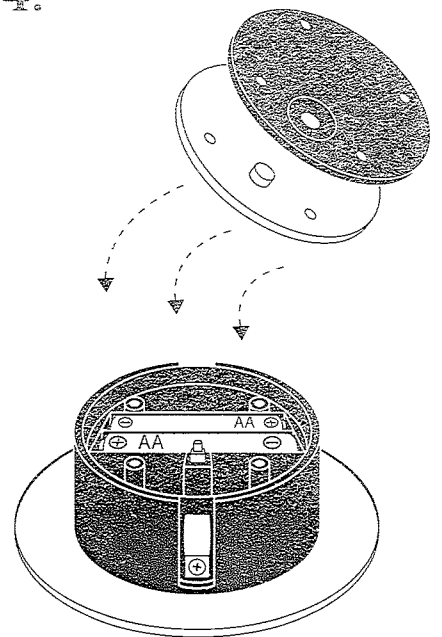




5.

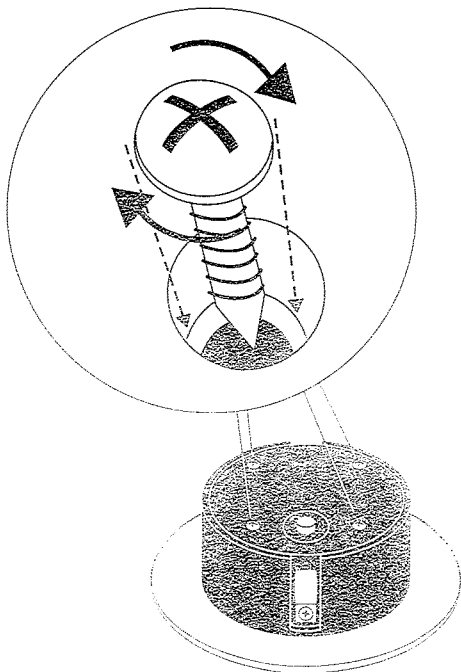



6.

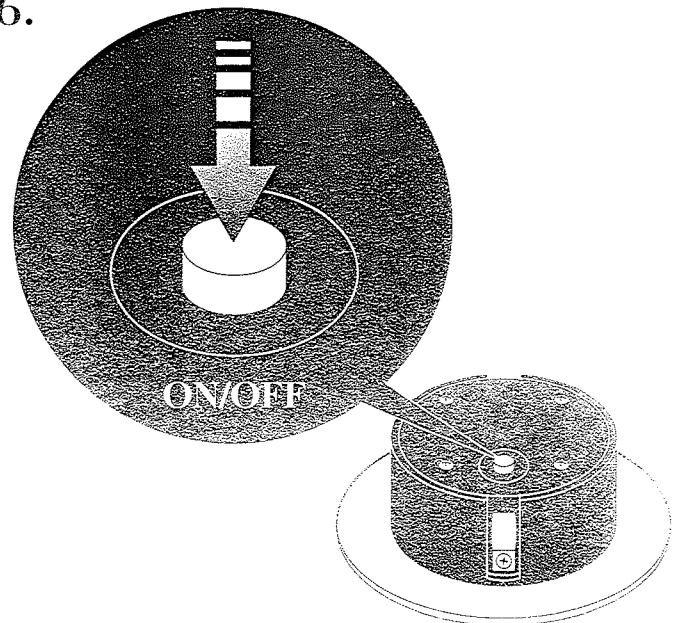

7.

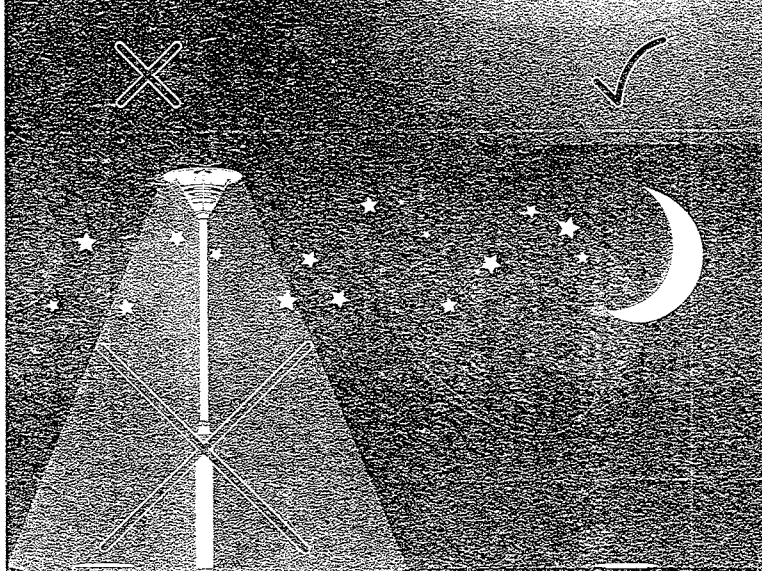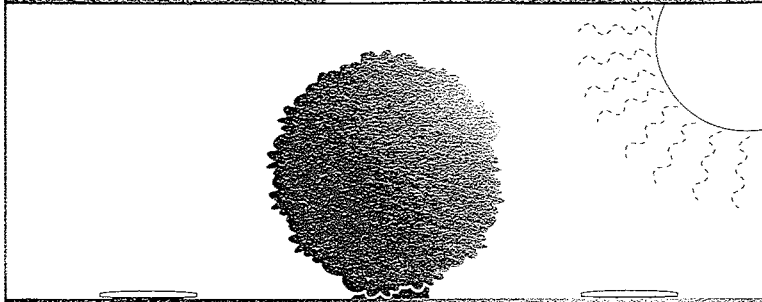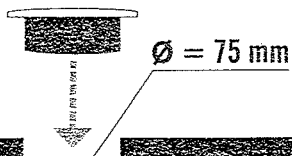


9.

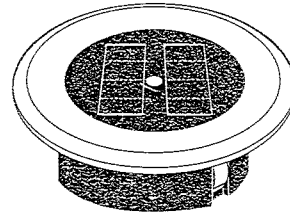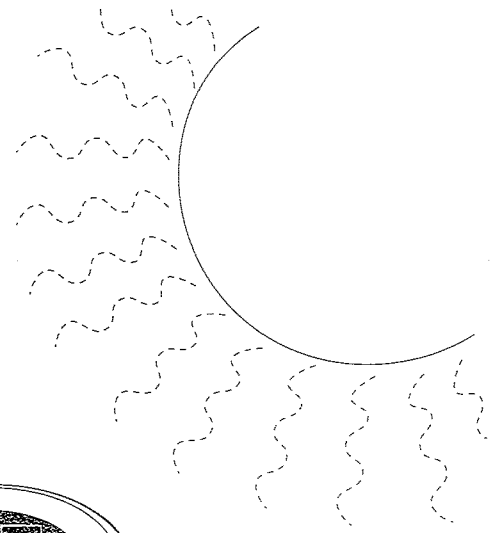

>8 h



10.

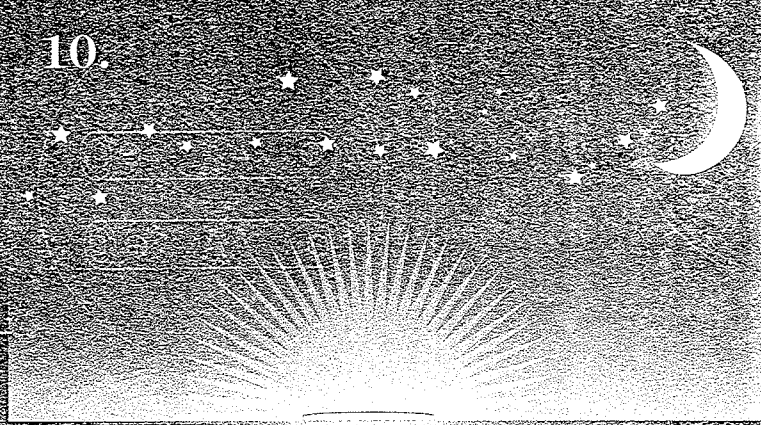

8.



11.

SE) OBS! Använd endast återuppladdningsbara batterier.

DE) Achtung! Laden Sie keine unaufladbaren Batterien wieder auf.

GB) Note: Do not recharge non-rechargeable battery.

FR) ATTENTION! Ne jamais recharger des piles non-rechargeables.

FI) Huom: Käytä valaisimessa vain ladattavia akkuja.

NO) OBS! Skal kun bruke oppladbare batterier.

DK) Bemærk: Anvend kun genopladelige batterier.

NL) Attention: laadt geen niet-oplaadbare batterijen opnieuw op!

PL) Uwaga! Nie ładuj ponownie jednorazowych baterii.

PT) Atenção! Não recarregue pilhas não recarregáveis.

RU) Внимание! Не перезаряжайте одноразовые батареи.

TL) Dikkat! Tek kullanımlık pilleri yeniden yüklemeyin.