

DISASSEMBLY INSTRUCTION MANUAL



RECYCLING & DISASSEMBLY
All the furniture in this instruction manual is ecolabelled and designed to be long-lasting products made to endure years to come. The furniture is 100% recyclable and parts can be fully separated and recycled. All parts can be delivered to a suitable recycling facility.

AAC 08	5
AAC 12	6
AAC 14	7
AAC 16	8
AAC 18	9
AAC 20	10
AAC 22	11
AAC 24	12
AAC 26	13
AAC 50	14
AAC 52	15
AAS 32	16
AAS 38	17
AMANTA	53
ANNEX TABLE ALUMINIUM LEGS 4 LEGS	55
ANNEX TABLE ALUMINIUM LEGS 6 LEGS	56
ANNEX TABLE WOOD LEGS.....	54
ARBOUR ECO	3
BACKFLIP CHAIR.....	68
BOA TABLE.....	48
CHISEL 20 & 25 TABLE.....	70
CHISEL 29 TABLE	71
CHISEL 630 TABLE	72
CHISEL LOUNGE CHAIR.....	4
CHISEL SEATING COLLECTION	69
COLOUR RACK C-SHAPE.....	50
COLOUR RACK S-SHAPE.....	49

CPH 10 TABLE	35
CPH 25 TABLE.....	36
CPH 30 EXTENDABLE TABLE	38
CPH 30 TABLE.....	37
CPH 90 TABLE.....	39
CPH 190 TABLE	40
CPH DEUX 210 TABLE.....	41
CPH DEUX 215 BENCH.....	42
CPH DEUX 220 TABLE	43
DEVILLE TABLE	65
LAYOUT ARMCHAIR 211 212 213 214	57
LAYOUT ARMCHAIR 221 222 223 224.....	58
LAYOUT ARMCHAIR 231 232 233 234.....	59
LAYOUT ARMCHAIR 241 242 243 244.....	60
LAYOUT ARMCHAIR 251 252 253 254.....	61
LAYOUT ARMCHAIR 261 262 263 264	62
LAYOUT FULL UPHOLSTERY	64
LAYOUT SEAT UPHOLSTERY	63
LOOP STAND ROUND TABLE.....	47
LOOP STAND TABLE	46
PACK CHAIR	66
PACK CHAIR SEAT COVER.....	67
PASTIS TABLE	44
RESULT CHAIR.....	31
RESULT CHAIR WITH UPHOLSTERY.....	32
REVOLT CHAIR	33
SOFT EDGE 40 CHAIR	18

SOFT EDGE 40 CHAIR WITH UPHOLSTERY	19
SOFT EDGE 50 SLED	20
SOFT EDGE 50 SLED WITH UPHOLSTERY	21
SOFT EDGE 60 CHAIR.....	22
SOFT EDGE 60 CHAIR WITH UPHOLSTERY	23
SOFT EDGE 70 STOOL.....	24
SOFT EDGE 72 STOOL	25
SOFT EDGE 80 BAR STOOL	26
SOFT EDGE 82 BAR STOOL.....	27
SOFT EDGE 90 BAR STOOL	28
SOFT EDGE 90 BAR STOOL WITH UPHOLSTERY.....	29
SOFT EDGE 100 LOUNGE	30
TABURETE 8 BAR STOOL.....	34
TRIANGLE LEG TABLE	45
X-LINE CHAIR.....	51
X-LINE CHAIR TROLLEY	52



ARBOUR ECO

 
 
 
 
STEP 1
Remove the cushions

STEP 2
Turn the sofa upside down and separate the base from the frame by unscrewing all the screws

STEP 3
Remove the webbing base by lifting it up

STEP 4
Unscrew all the screws to remove the steel profile and the wood profile from the frame

DISASSEMBLY

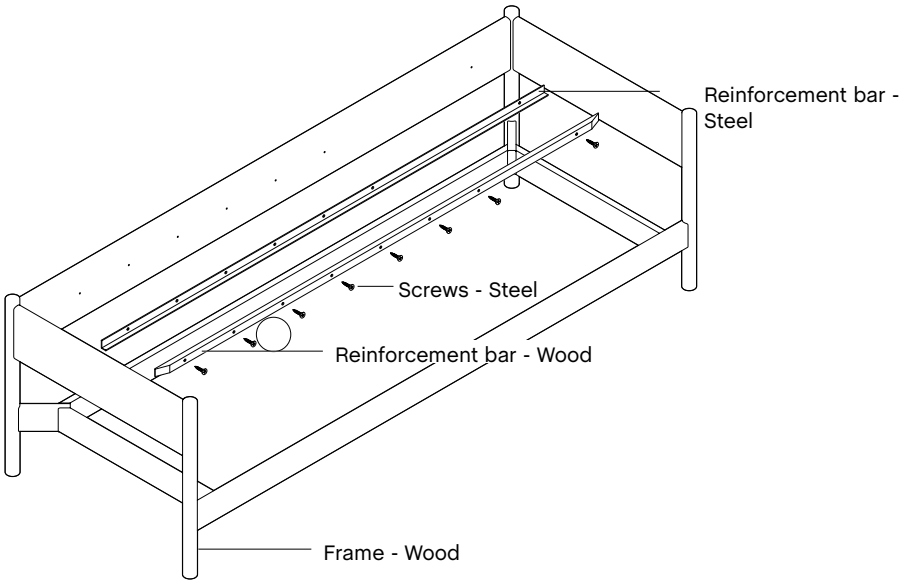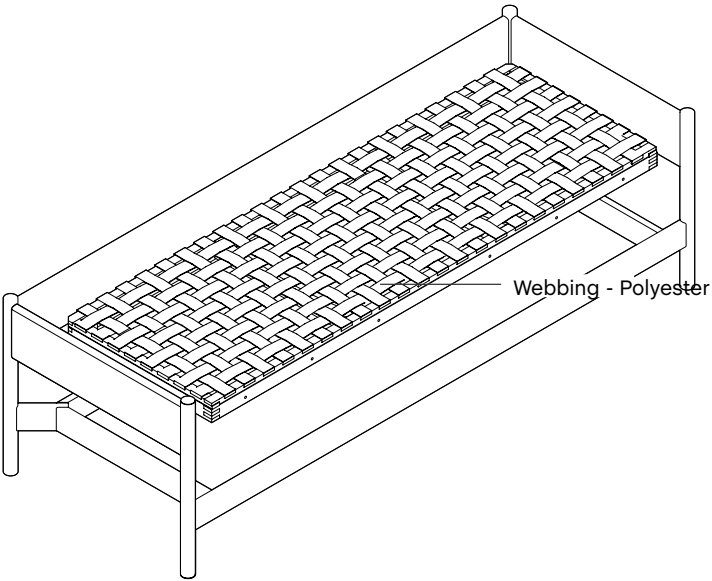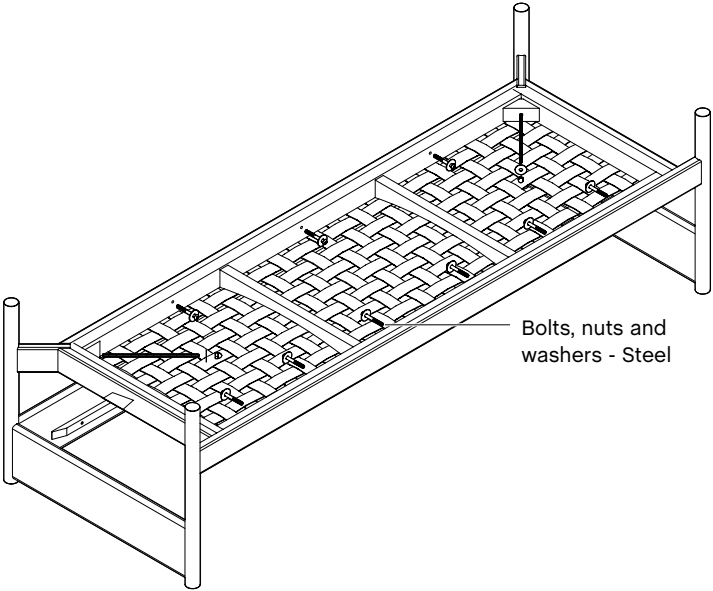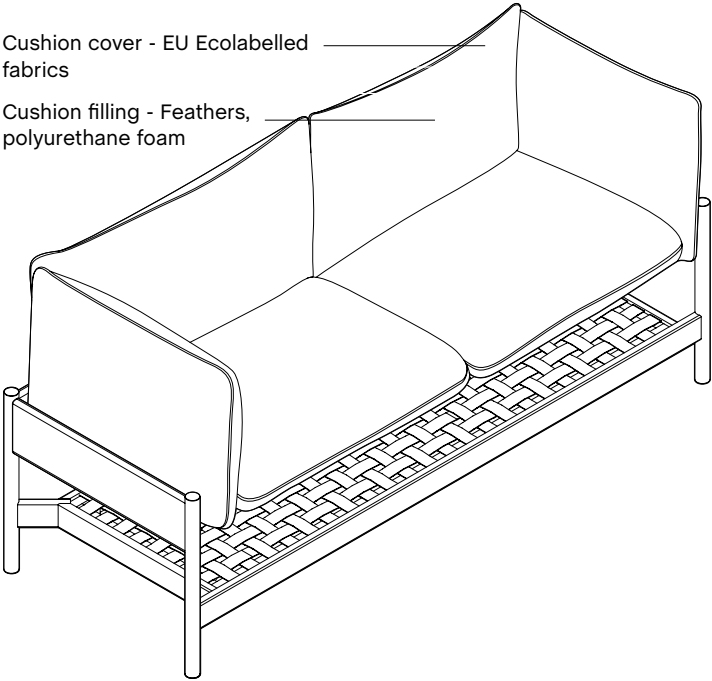




CHISEL LOUNGE CHAIR

STEP 1
Remove fabric and foam from the frame

 DISASSEMBLY

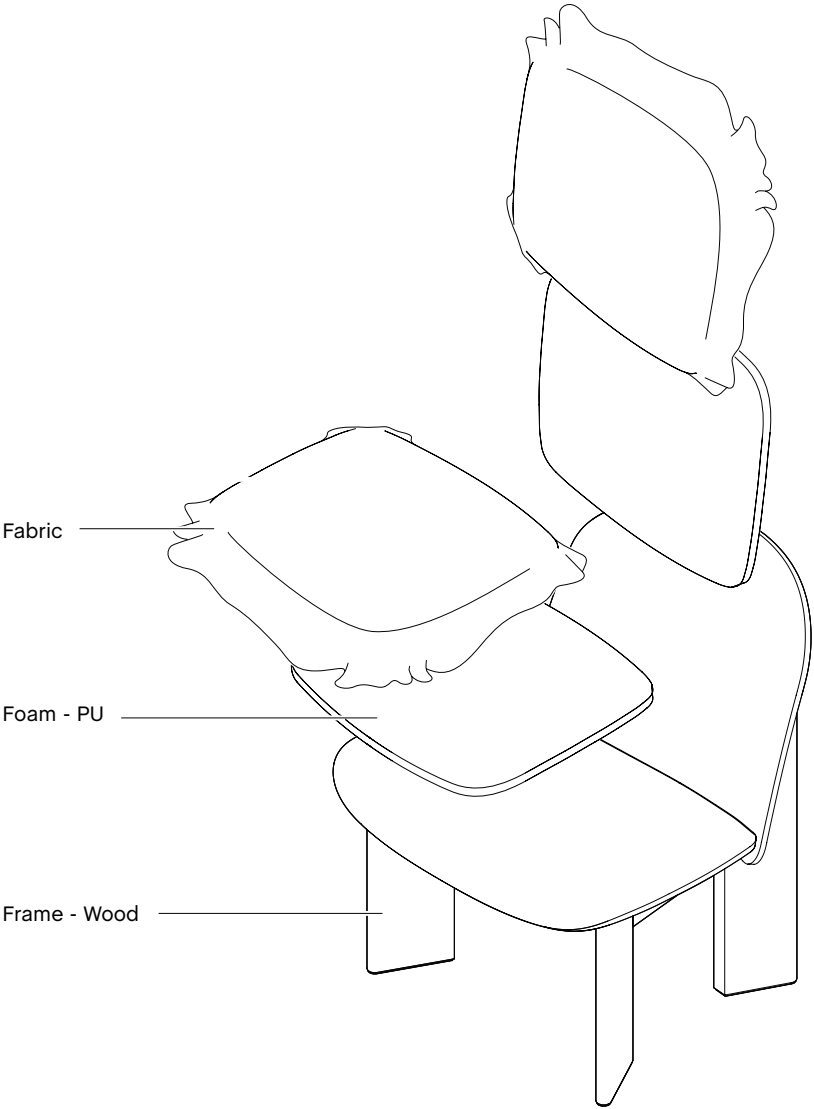



AAC 08

 
STEP 1
Turn the chair upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the gliders from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

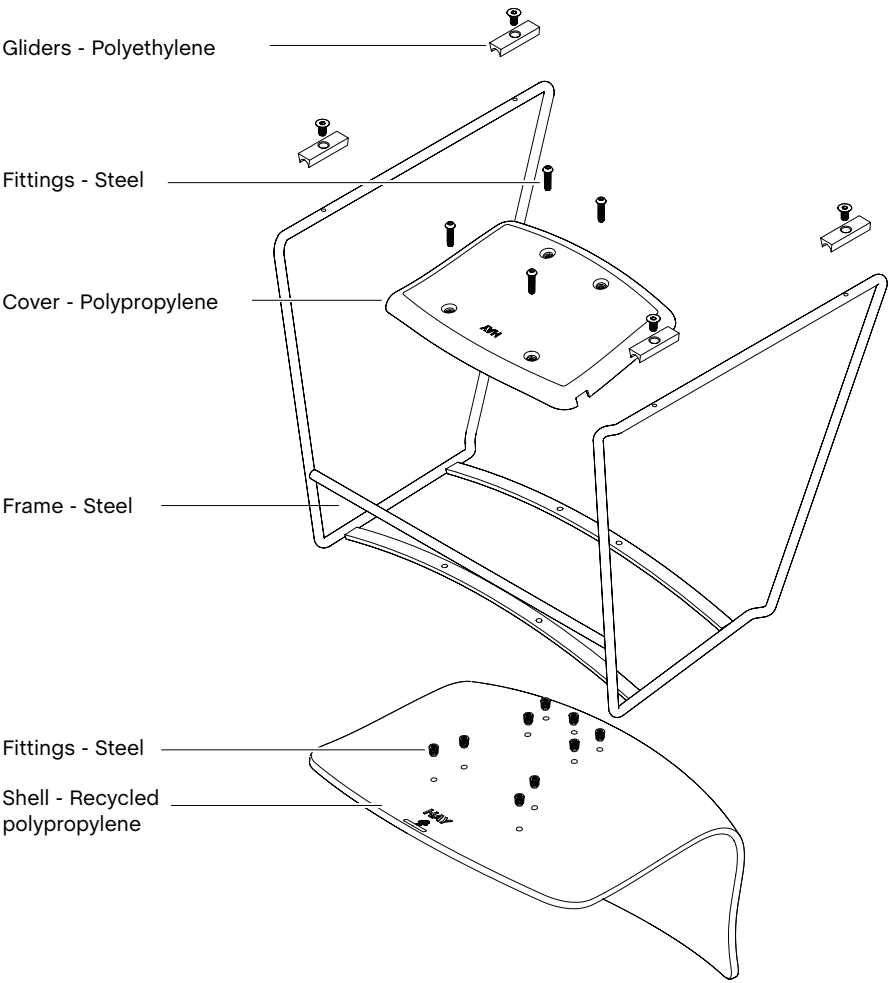



AAC 12

 
STEP 1
Turn the chair upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the gliders from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

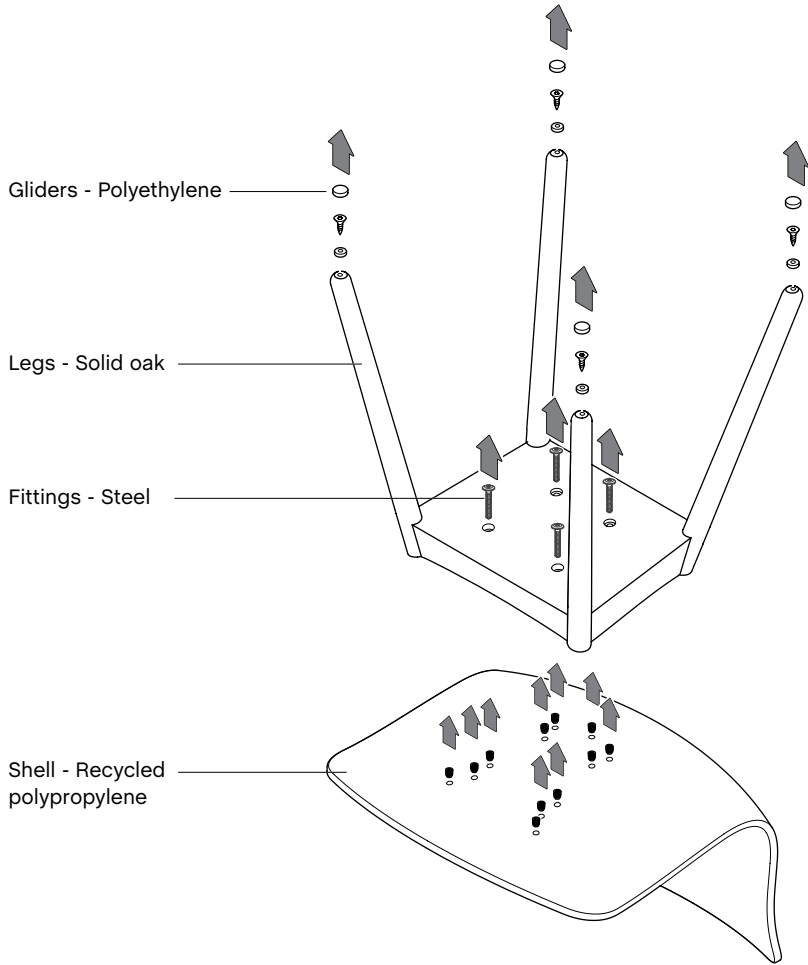



AAC 14

 
STEP 1
Turn the chair upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the wheels from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

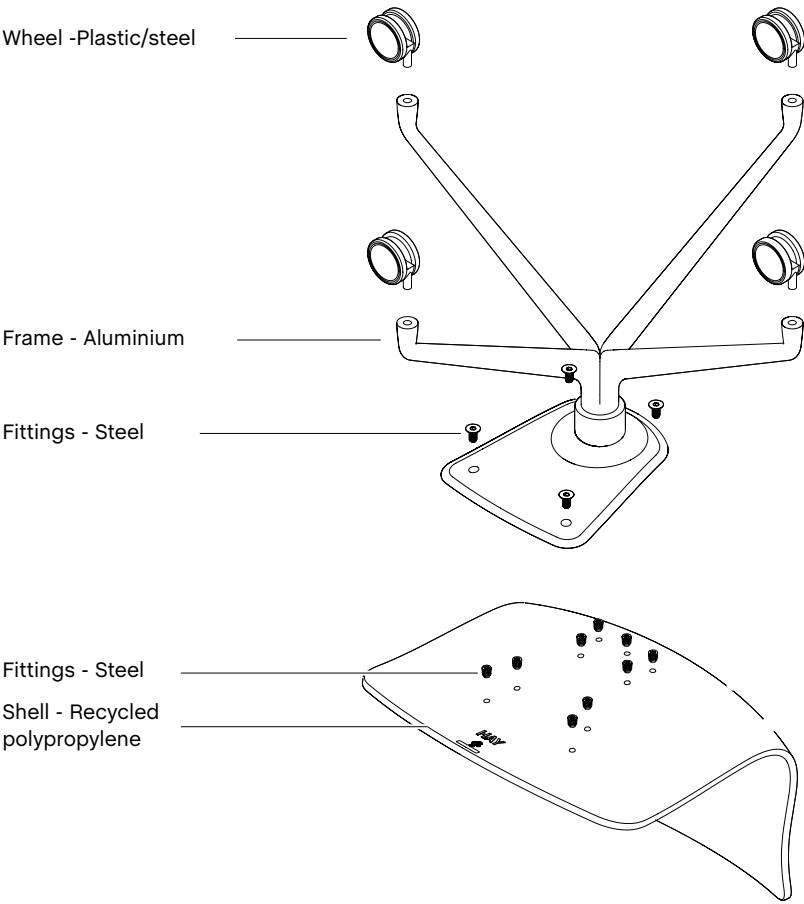



AAC 16

 
STEP 1
Turn the chair upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the gliders from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

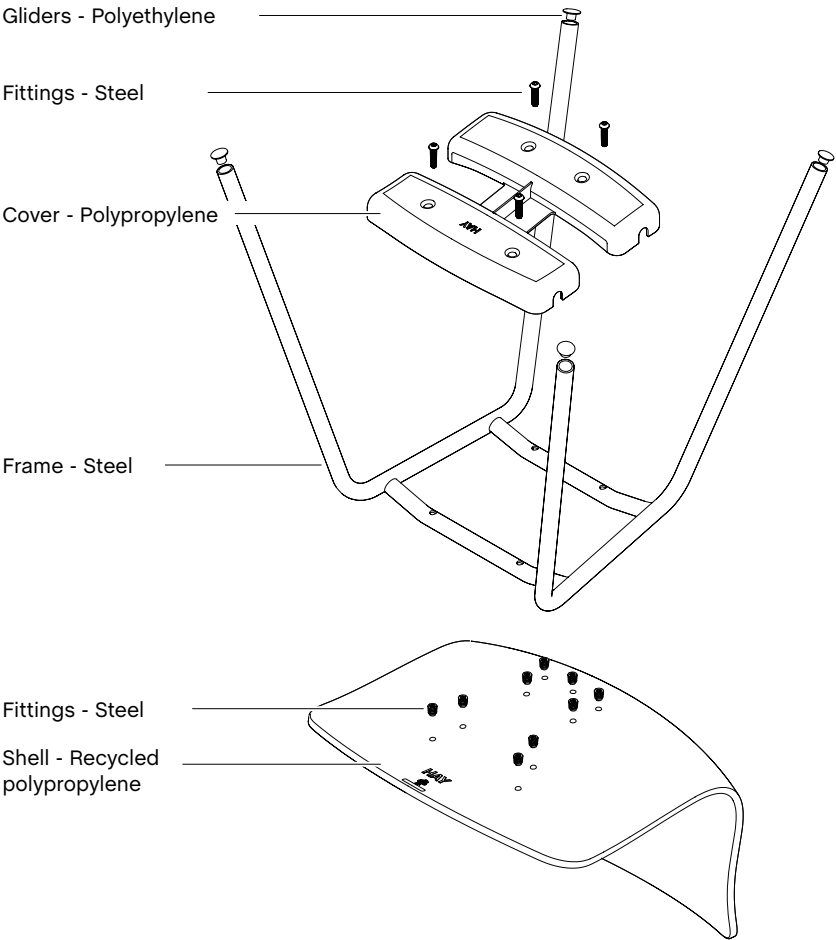



AAC 18

 
STEP 1
Turn the chair upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the gliders from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

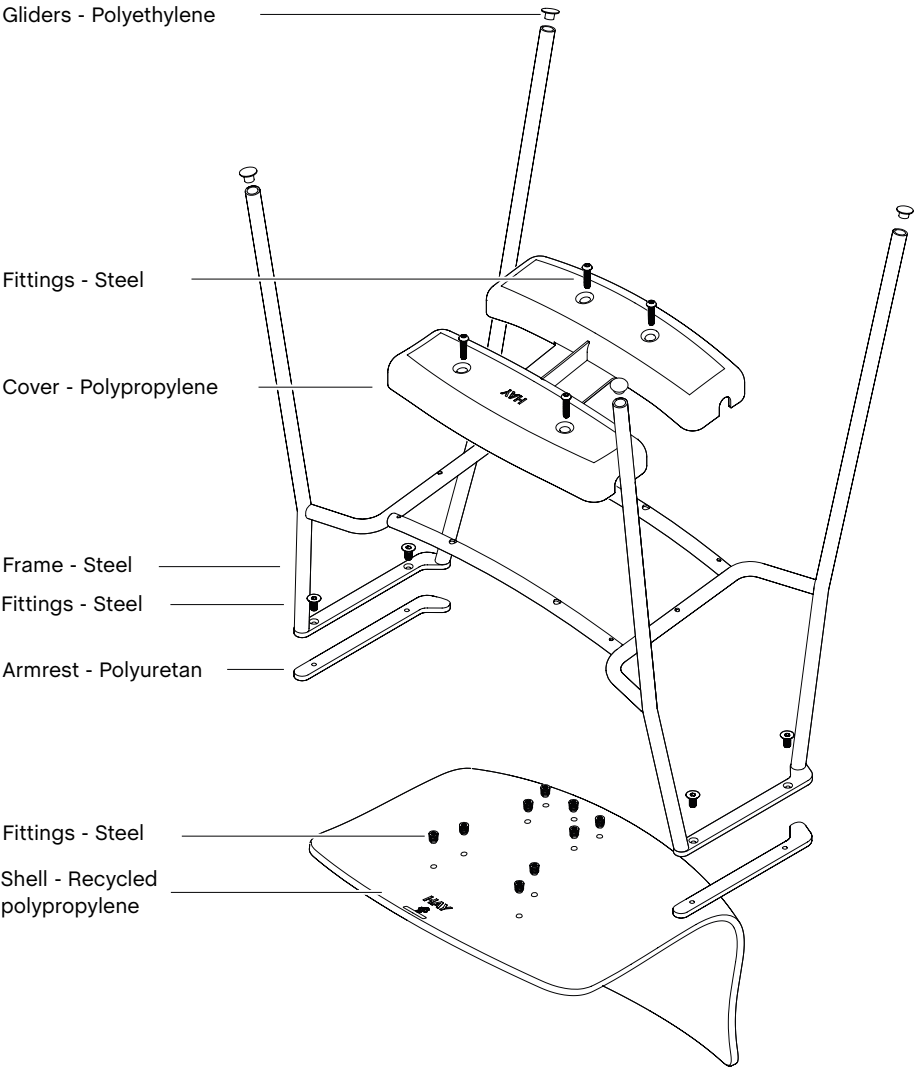



AAC 20

 
STEP 1
Turn the chair upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the gliders from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

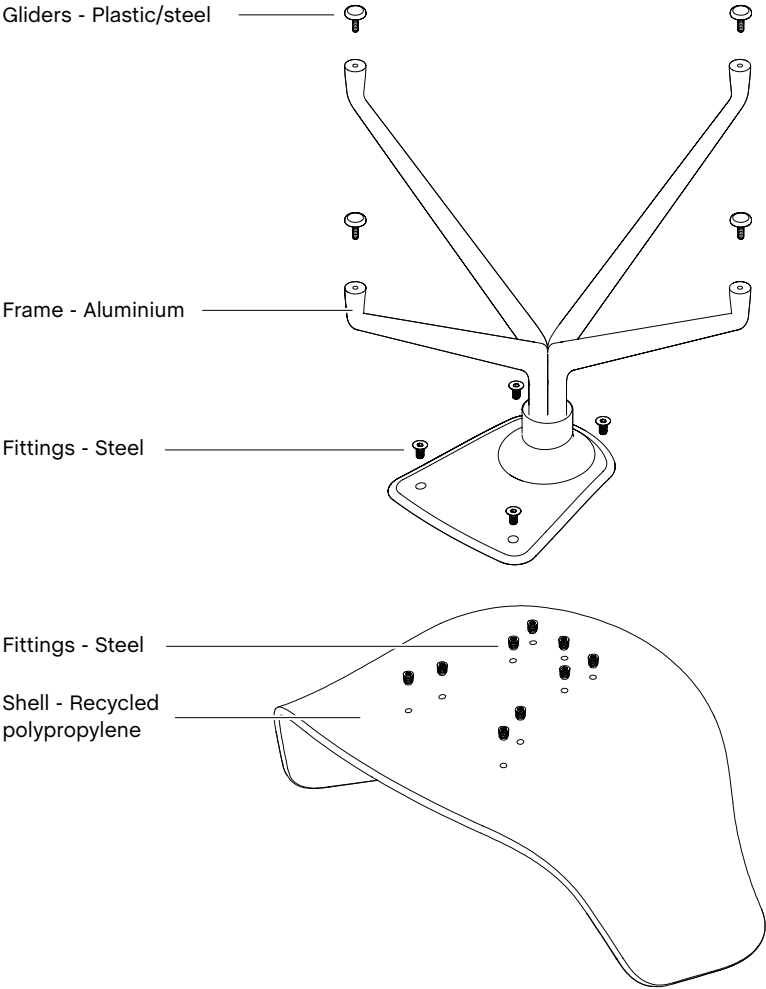



AAC 22

 
STEP 1
Turn the chair upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the gliders from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

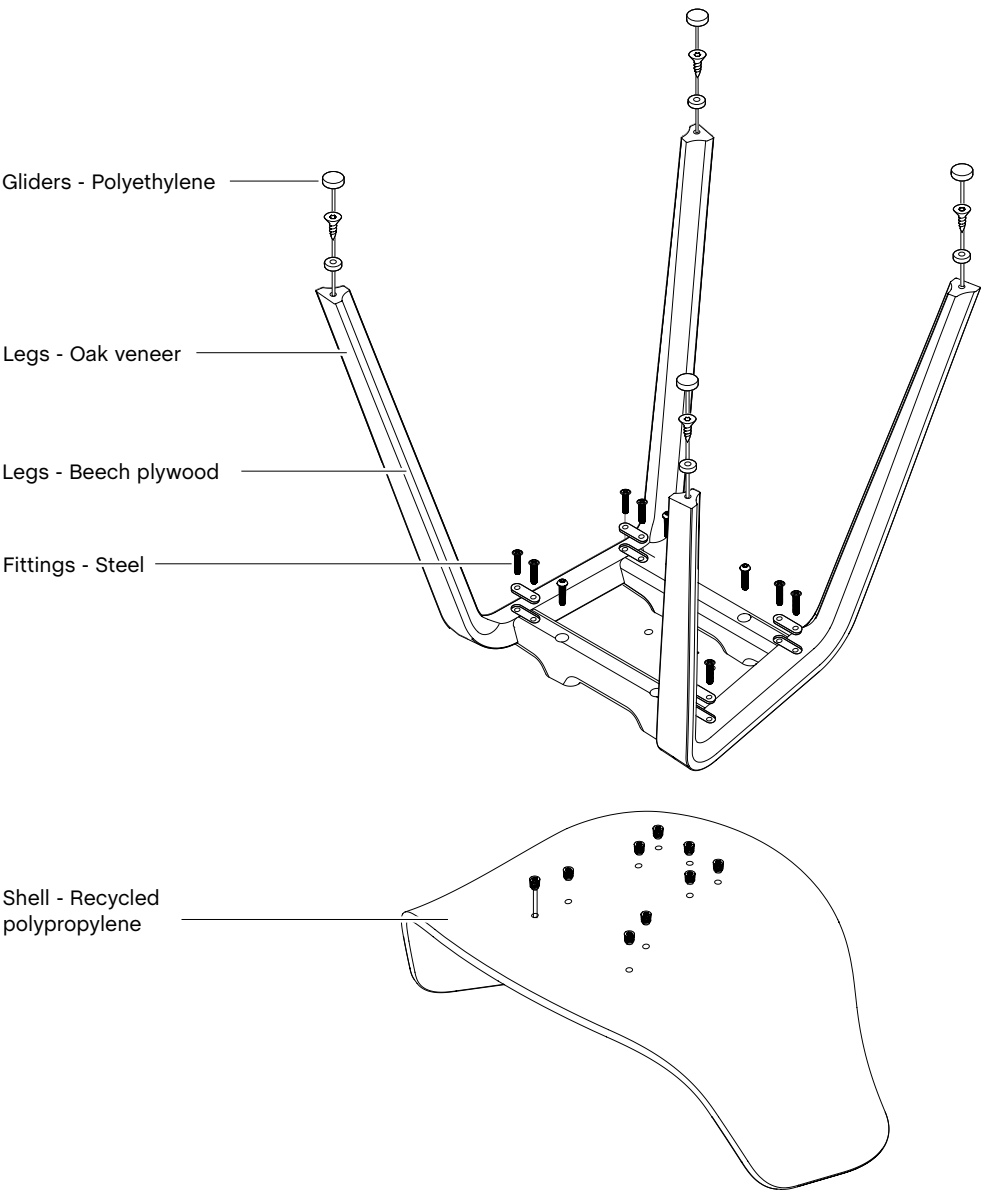



AAC 24

 
STEP 1
Turn the chair upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the wheels from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

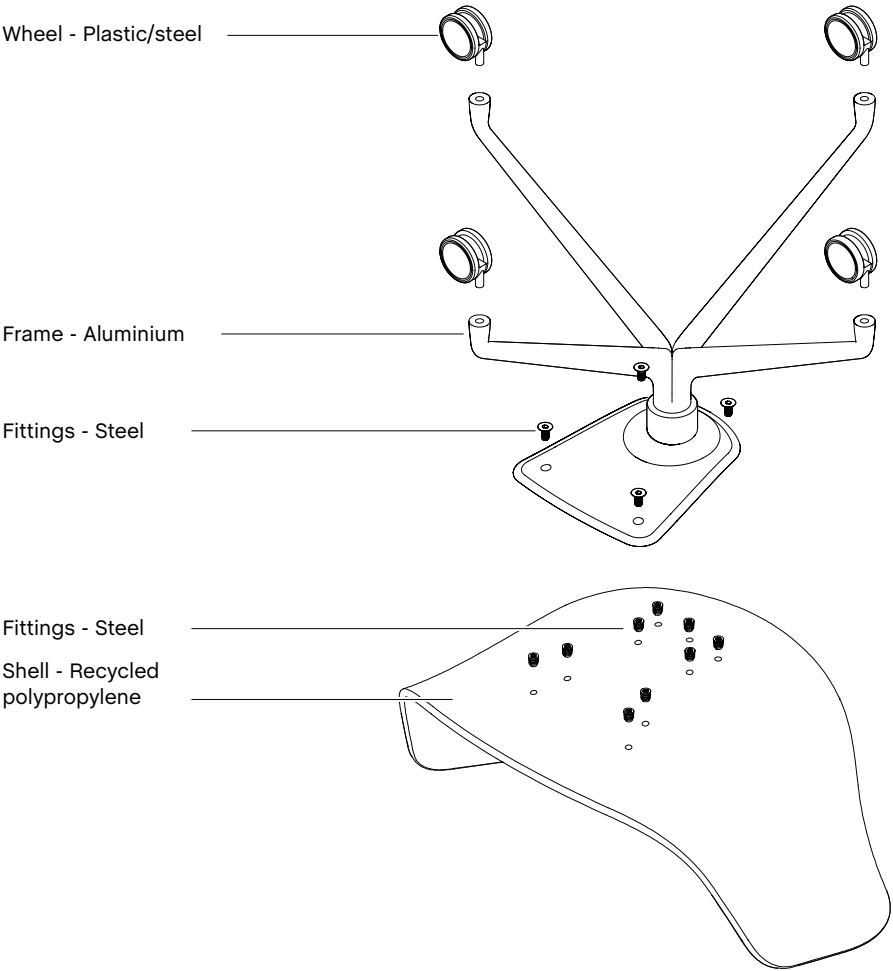



AAC 26

 
STEP 1
Turn the chair upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the gliders from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

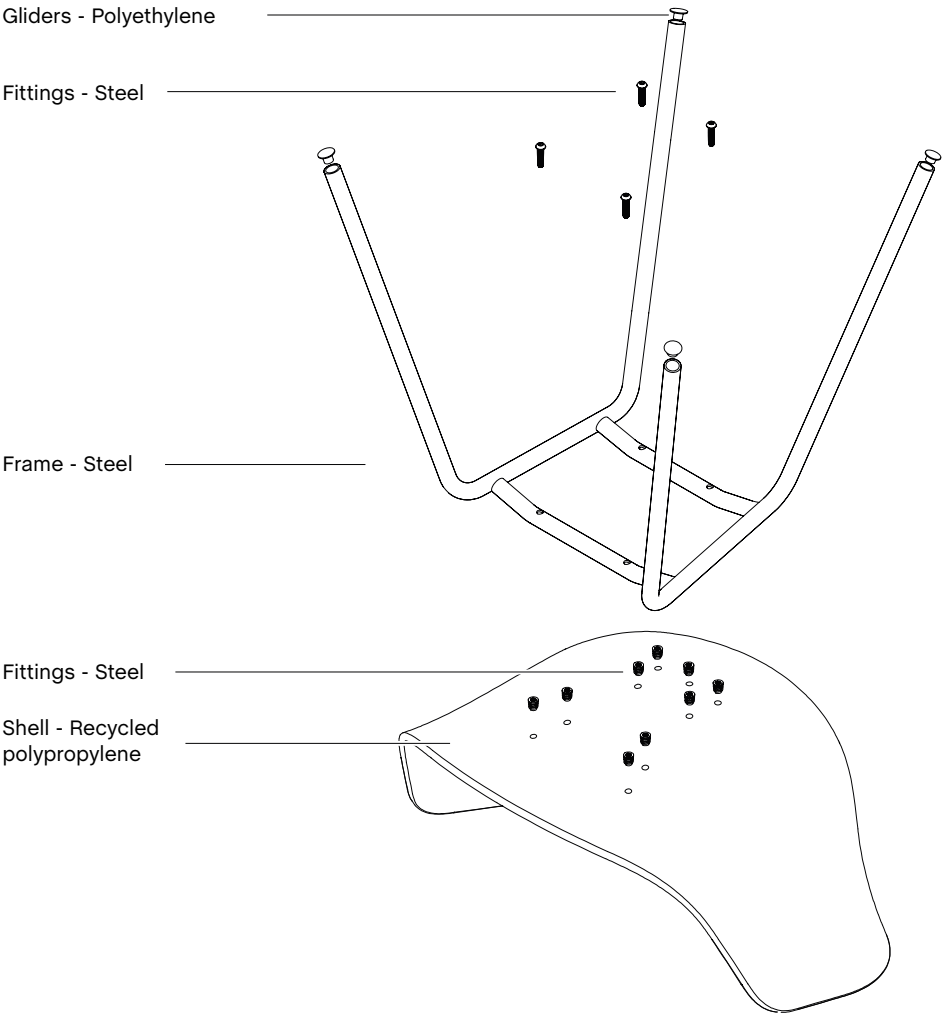



AAC 50

 
STEP 1
Turn the chair upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the wheels from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

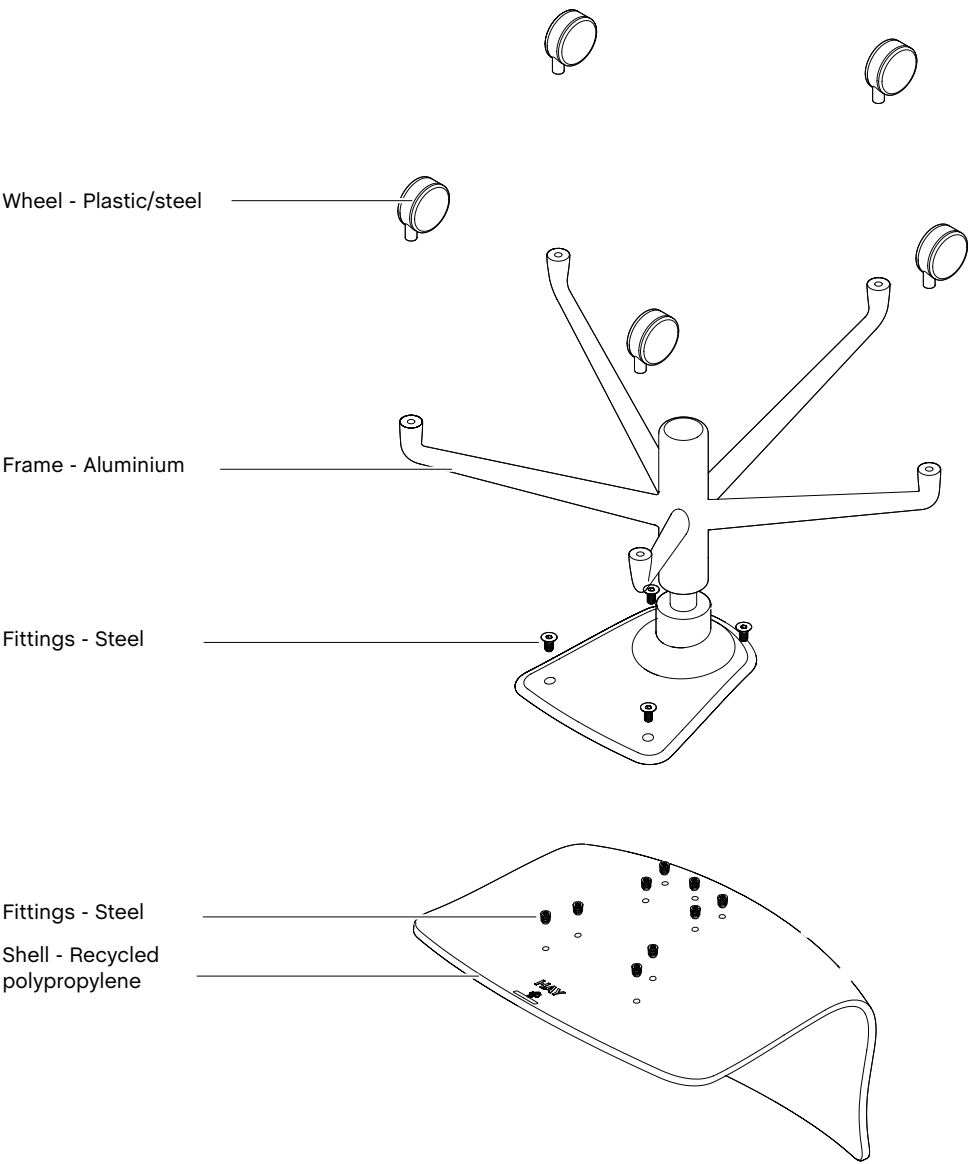



AAC 52

 
STEP 1
Turn the chair upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the wheels from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

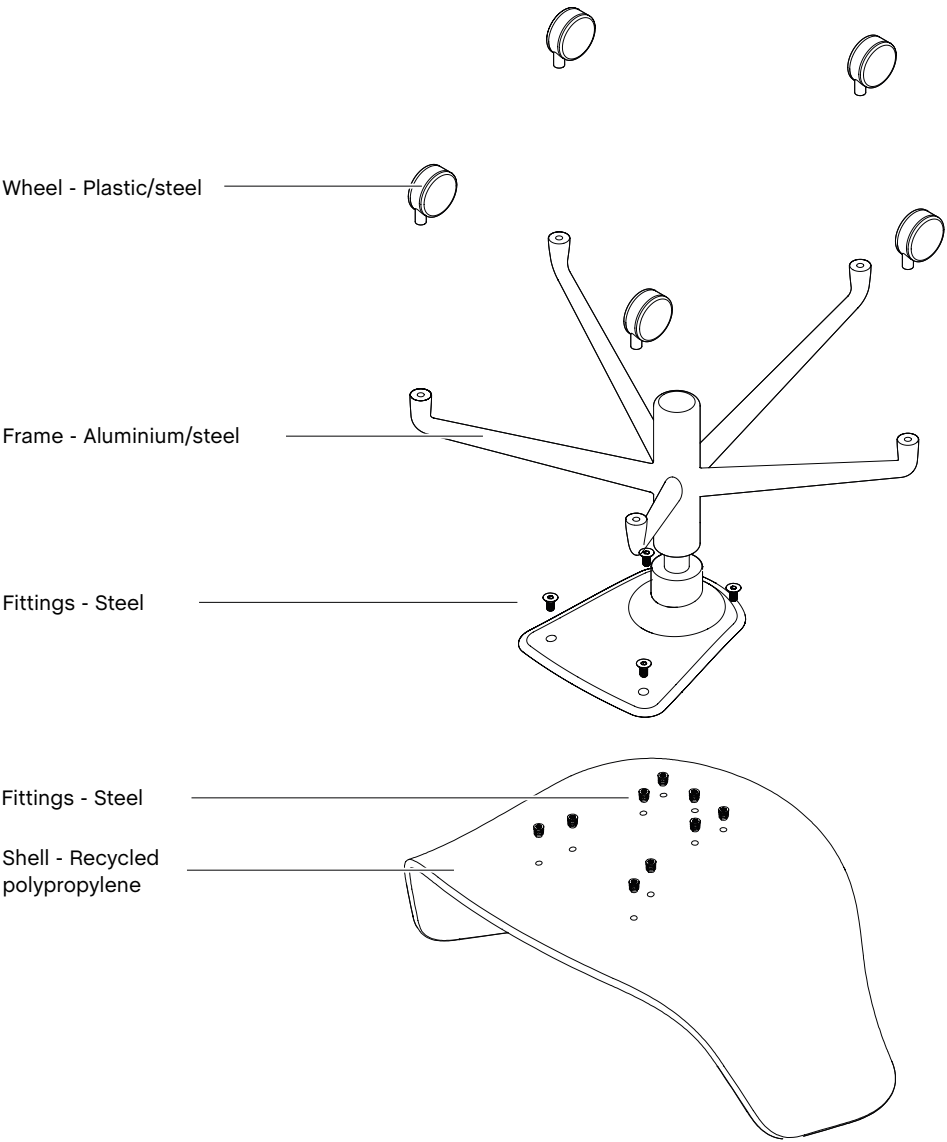



AAS 32

 
STEP 1
Turn the barstool upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the gliders and the footrest from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

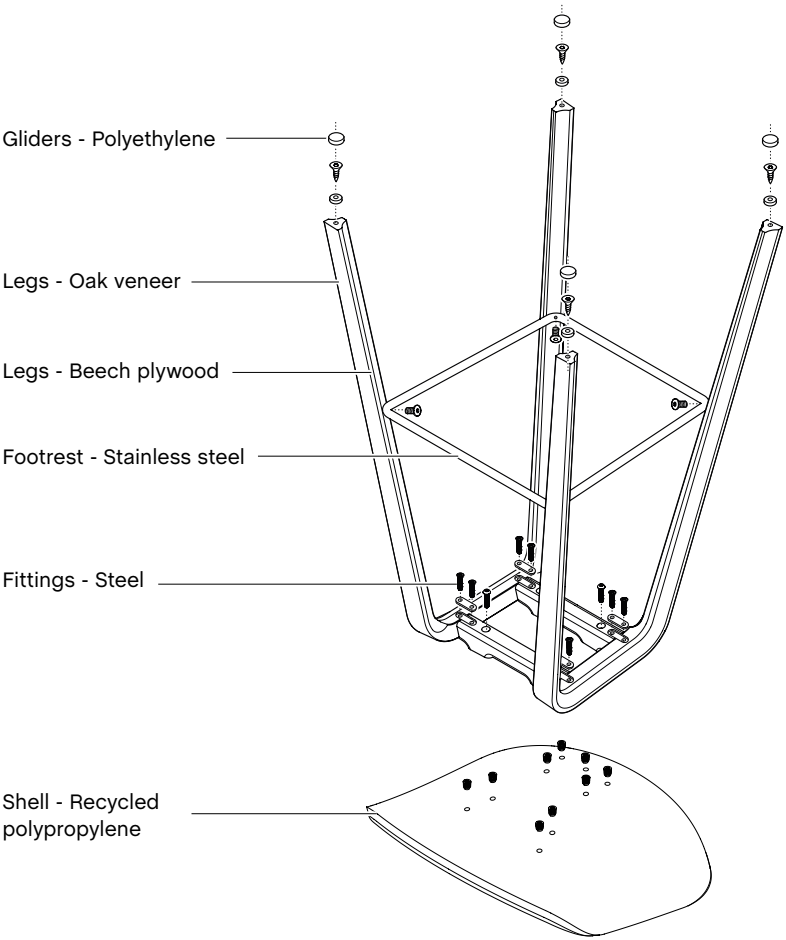



AAS 38

 
STEP 1
Turn the barstool upside down

STEP 2
Remove all the bushings from the bottom of the seat

STEP 3
Remove the gliders and the footrest from the legs

STEP 4
Separate the base from the seat

DISASSEMBLY

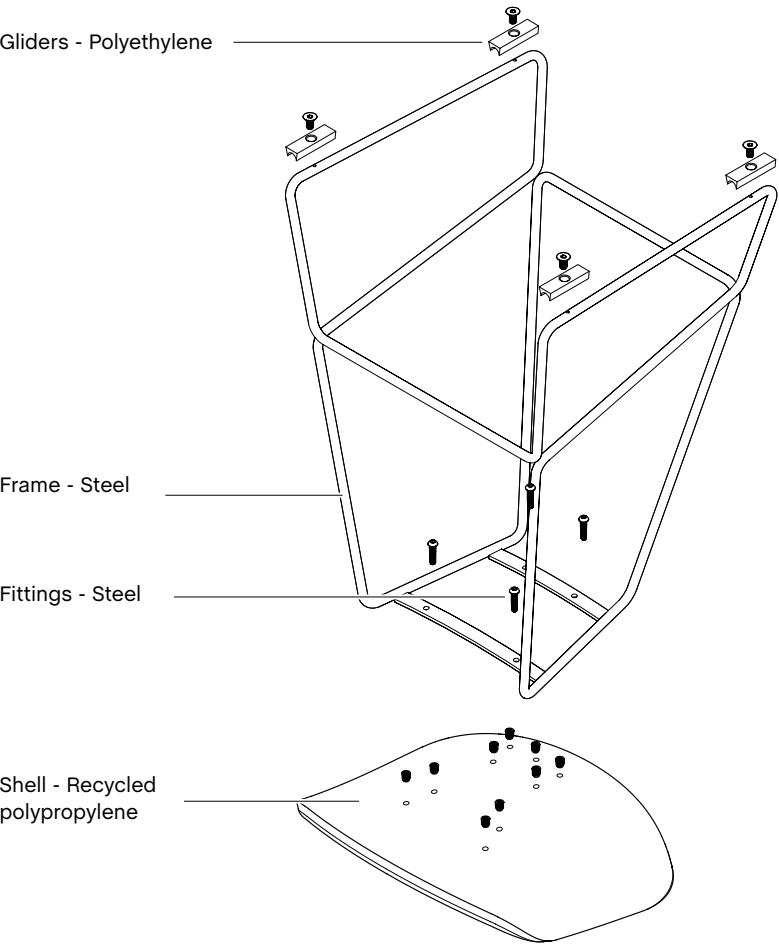




SOFT EDGE 40 CHAIR

STEP 1
Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2
Pull out the gliders from the legs

STEP 3
Turn the chair upside down and drill out the rivets holding the cover

 DISASSEMBLY

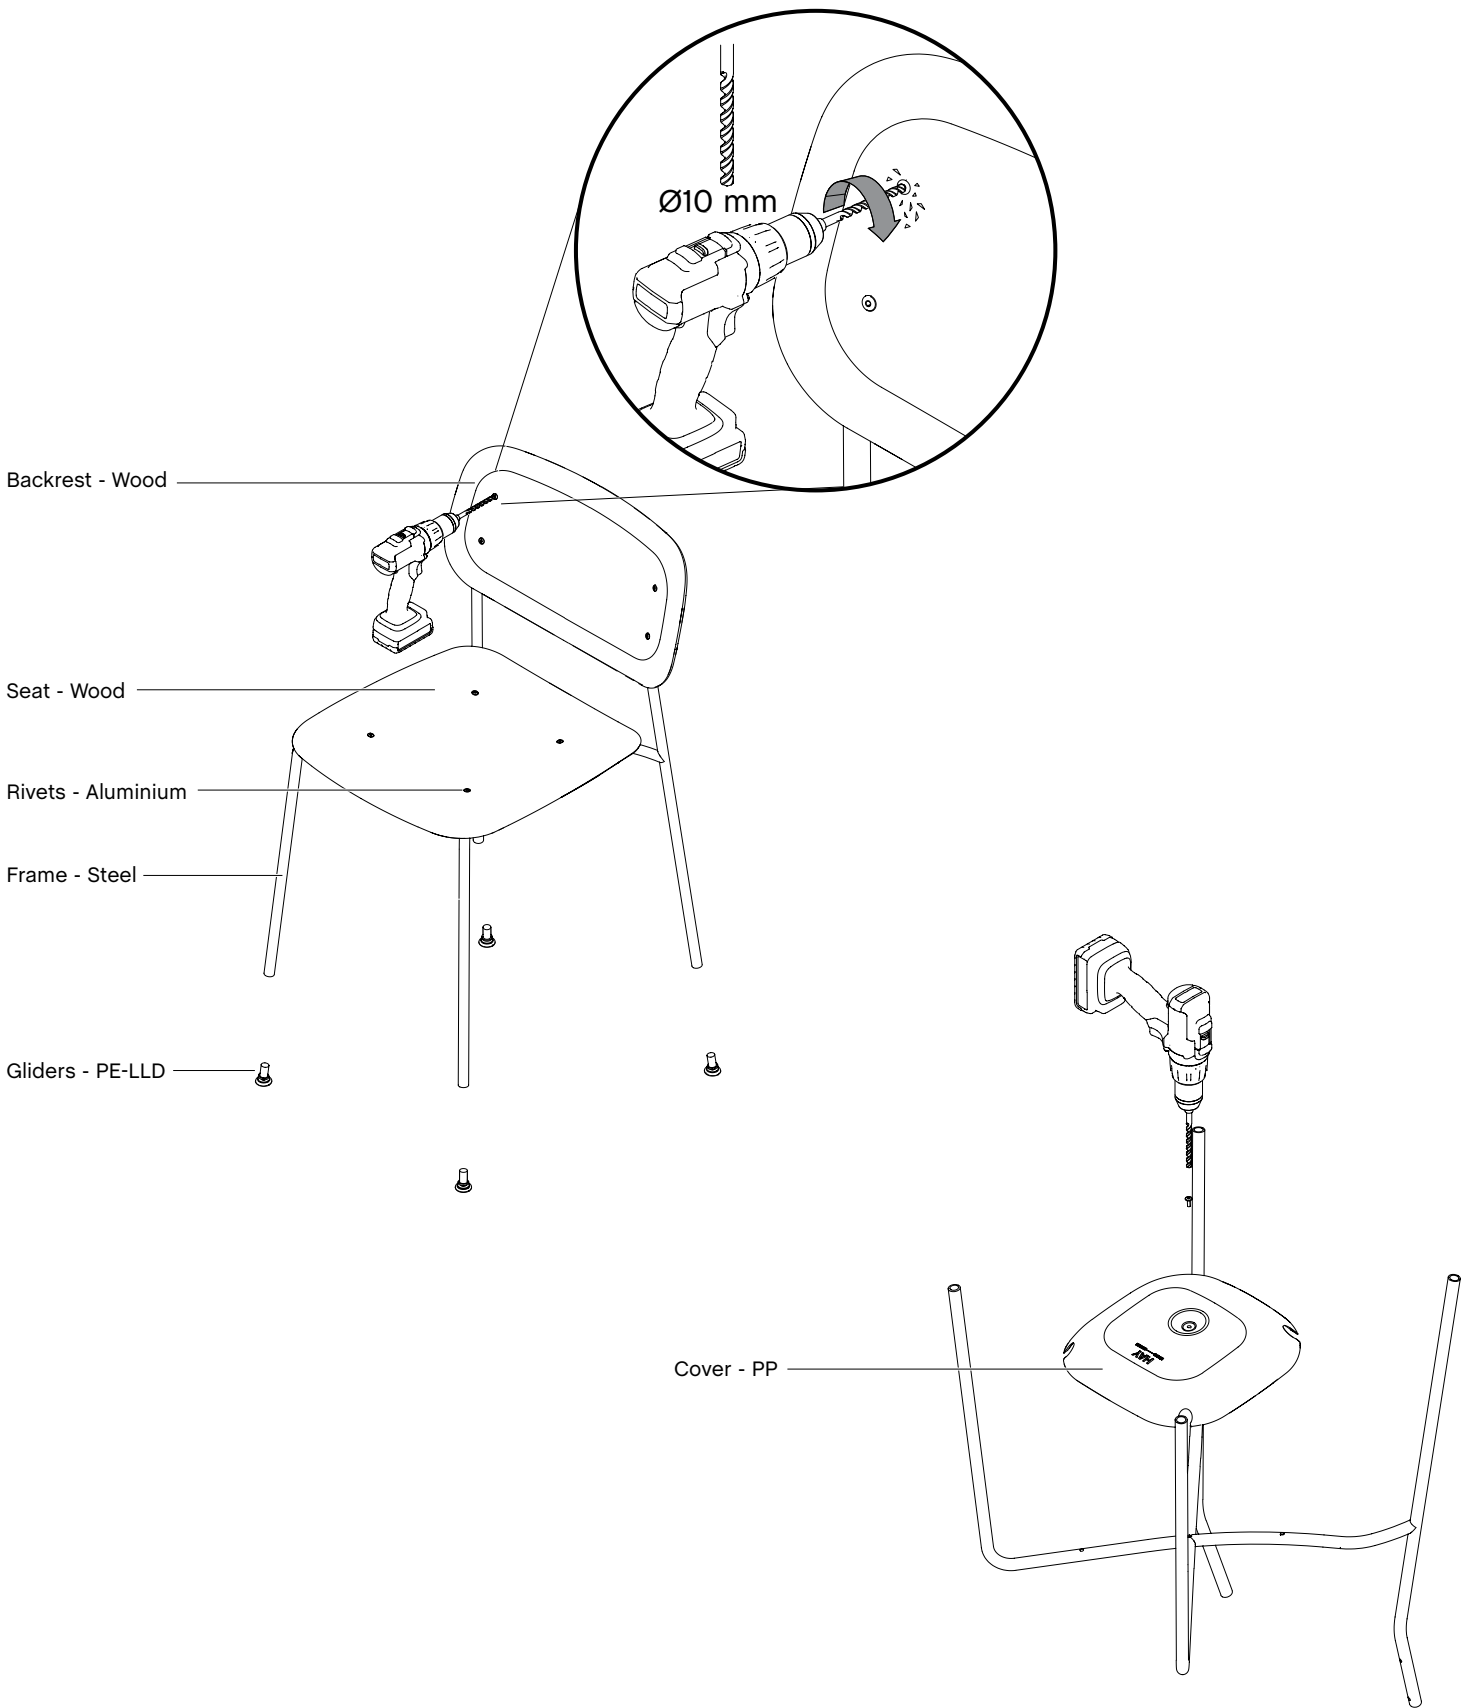



SOFT EDGE 40 CHAIR WITH UPHOLSTERY

 
STEP 1
Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2
Pull out the gliders from the legs

STEP 3
Turn the chair upside down and drill out the rivets holding the cover

STEP 4
Remove the upholstery and the foam from the wooden shell

DISASSEMBLY

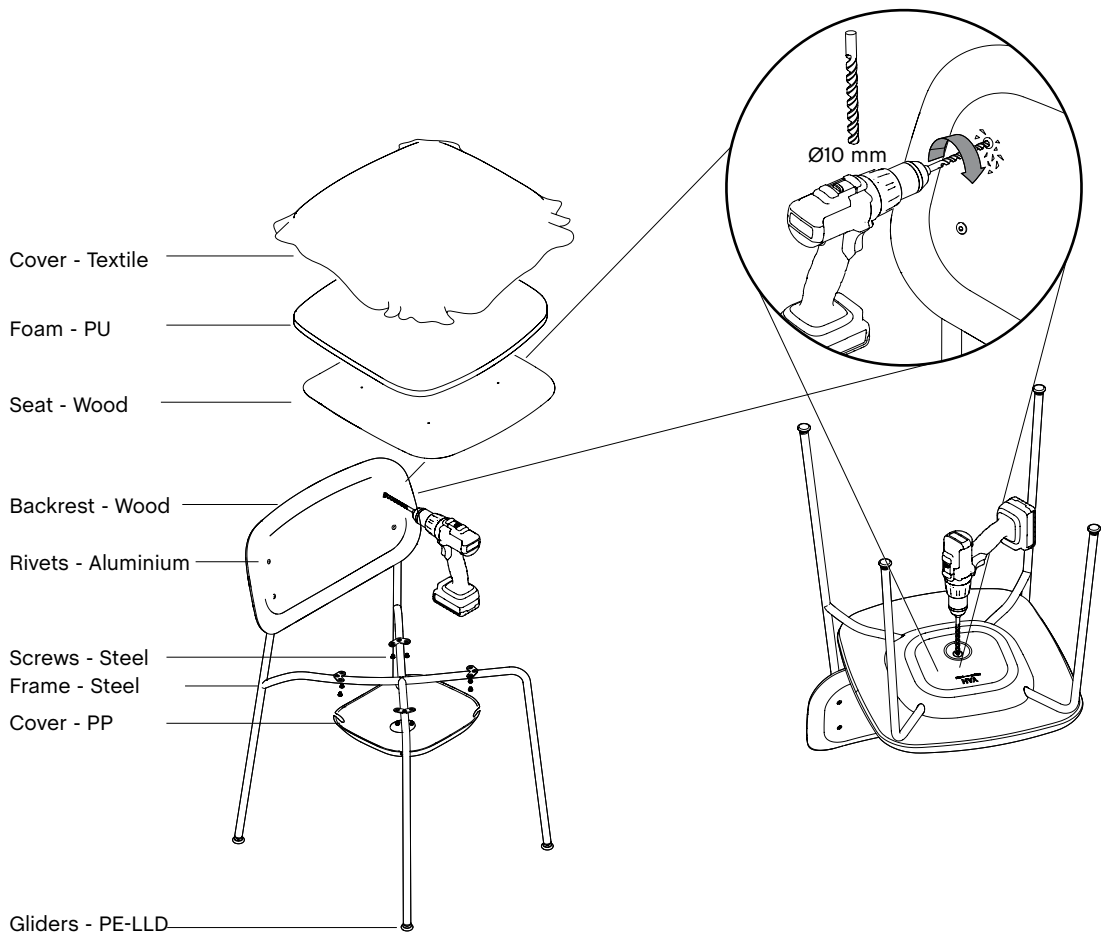




SOFT EDGE 50 SLED

STEP 1
Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2
Unscrew the gliders from the sled legs

STEP 3
Turn the chair upside down and drill out the rivets holding the cover

 DISASSEMBLY

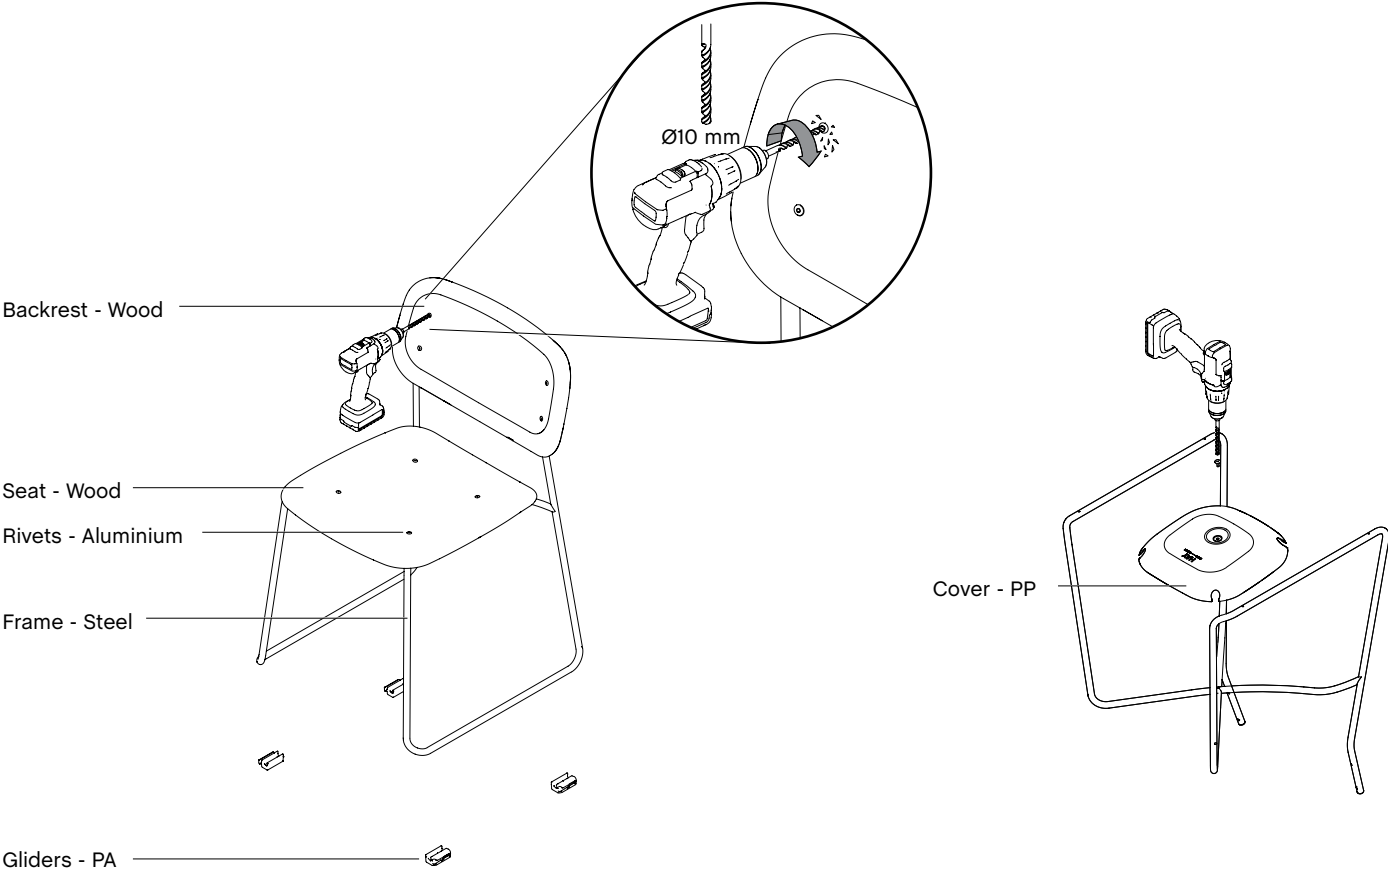



SOFT EDGE 50 SLED WITH UPHOLSTERY

 
STEP 1
Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2
Unscrew the gliders from the sled legs

STEP 3
Turn the chair upside down and drill out the rivets holding the cover

STEP 4
Remove the upholstery and the foam from the wooden shell

DISASSEMBLY

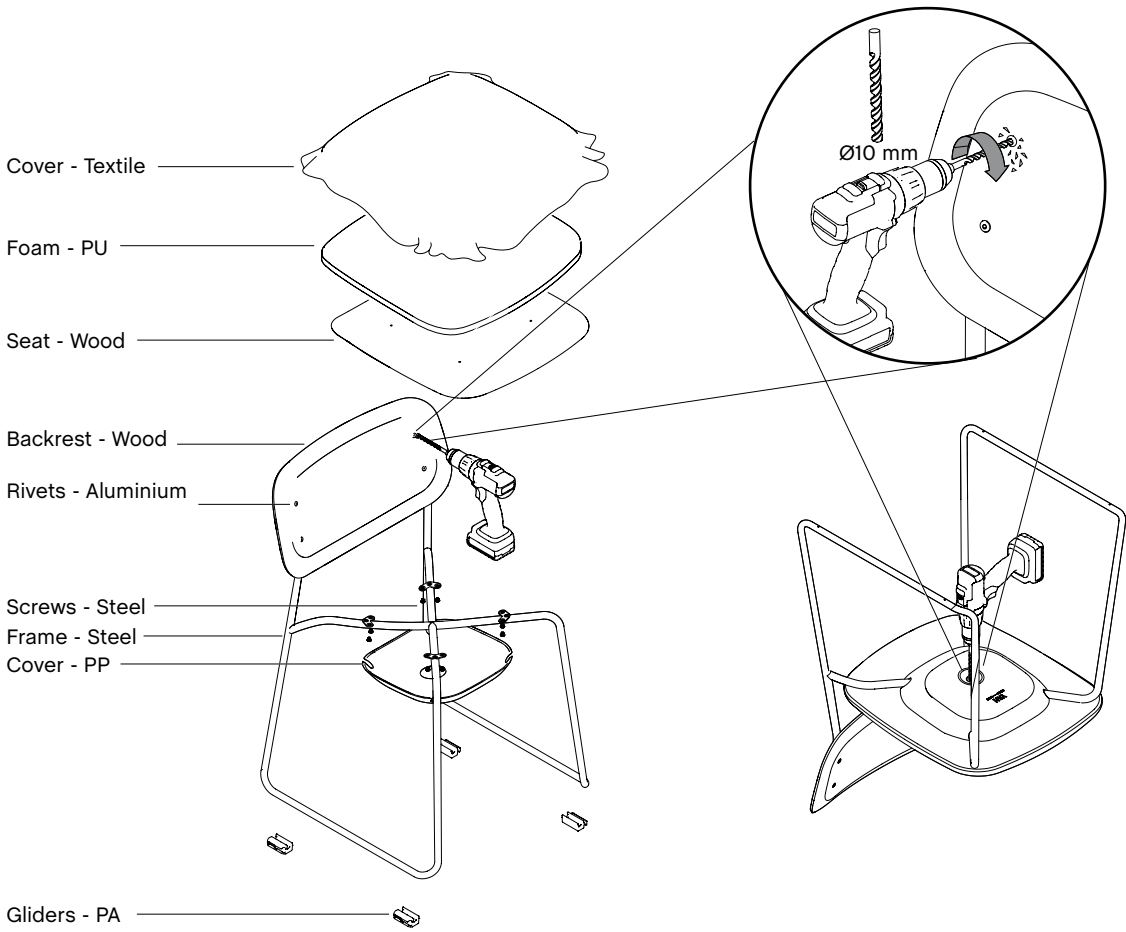




SOFT EDGE 60 CHAIR

STEP 1
Turn the chair upside down

STEP 2
Remove the cap from the gliders

STEP 3
Unscrew the screw and remove the gliders' receivers

 DISASSEMBLY

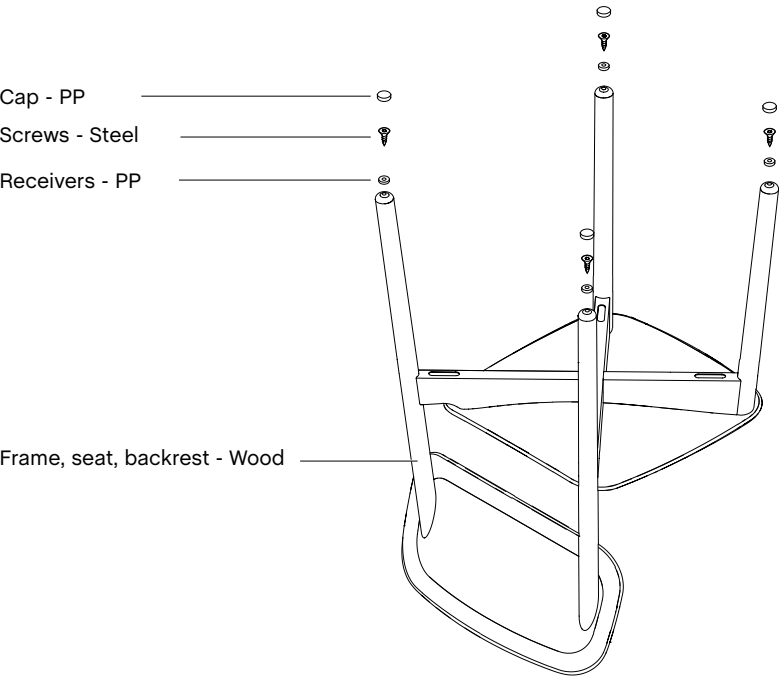



SOFT EDGE 60 CHAIR WITH UPHOLSTERY

 
 
STEP 1
Turn the chair upside down

STEP 2
Remove the cap from the gliders

STEP 3
Unscrew the screw and remove the gliders' receivers

STEP 4
Remove the upholstery and the foam from the wooden shell

DISASSEMBLY

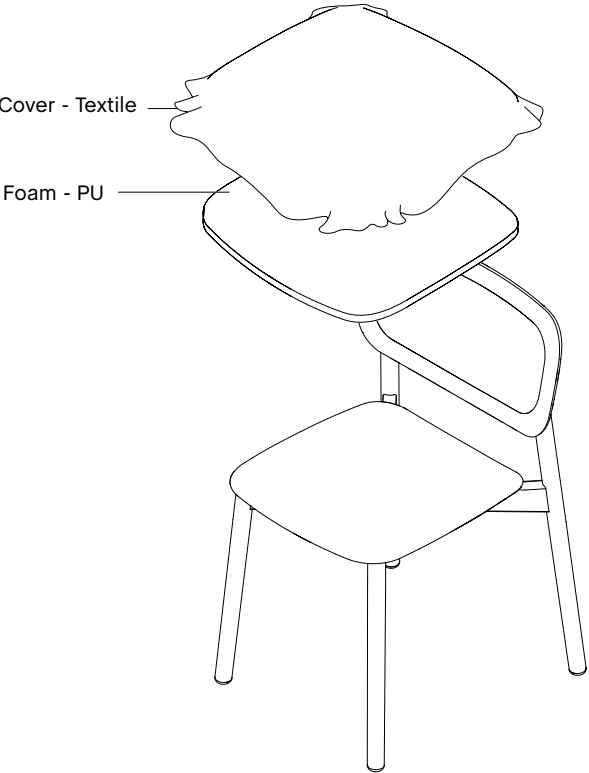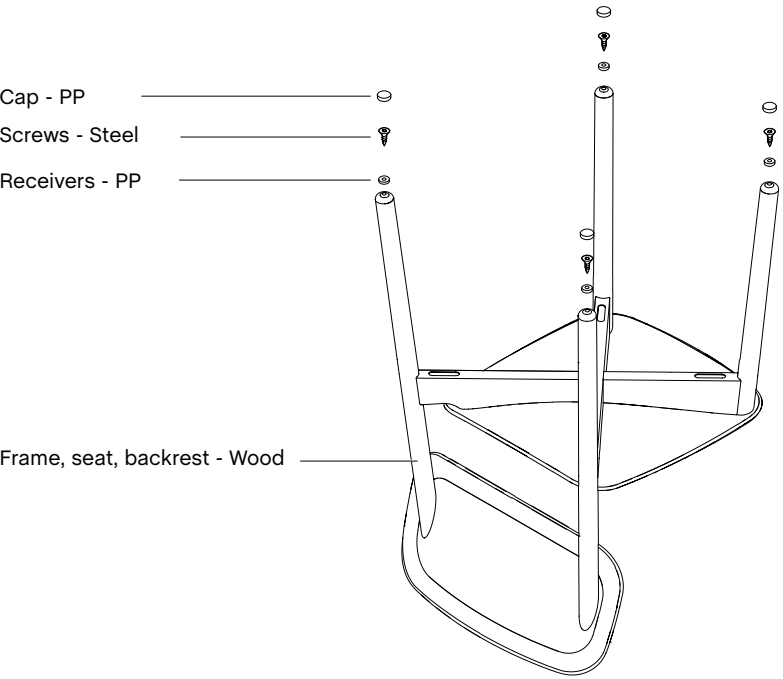




SOFT EDGE 70 STOOL

STEP 1
Hold the seat while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2
Pull out the gliders from the legs

STEP 3
Turn the chair upside down and drill out the rivets holding the cover

 DISASSEMBLY

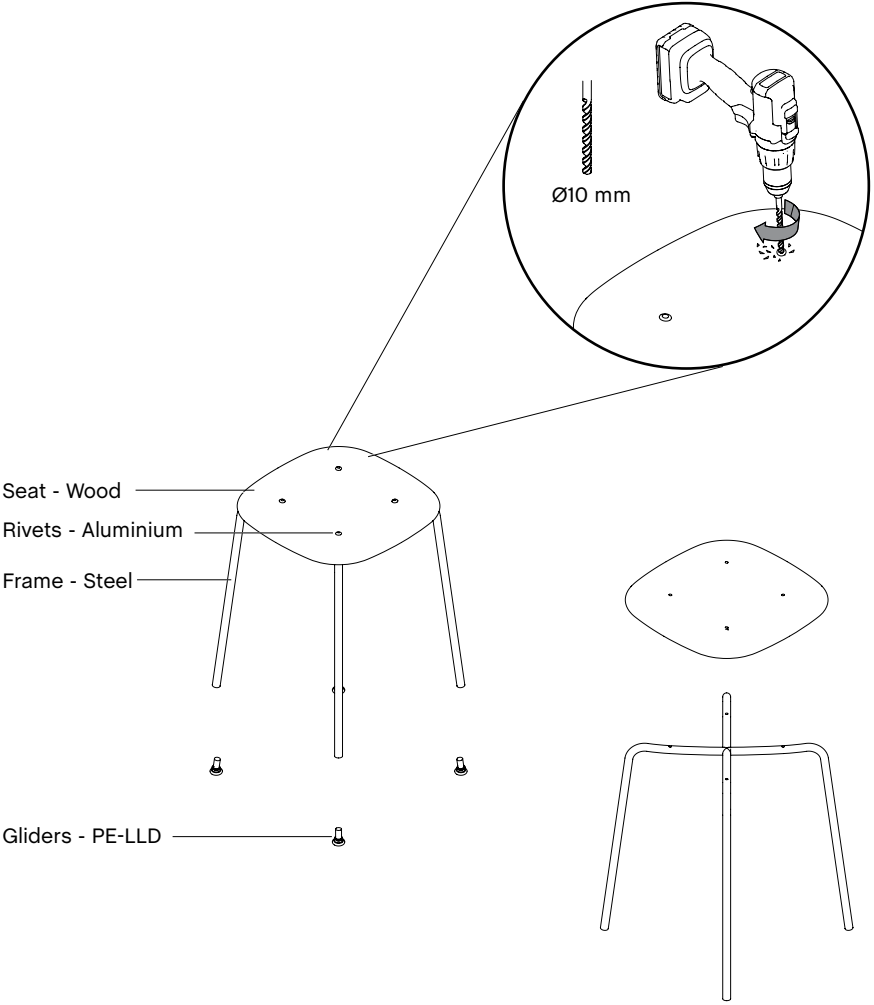




SOFT EDGE 72 STOOL

STEP 1
Turn the stool upside down

STEP 2
Remove the cap from the gliders

STEP 3
Unscrew the screw and remove the gliders' receivers

 DISASSEMBLY

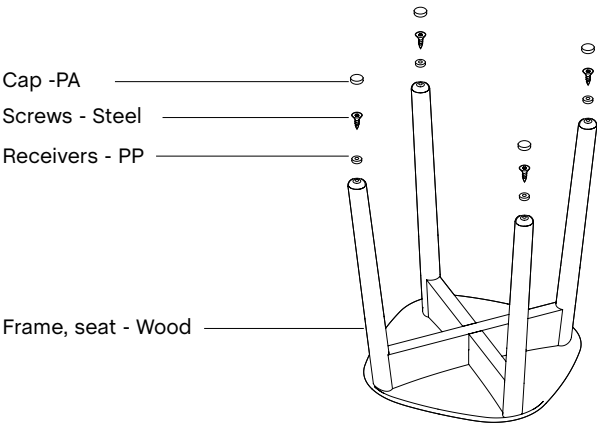




SOFT EDGE 80 BAR STOOL

STEP 1
Hold the seat while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2
Pull out the gliders from the legs

STEP 3
Turn the stool upside down and drill out the rivets holding the cover

 DISASSEMBLY

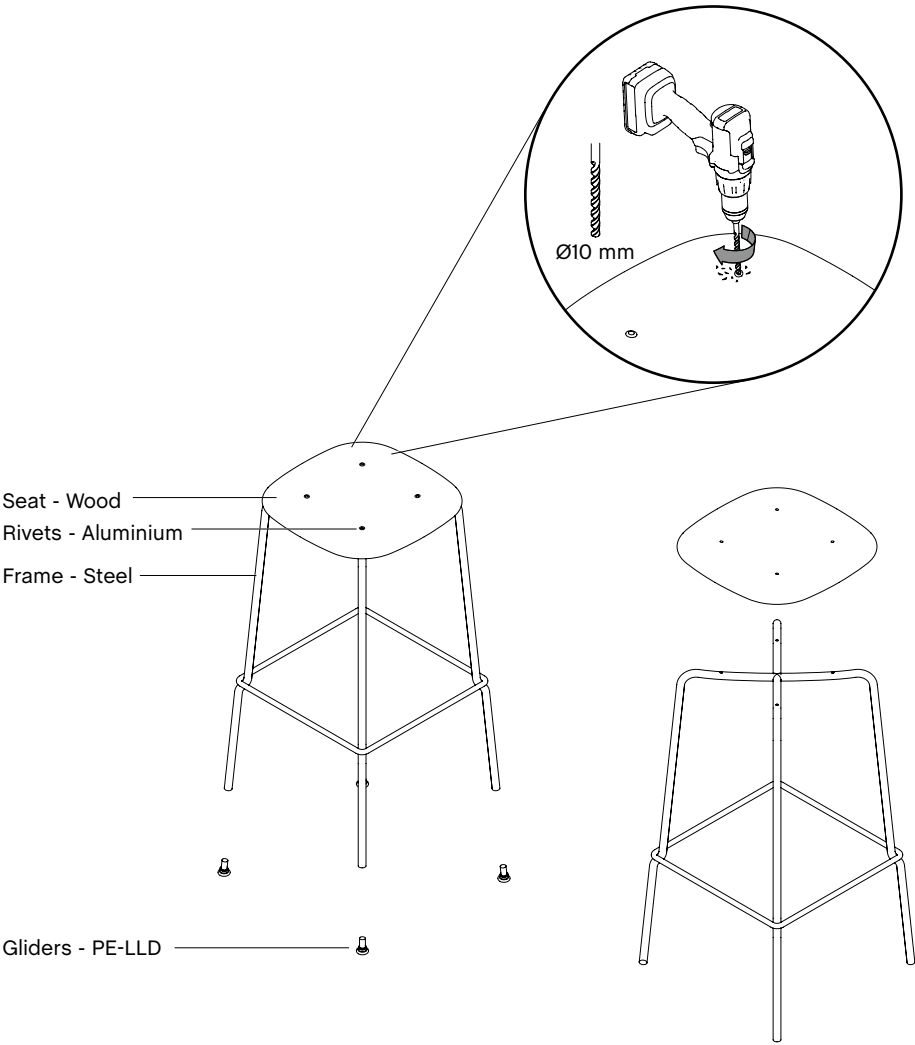



SOFT EDGE 82 BAR STOOL

 
STEP 1
Turn the bar stool upside down

STEP 2
Remove the cap from the gliders

STEP 3
Unscrew the screw and remove the gliders' receivers

STEP 4
Unscrew the screws holding the footrest and remove it

DISASSEMBLY

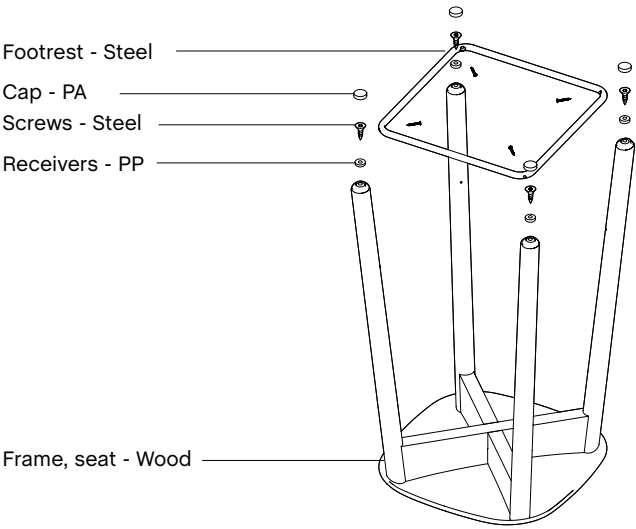




SOFT EDGE 90 BAR STOOL

STEP 1
Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2
Pull out the gliders from the legs

STEP 3
Turn the bar stool upside down and drill out the rivets holding the cover

 DISASSEMBLY

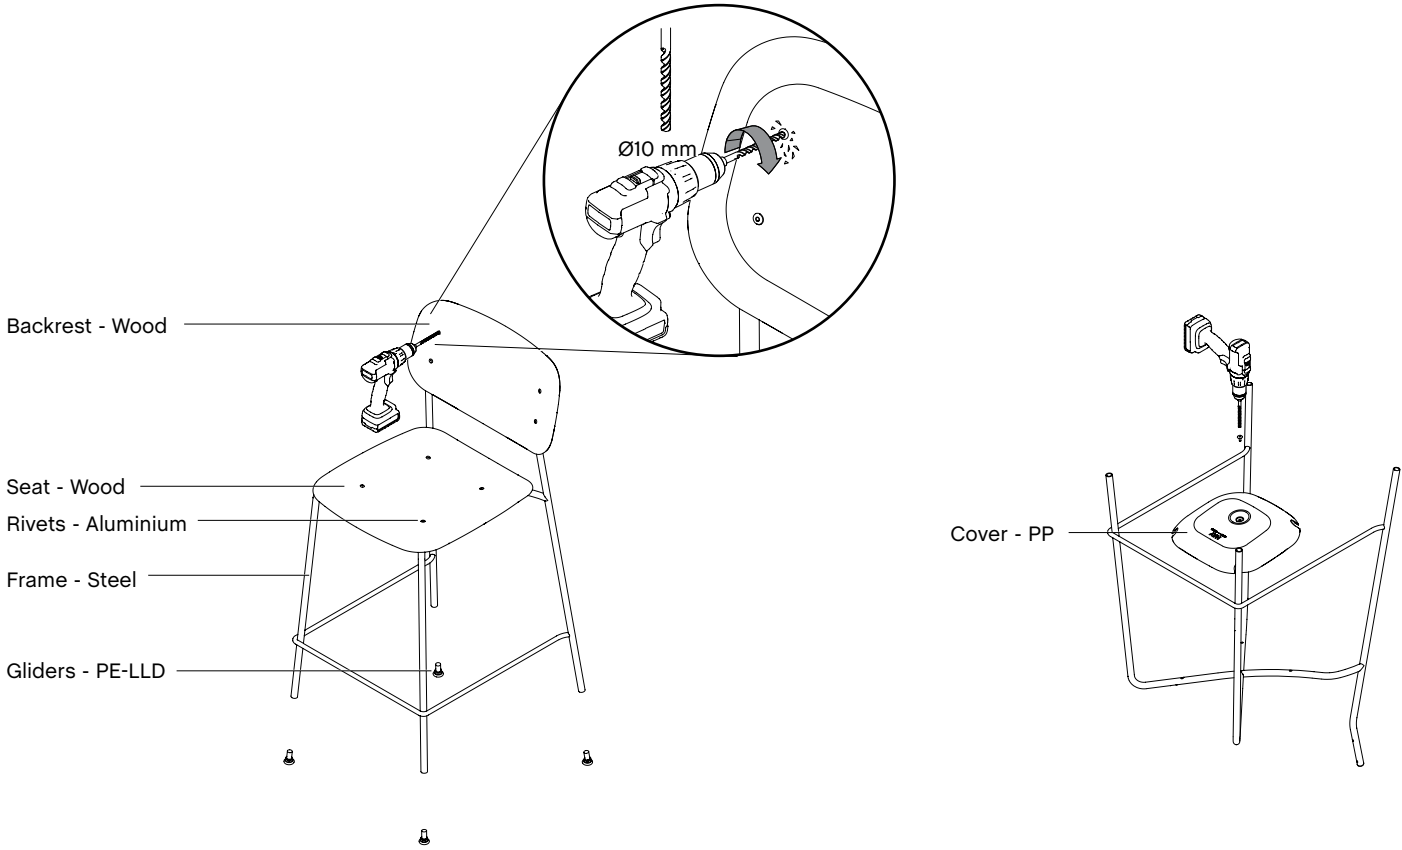



SOFT EDGE 90 BAR STOOL WITH UPHOLSTERY

 
STEP 1
Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2
Pull out the gliders from the legs

STEP 3
Turn the bar stool upside down and drill out the rivets holding the cover

STEP 4
Remove the upholstery and the foam from the wooden shell

DISASSEMBLY

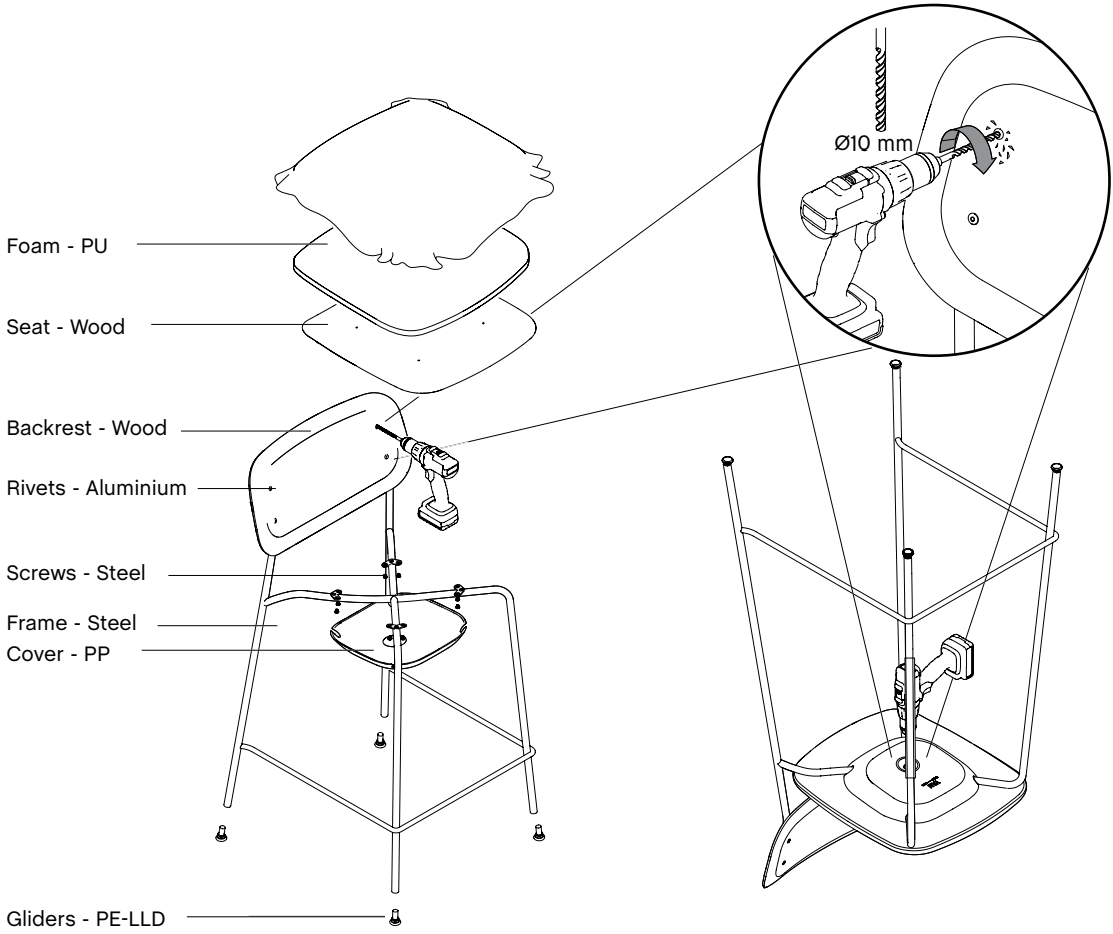




SOFT EDGE 100 LOUNGE

STEP 1
Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2
Pull out the gliders from the legs

STEP 3
Turn the bar stool upside down and drill out the rivets holding the cover

 DISASSEMBLY

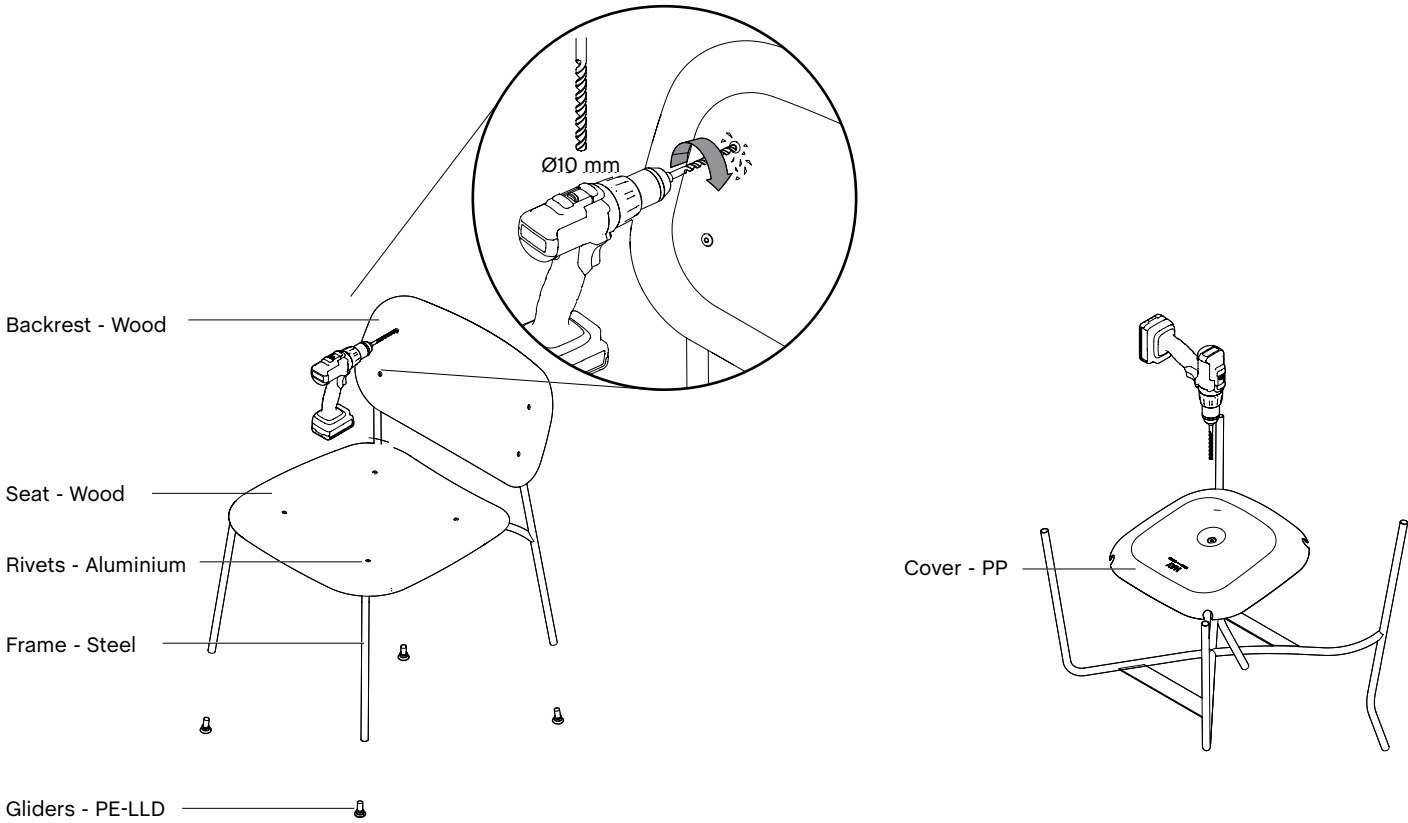





RESULT CHAIR

STEP 1
Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 2
Remove the bumpers from the backrest posts and the gliders from the legs

  DISASSEMBLY

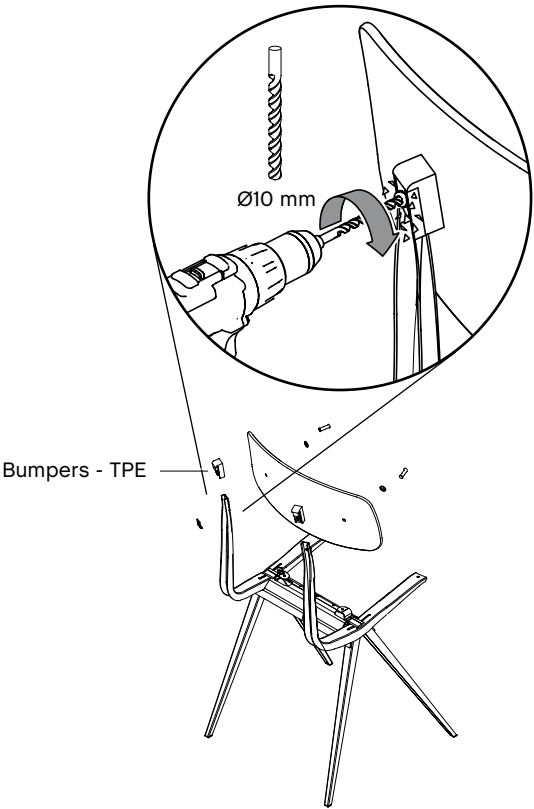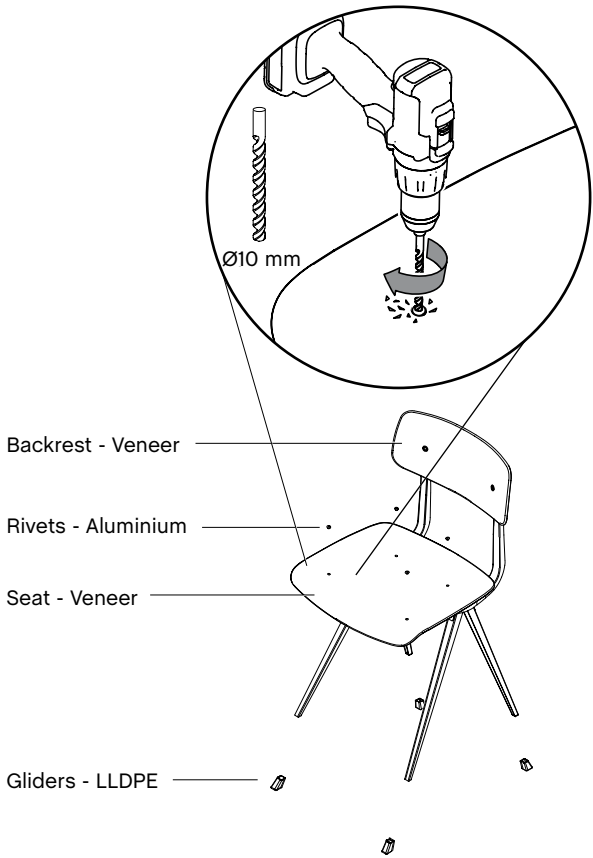



RESULT CHAIR WITH UPHOLSTERY

 
 
STEP 1
Unscrew the screws underneath the seat

STEP 2
Remove the upholstery and the foam from the wooden shell

STEP 3
Hold the seat and backrest while unscrewing the rivets, using a power drill with a 10 mm bit

STEP 4
Remove the bumpers from the backrest posts and the gliders from the legs

DISASSEMBLY

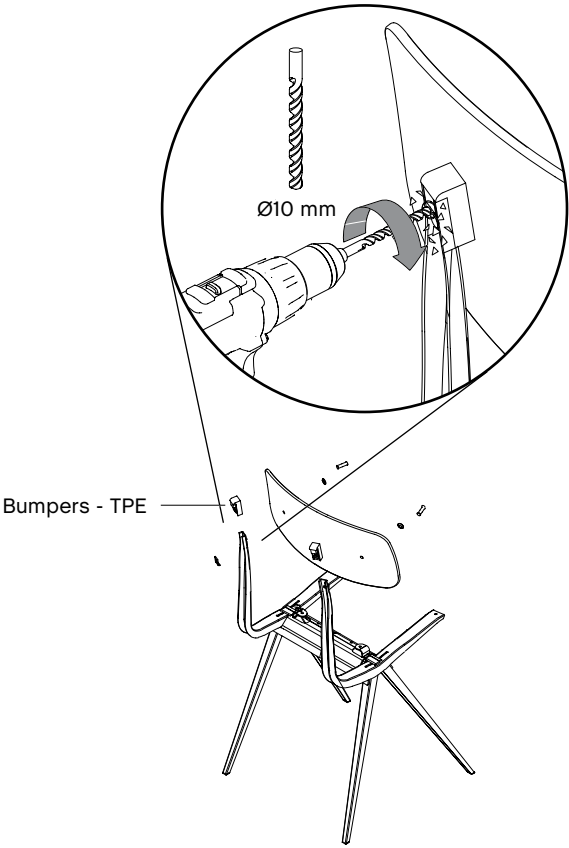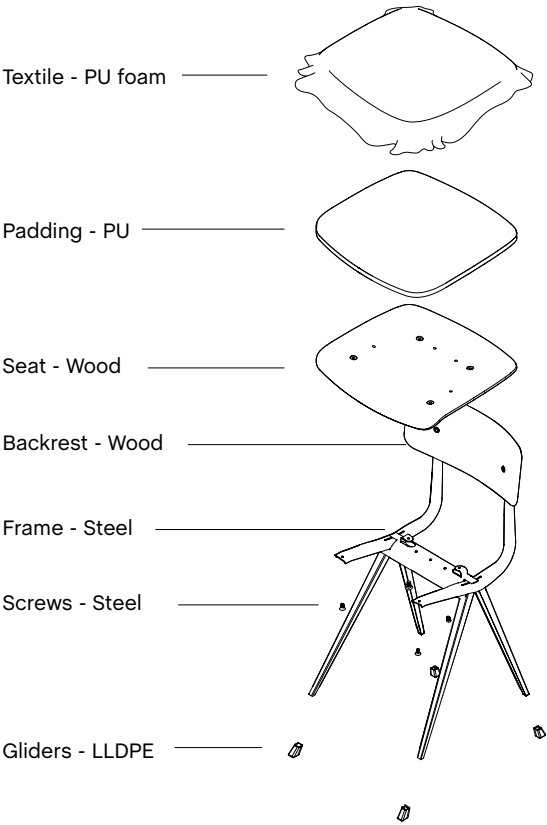





REVOLT CHAIR

STEP 1
Unscrew the screws holding the seat and backrest

STEP 2
Remove the screws and fittings underneath the seat

STEP 3
Pull the gliders out of the legs

  
DISASSEMBLY

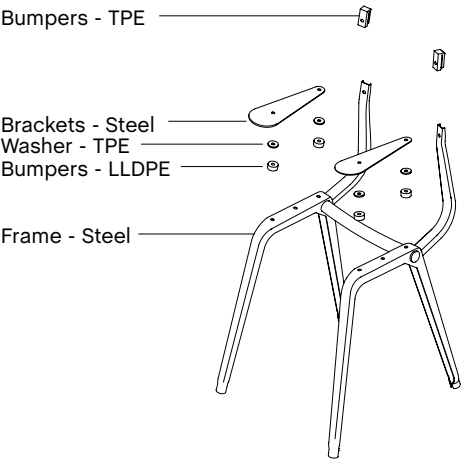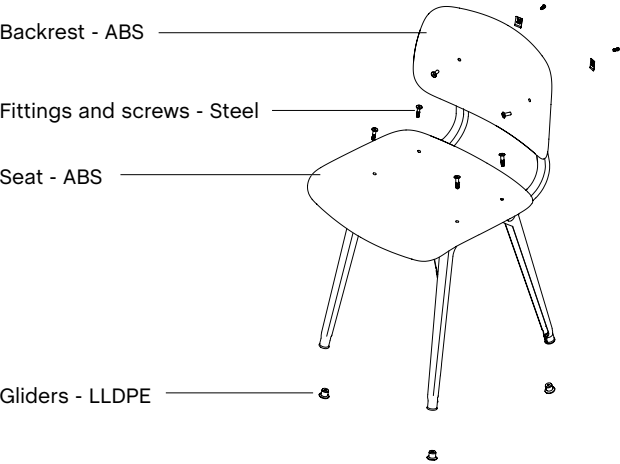



TABURETE 8 BAR STOOL

 DISASSEMBLY

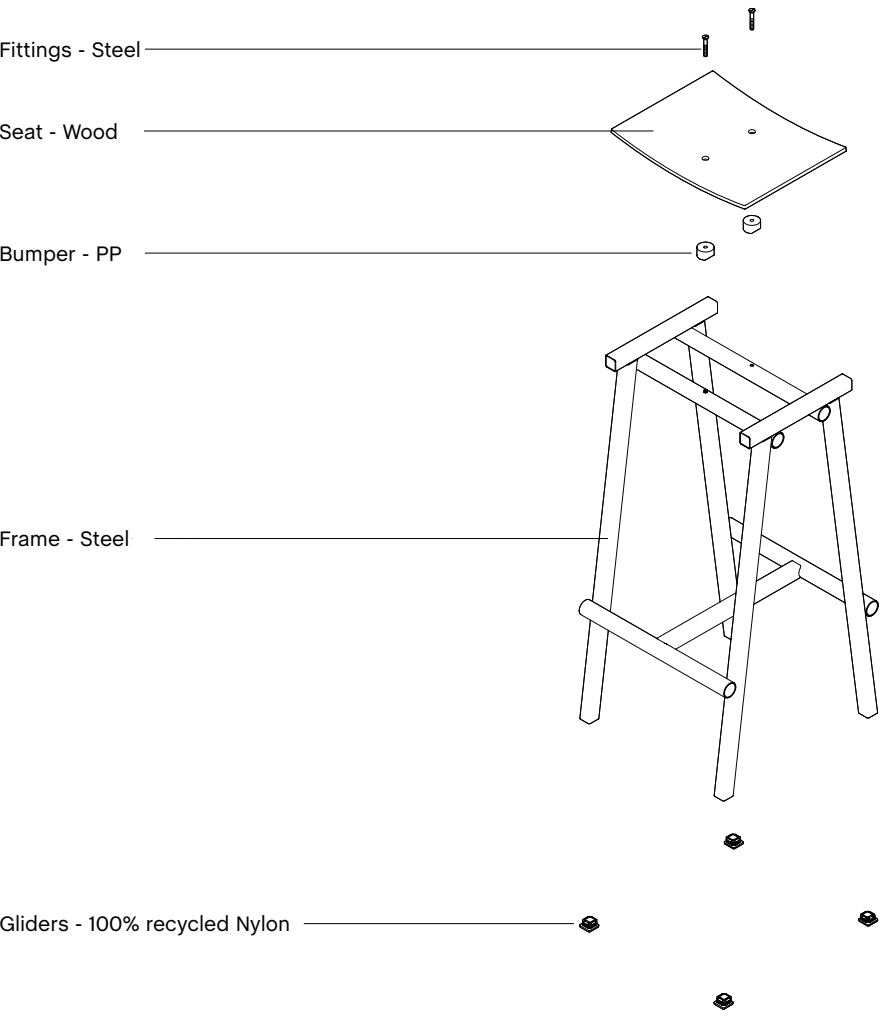



CPH 10 TABLE

 
STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs and crossbar

STEP 3
Separate the reinforcement bar from the crossbar by unscrewing the screws

STEP 4
Unscrew the gliders from the legs

DISASSEMBLY

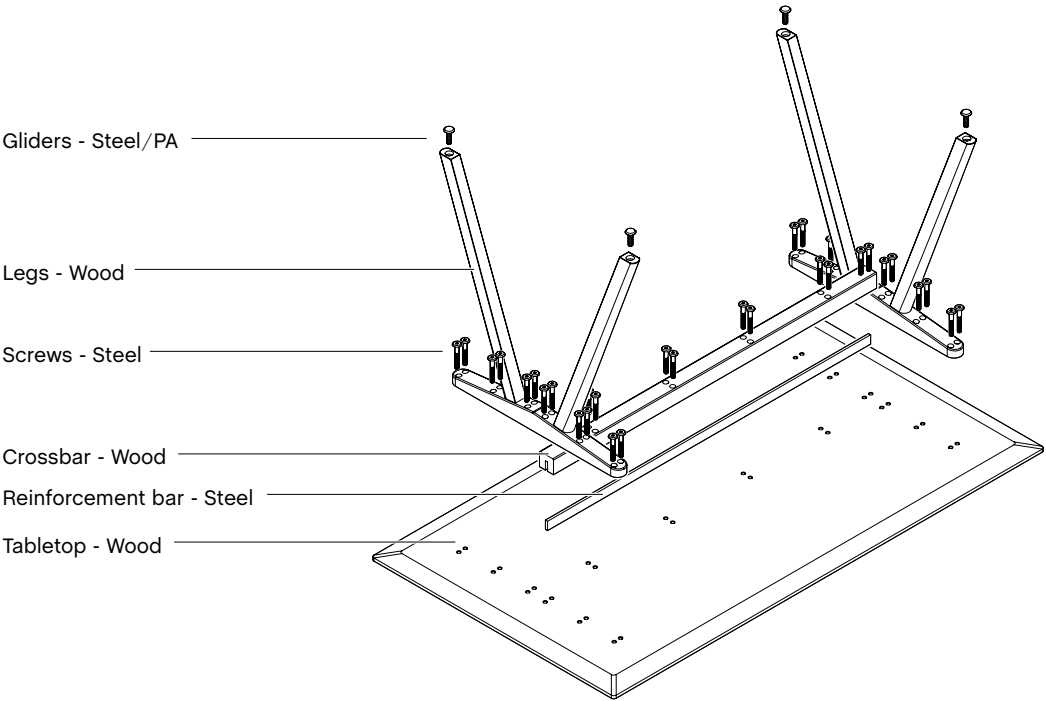




CPH 25 TABLE

STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs and crossbar

STEP 3
Unscrew the gliders from the legs

 DISASSEMBLY

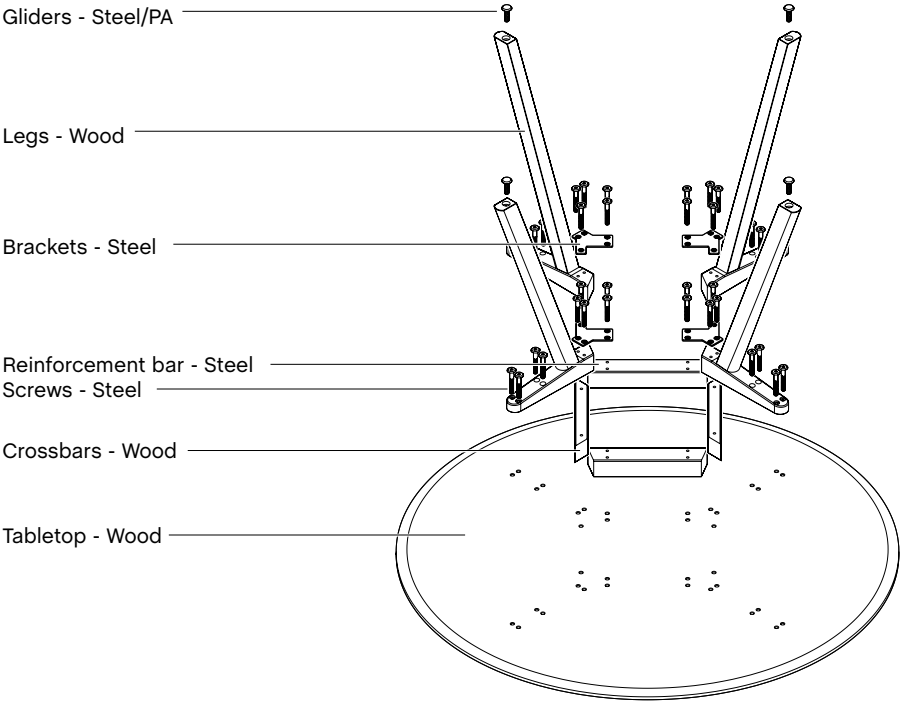



CPH 30 TABLE

 
STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs and crossbar

STEP 3
Separate the reinforcement bar from the crossbar by unscrewing the screws

STEP 4
Unscrew the gliders from the legs

DISASSEMBLY

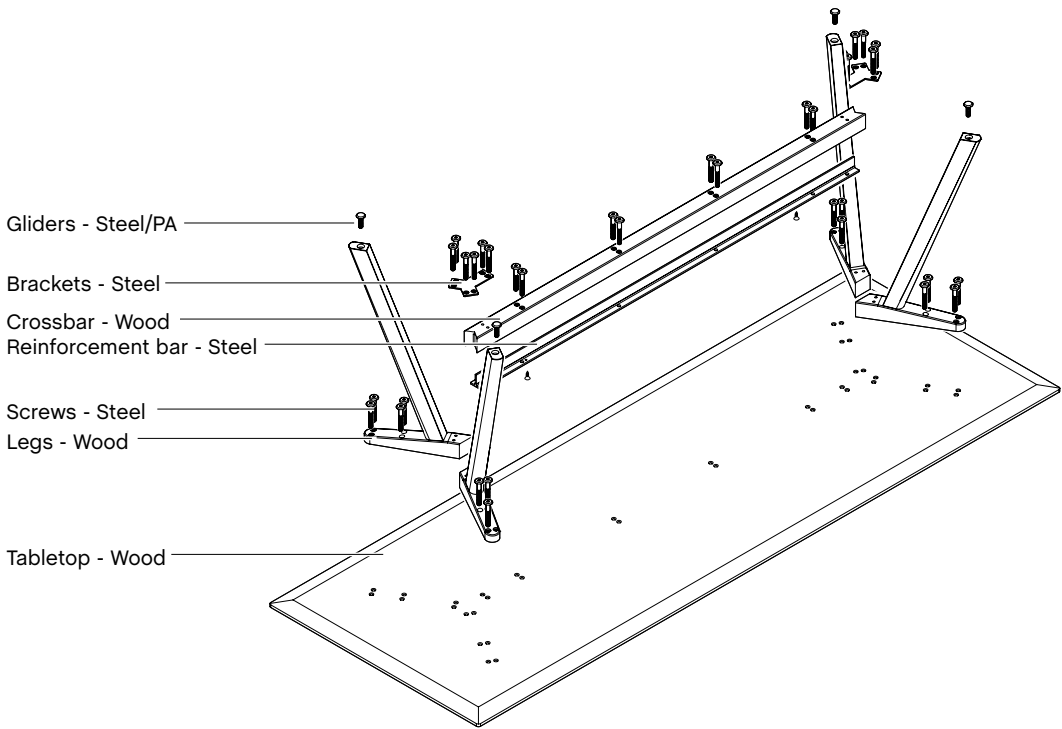



CPH 30 EXTENDABLE TABLE

 
STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs and crossbar

STEP 3
Separate the reinforcement bar from the crossbar by unscrewing the screws

STEP 4
Unscrew the gliders from the legs

DISASSEMBLY

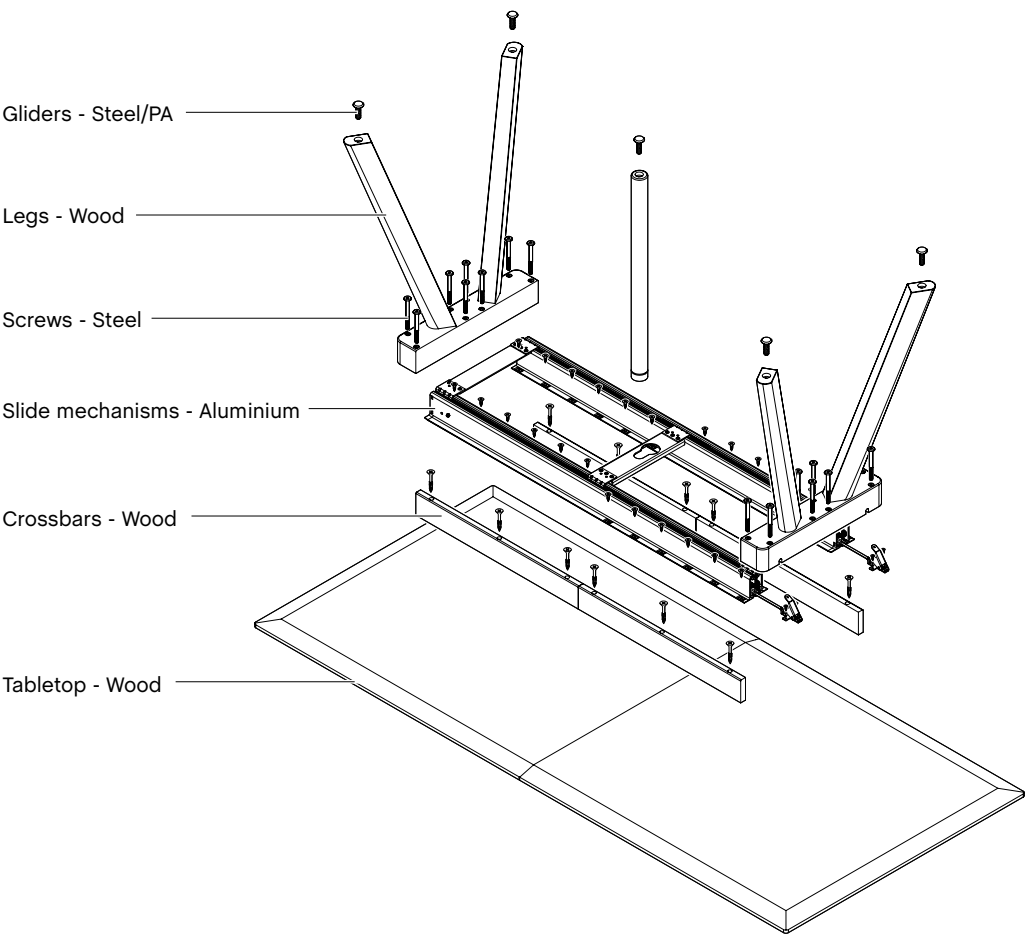




CPH 90 TABLE

STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs and crossbar

STEP 3
Unscrew the gliders from the legs

 DISASSEMBLY

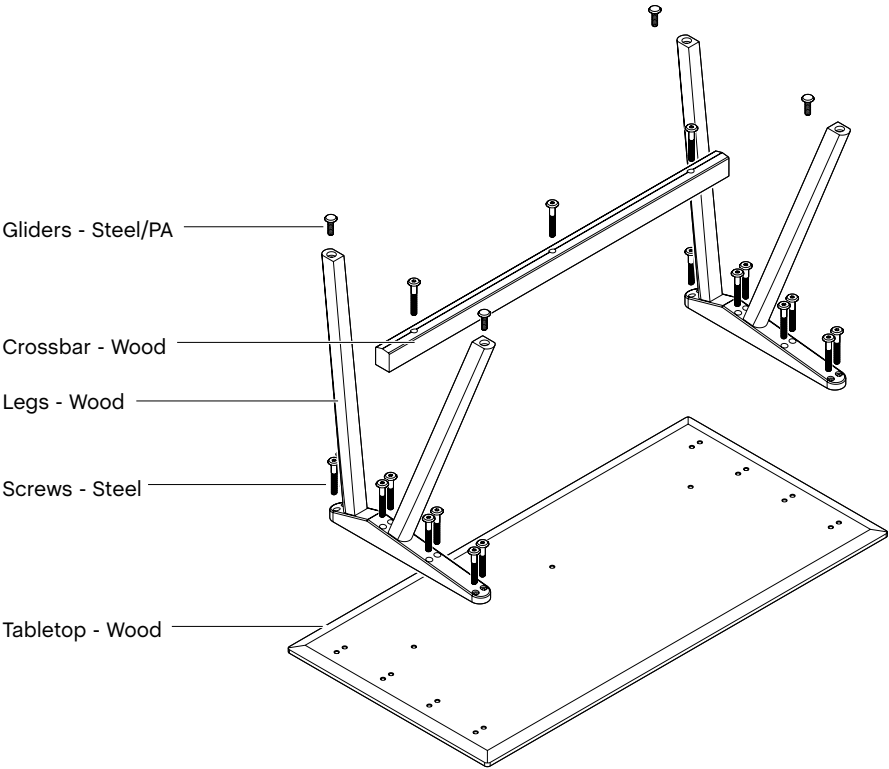




CPH 190 TABLE

STEP 1
Turn the table upside down

STEP 2
Unscrew the gliders from the legs

 DISASSEMBLY

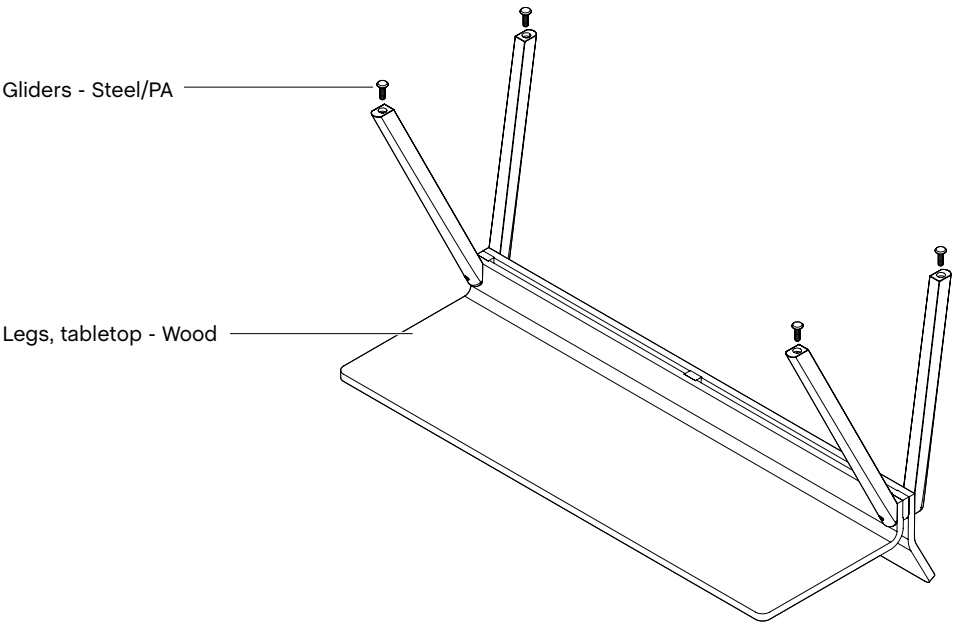




CPH DEUX 210 TABLE

STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs and crossbar

STEP 3
Unscrew the gliders from the legs

 DISASSEMBLY

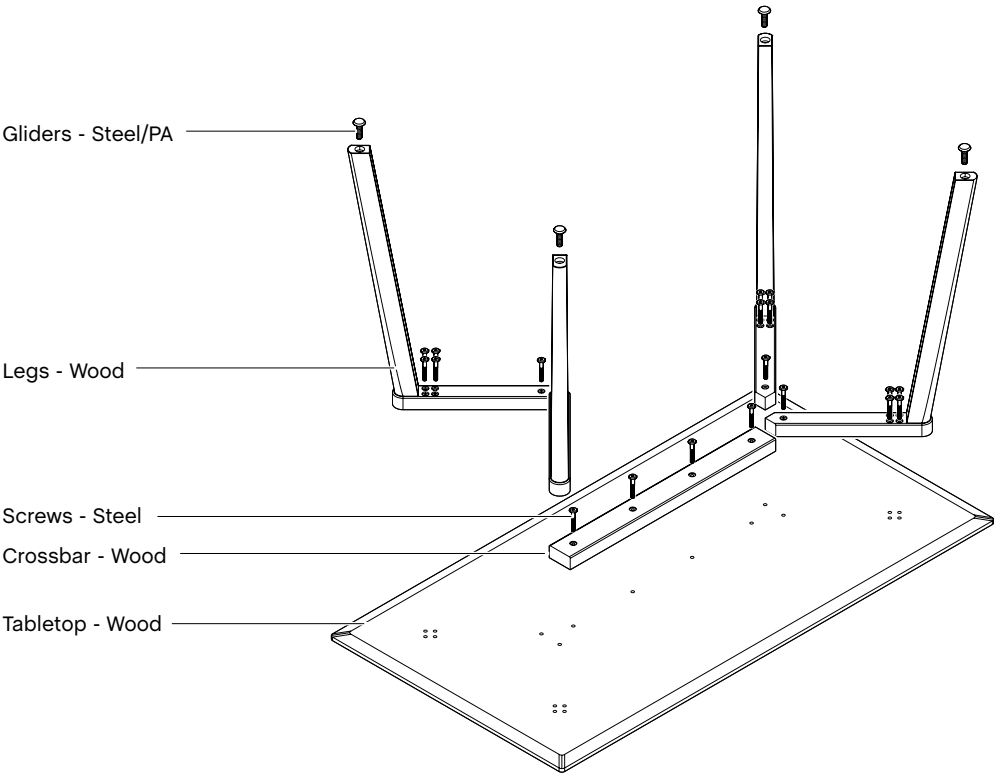




CPH DEUX 215 BENCH

STEP 1
Turn the bench upside down

STEP 2
Unscrew all the screws holding the legs and crossbar

STEP 3
Unscrew the gliders from the legs

 DISASSEMBLY

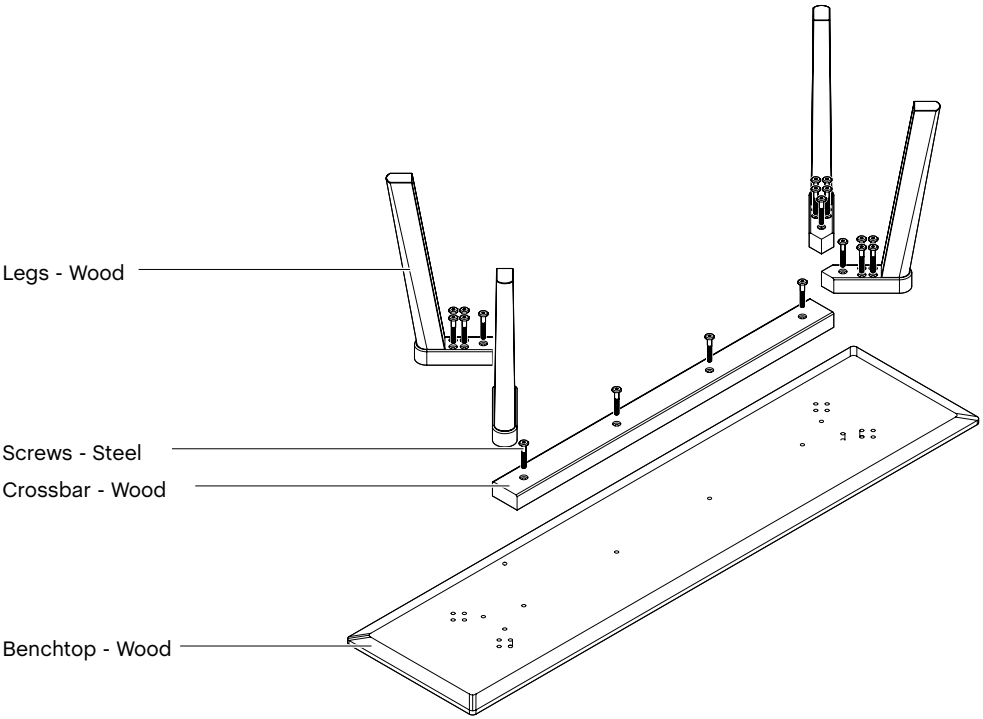




CPH DEUX 220 TABLE

STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs and crossbar

STEP 3
Unscrew the gliders from the legs

 DISASSEMBLY

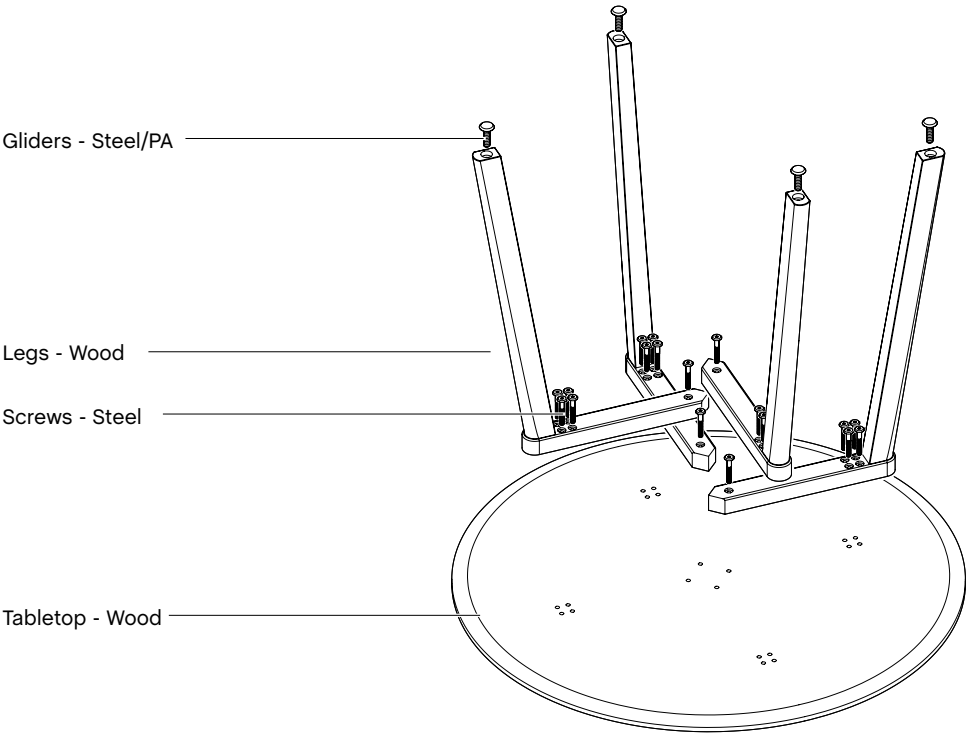






PASTIS TABLE

STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs and the column

   DISASSEMBLY

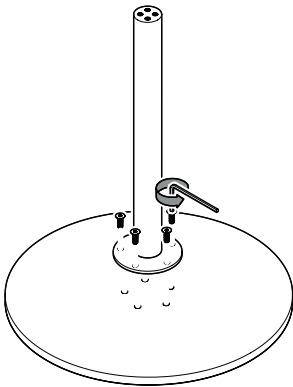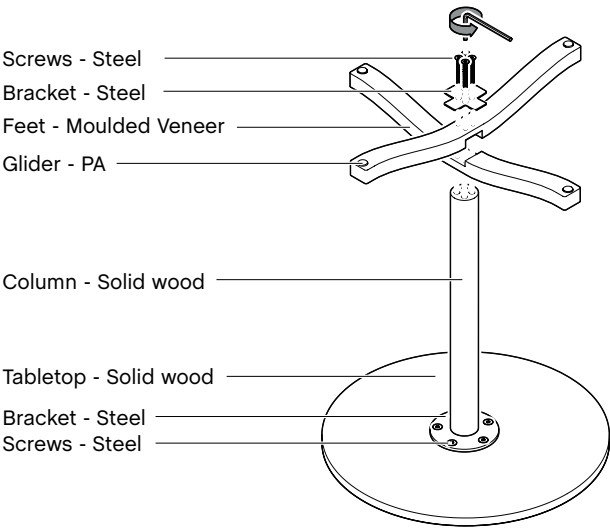



TRIANGLE LEG TABLE

 
STEP 1
Turn the table upside down

STEP 2
Unscrew the bolts holding the legs

STEP 3
Unscrew the feet and the tapping screw in the top of the leg

STEP 4
Unscrew all the screws to separate the frame from the table

DISASSEMBLY

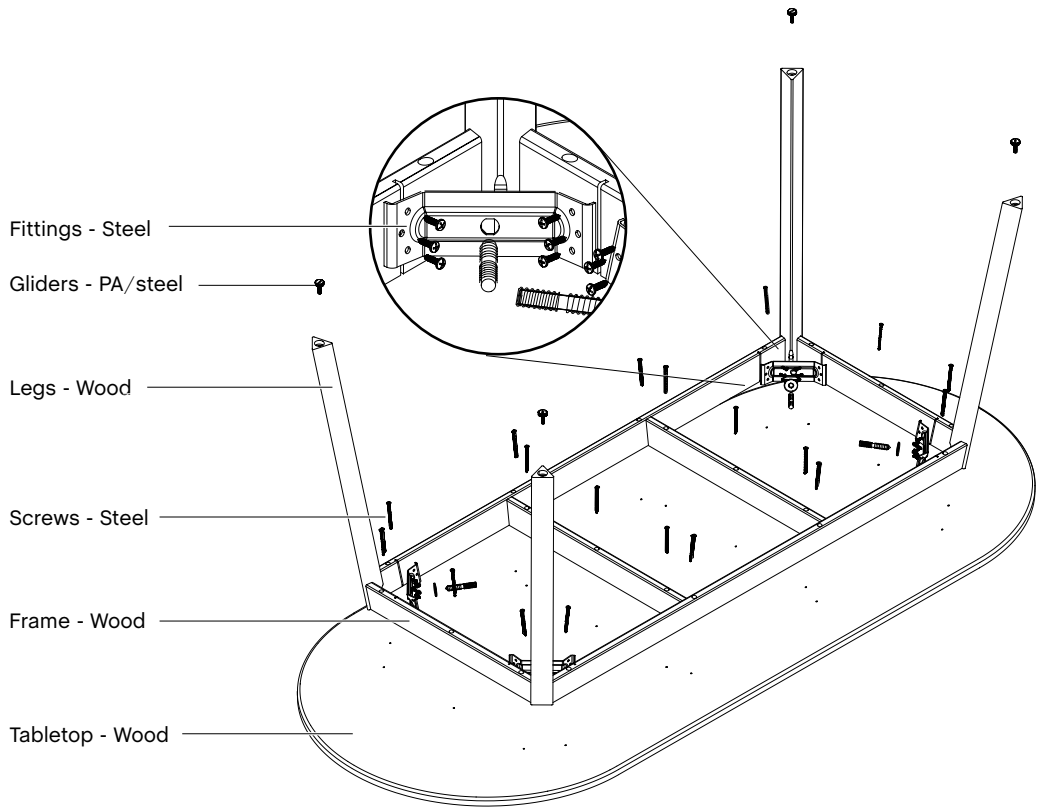




LOOP STAND TABLE

STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs and support bar

 DISASSEMBLY

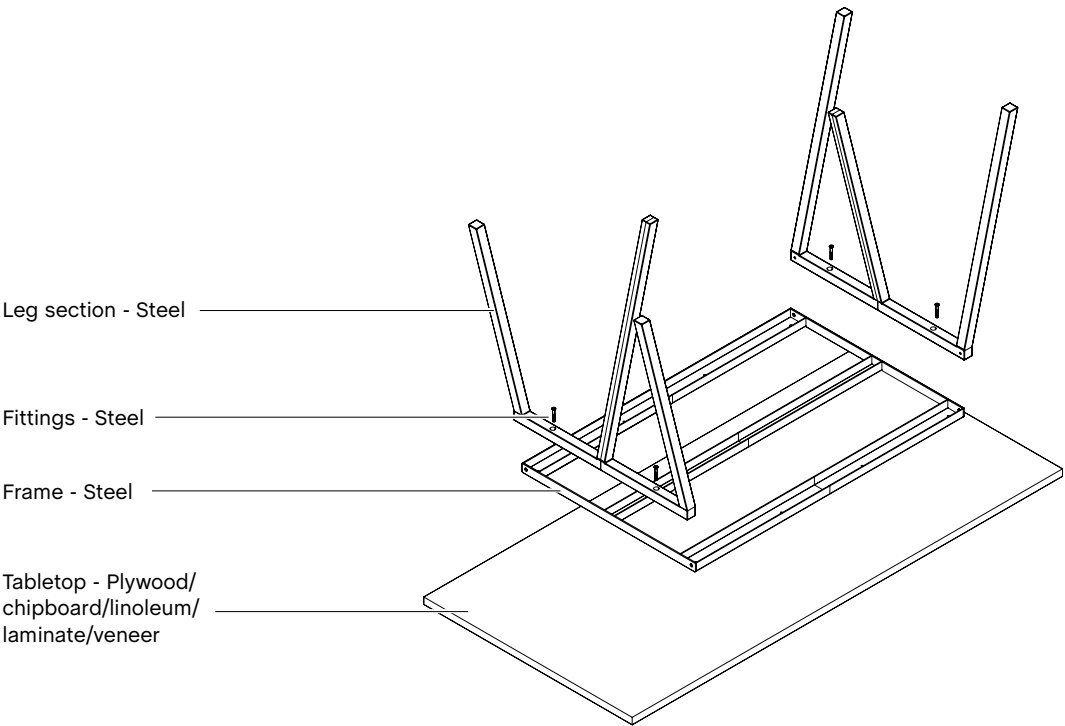




LOOP STAND ROUND TABLE

STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the leg section

 DISASSEMBLY

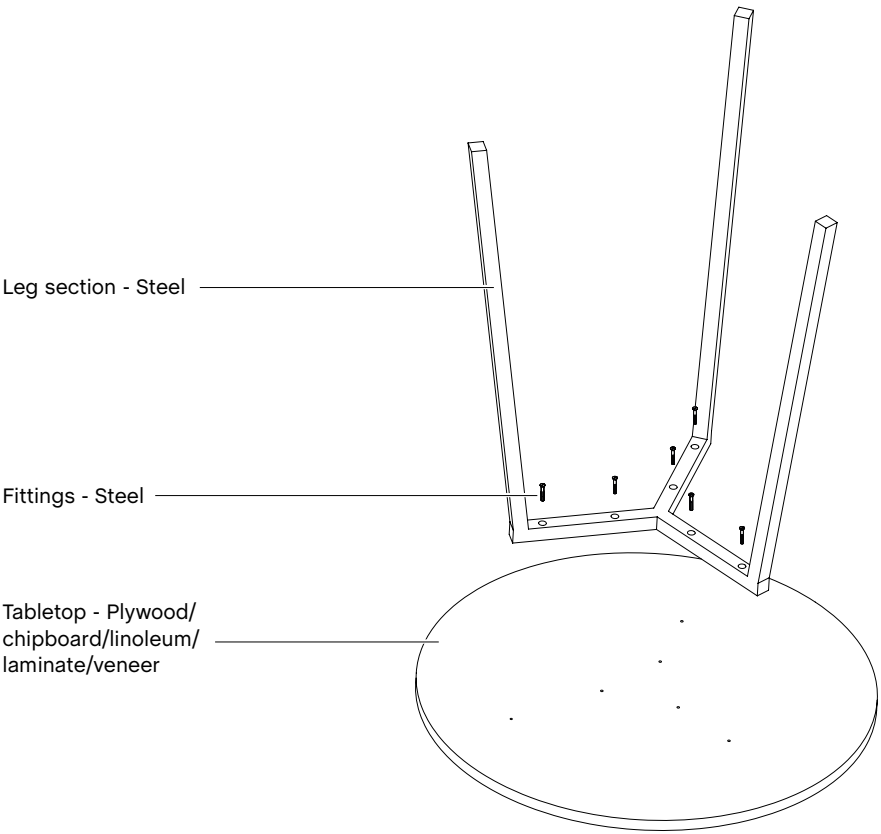




BOA TABLE

STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs and crossbar

STEP 3
Unscrew the gliders from the legs

 
DISASSEMBLY

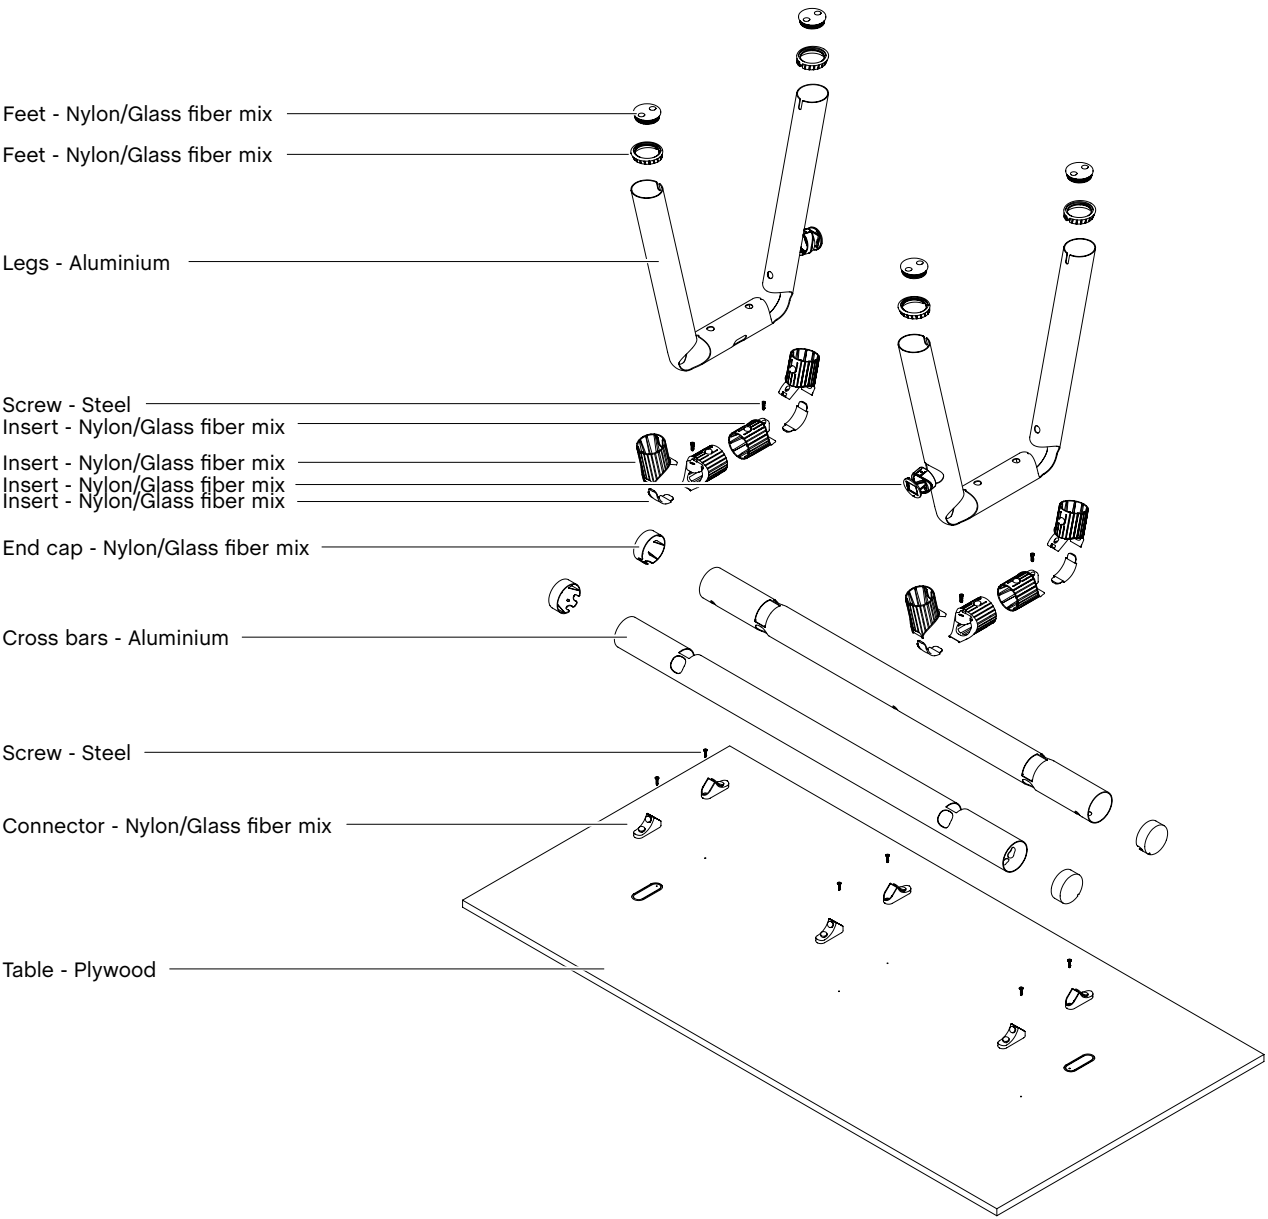



COLOUR RACK S-SHAPE

 
DISASSEMBLY

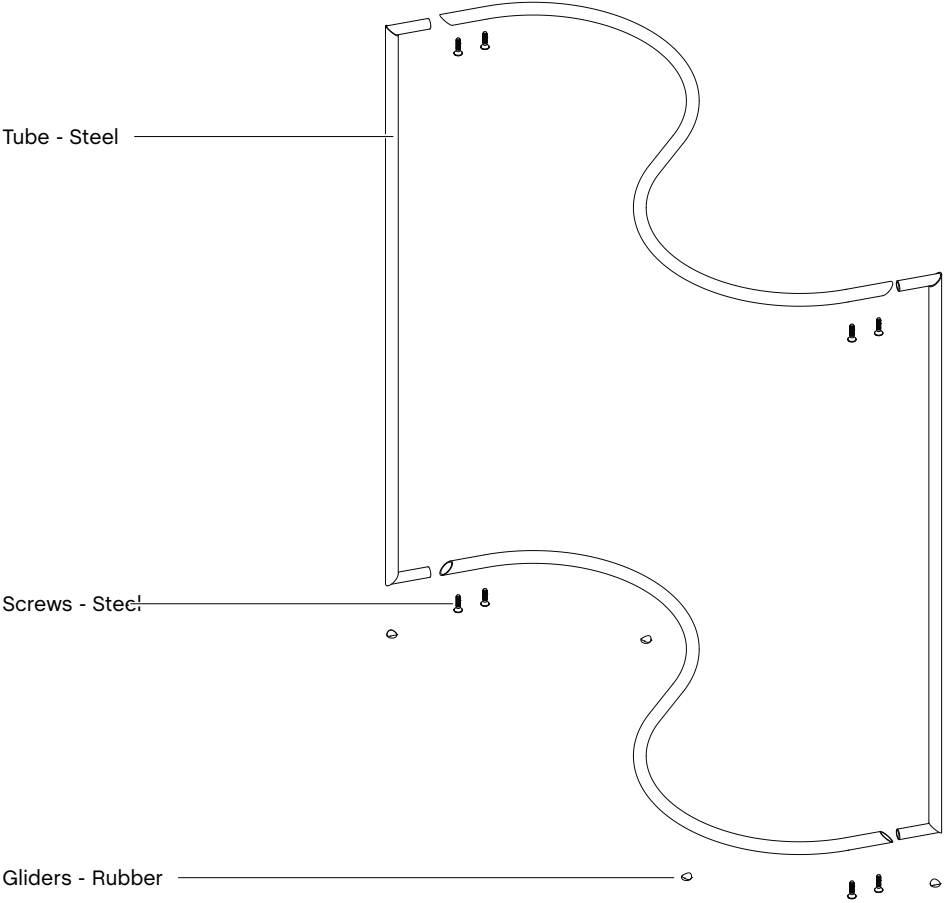



COLOUR RACK C-SHAPE

 DISASSEMBLY

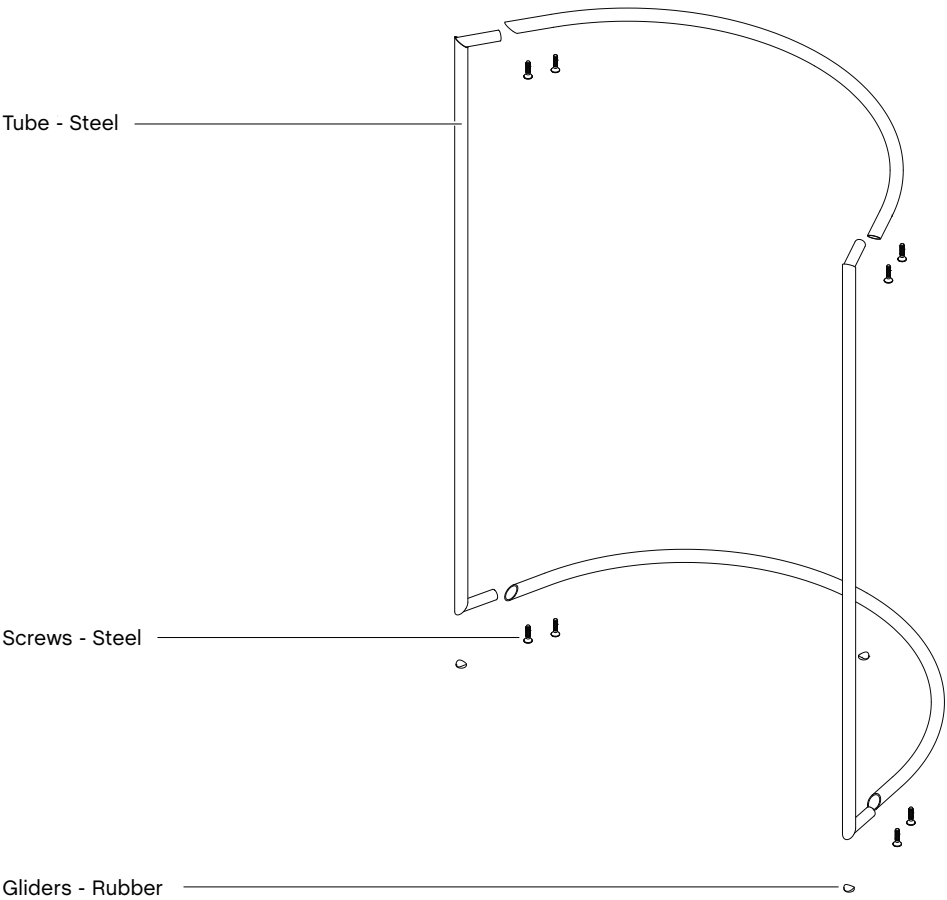




X-LINE CHAIR

STEP 1
Turn the chair upside down

STEP 2
Remove the gliders from the legs

 DISASSEMBLY

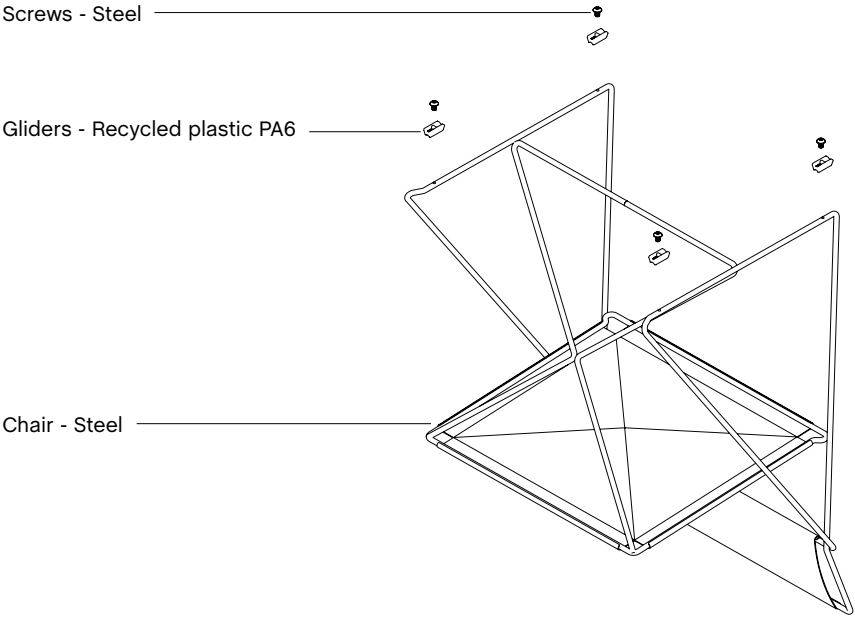



X-LINE CHAIR TROLLEY

 
STEP 1
Unscrew the screws attaching the front wheels

STEP 2
Unscrew the screws from the back wheels

STEP 3
Remove the back wheels by detaching the lock pin

STEP 4
Remove the plastic caps from the top of the chair trolley

DISASSEMBLY

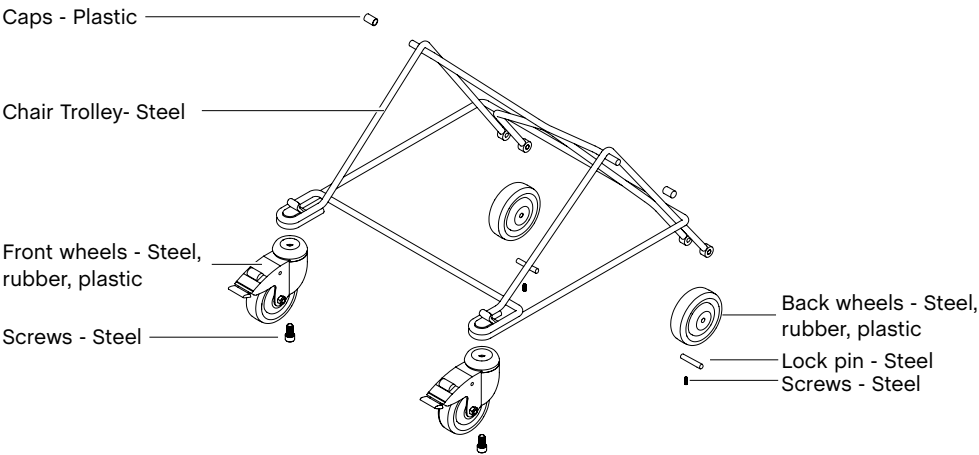



AMANTA

 
 
 
 
STEP 1
Remove the legs and unscrew the steel pins

STEP 2
Remove all cushions. Pull the tufted (capitonné) buttons on the backrest and top cushion and cut them so the cushion covers can be removed

STEP 3
Loosen the Velcro attachments on the bottom seat cushion and backrest cushion, then remove both the backrest and seat cushion foam from the plywood board

STEP 4
Remove the steel fittings and Velcro strips from the plywood boards

DISASSEMBLY

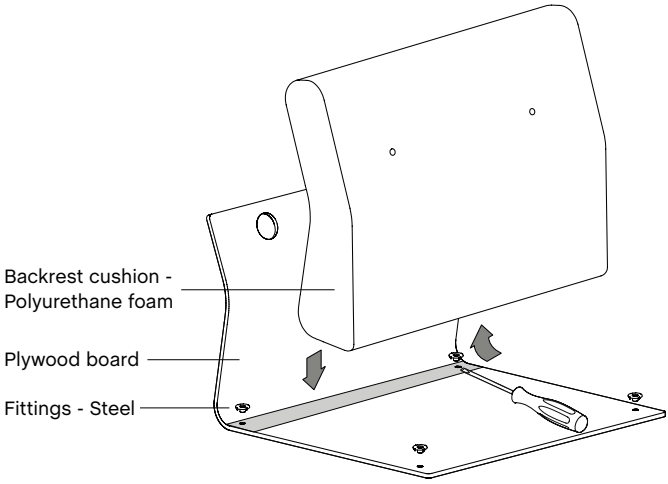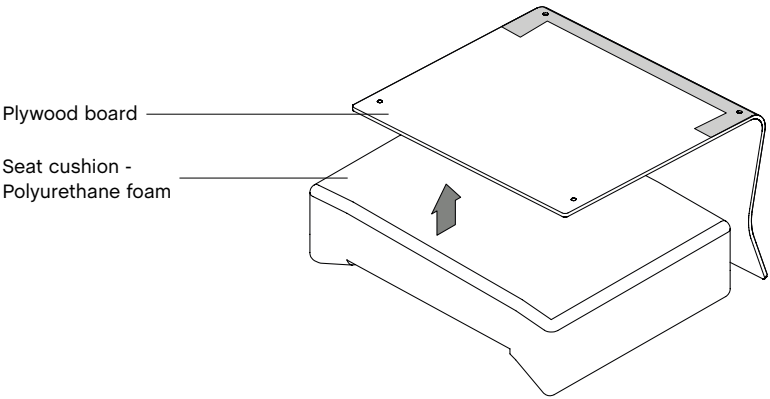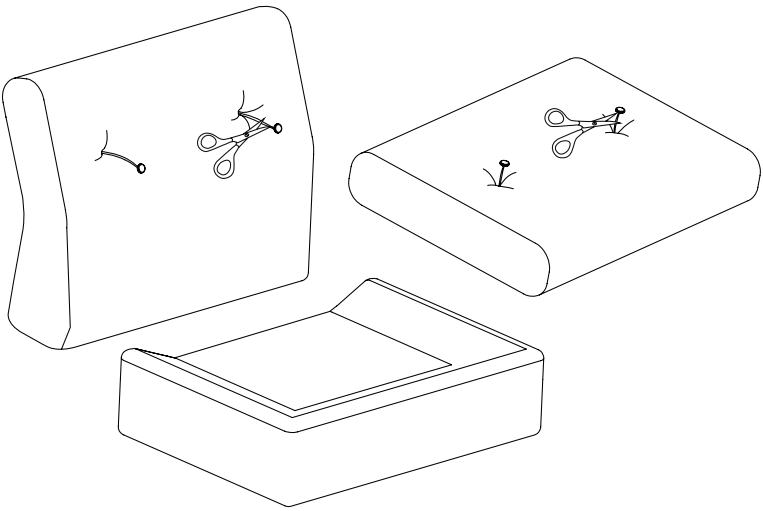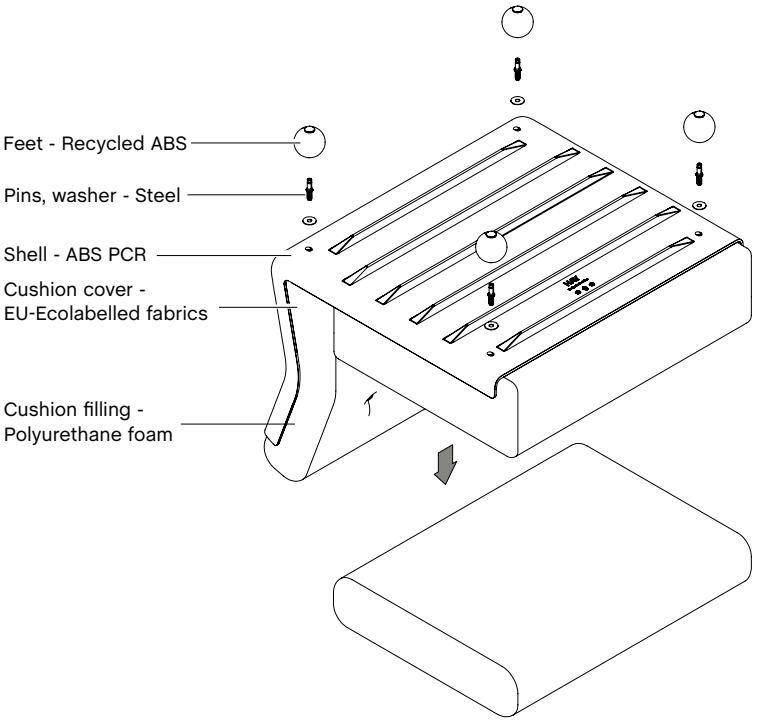




ANNEX TABLE | WOOD LEGS

STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs to the corners and aprons

STEP 3
Unscrew the gliders from the legs

 DISASSEMBLY

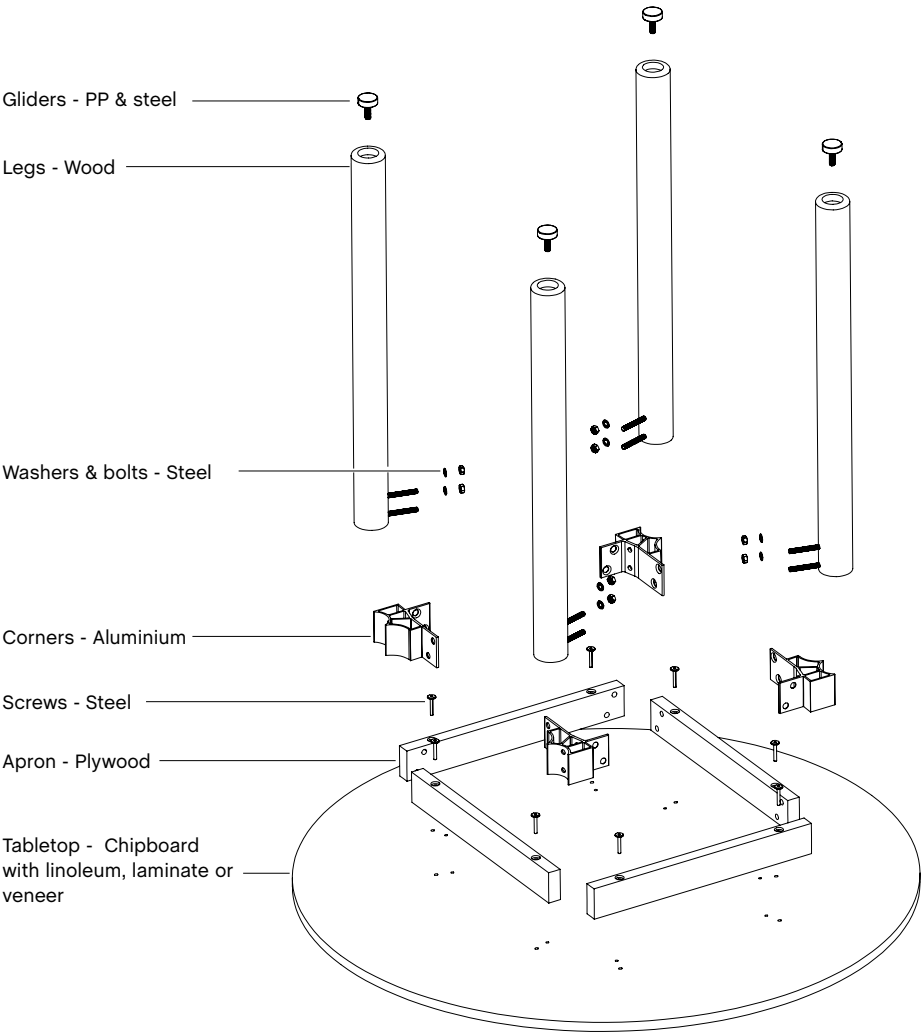




ANNEX TABLE | ALUMINIUM LEGS | 4 LEGS

STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs to the corners, the aprons, and the tabletop connectors attached to the tabletop

STEP 3
Remove the gliders from the legs

 DISASSEMBLY

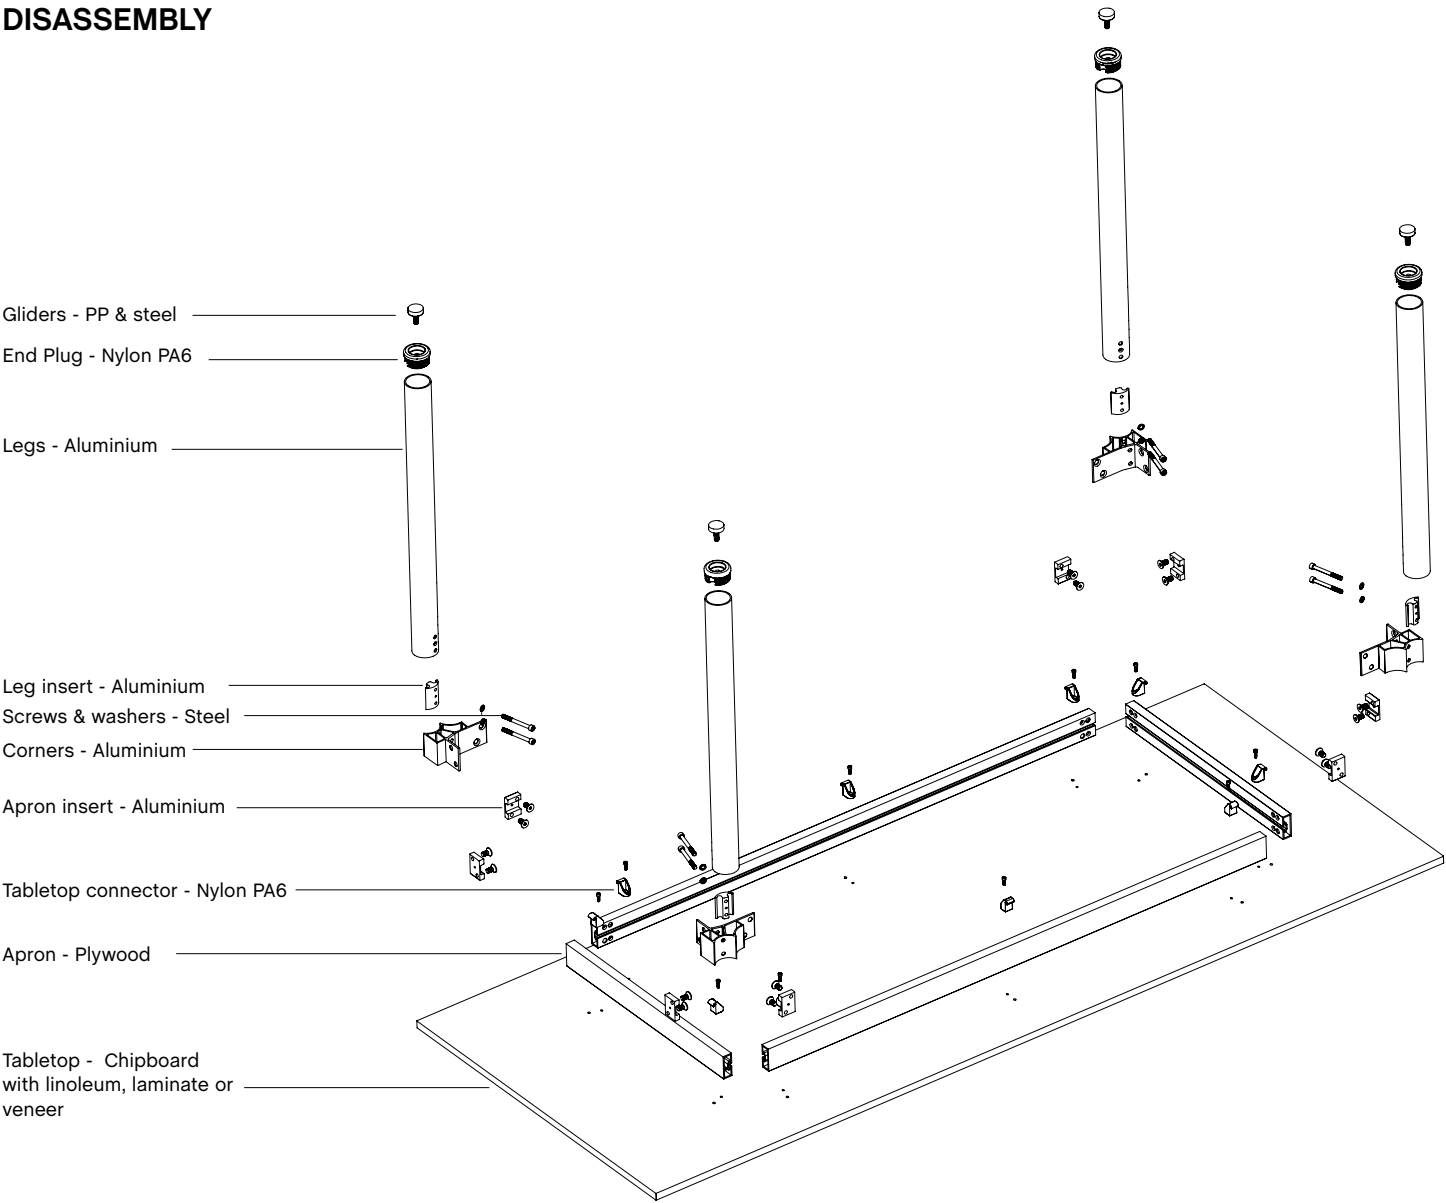



ANNEX TABLE | ALUMINIUM LEGS | 6 LEGS

 
STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs to the corners, the aprons, and the tabletop connectors attached to the tabletop

STEP 3
Open the table latch

STEP 4
Remove the gliders from the legs

DISASSEMBLY

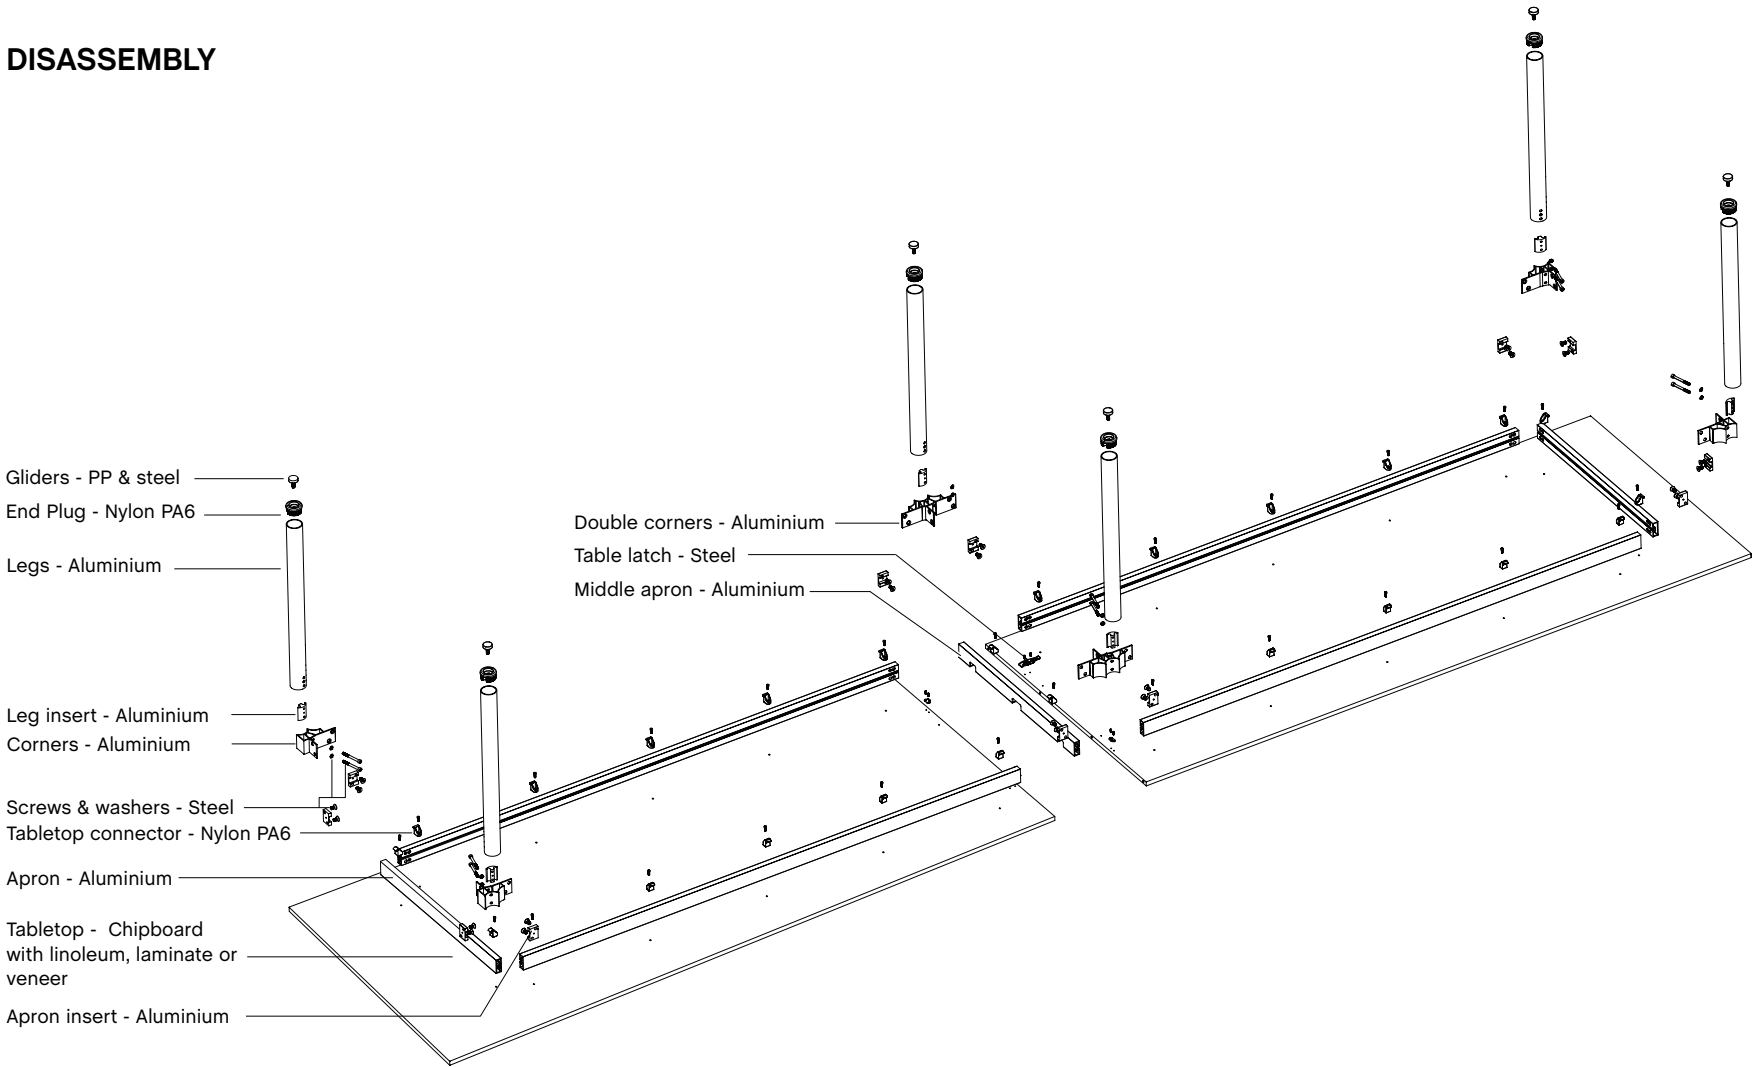



LAYOUT ARMCHAIR 211 | 212 | 213 | 214

STEP 1
Turn the chair upside down

STEP 2
Detach the seat from the shell by unscrewing the screws located at the bottom of the shell. Then, remove any fittings attached to the seat

STEP 3
Return the chair to its upright position

 
STEP 4
Unscrew the screws and separate the shell from the frame

STEP 5
Remove the legs and steel inserts from aluminium plate

STEP 6
Remove the gliders from the frame

If your version is 213 or 214, with an upholstered cover or seat, please refer to the disassembly guide further down in this document for instructions on how to proceed.

DISASSEMBLY

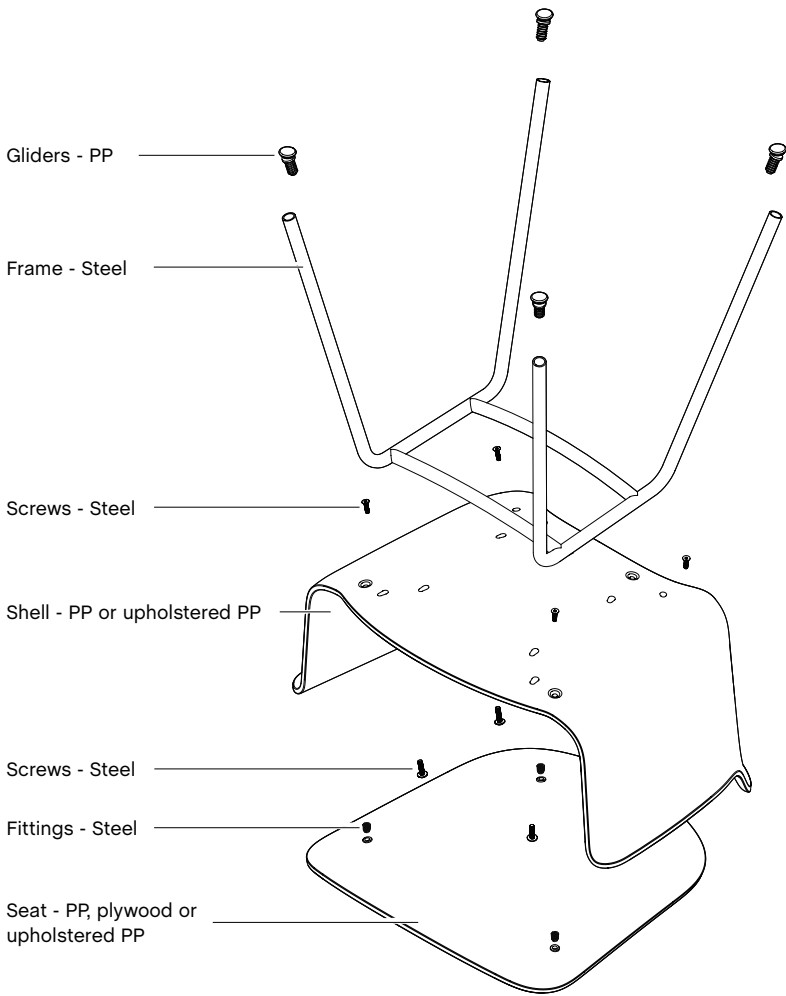



LAYOUT ARMCHAIR 221 | 222 | 223 | 224

STEP 1
Turn the chair upside down

STEP 2
Detach the seat from the shell by unscrewing the screws located at the bottom of the shell. Then, remove any fittings attached to the seat

STEP 3
Return the chair to its upright position

 
STEP 4
Unscrew the screws and separate the shell from the frame

STEP 5
Remove the wood legs and steel inserts from aluminium plate

STEP 6
Remove the gliders from the frame

If your version is 223 or 224, with an upholstered cover or seat, please refer to the disassembly guide further down in this document for instructions on how to proceed.

DISASSEMBLY

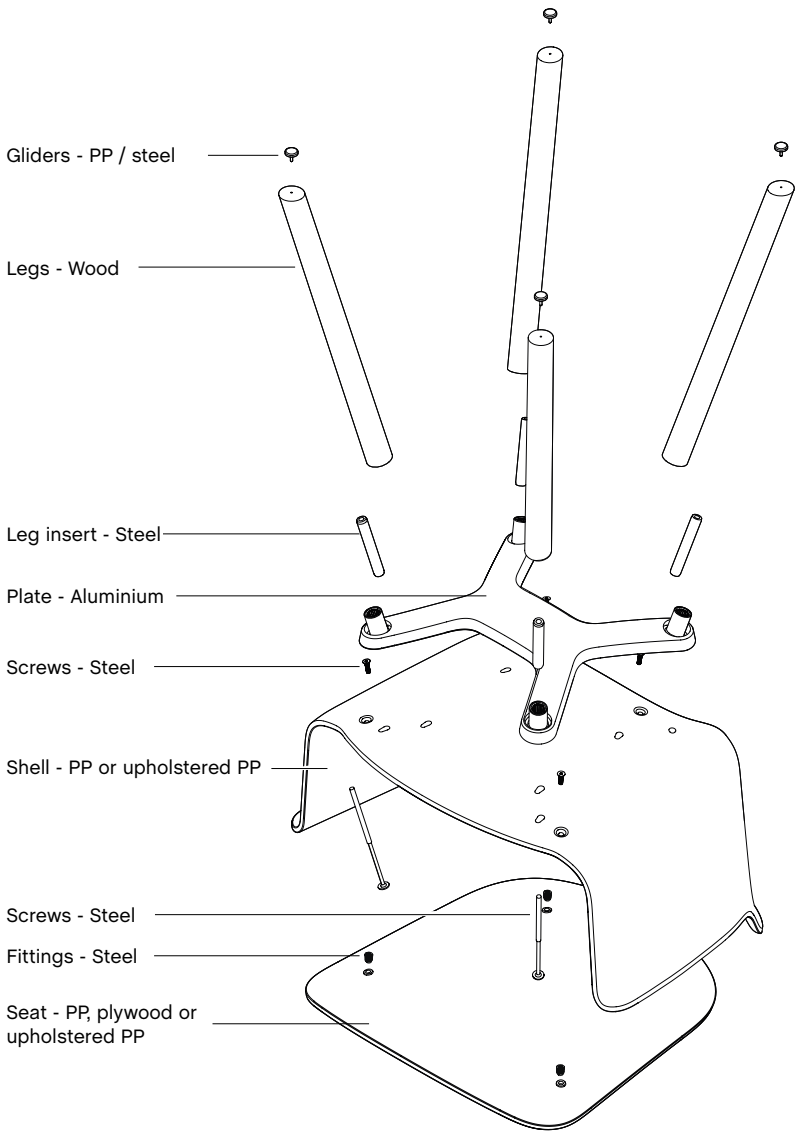



LAYOUT ARMCHAIR 231 | 232 | 233 | 234

STEP 1
Turn the chair upside down

STEP 2
Detach the seat from the shell by unscrewing the screws located at the bottom of the shell. Then, remove any fittings attached to the seat

STEP 3
Return the chair to its upright position

STEP 4
Unscrew the screws and separate the shell from the frame

 
STEP 5
Detach the aluminium plate from the swivel column by applying vertical force

STEP 6
Detach the foot from the swivel column by unscrewing the screws located at the bottom centre of the foot

STEP 7
Remove the gliders from the foot

If your version is 233 or 234, with an upholstered cover or seat, please refer to the disassembly guide further down in this document for instructions on how to proceed.

DISASSEMBLY

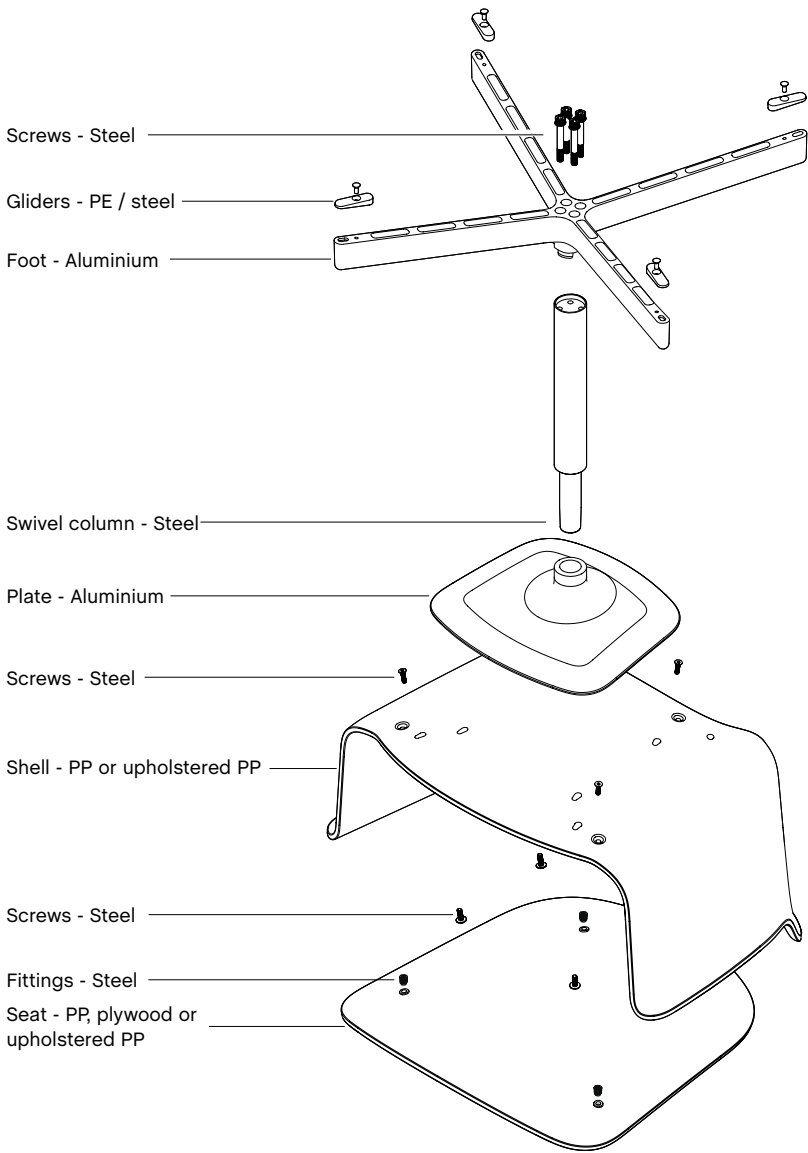



LAYOUT ARMCHAIR 241 | 242 | 243 | 244

STEP 1
Turn the chair upside down

STEP 2
Detach the seat from the shell by unscrewing the screws located at the bottom of the shell. Then, remove any fittings attached to the seat

STEP 3
Return the chair to its upright position

STEP 4
Unscrew the screws and separate the shell from the frame

STEP 5
Detach the aluminium plate from the gas spring by applying vertical force

 
STEP 6
Unscrew the screws on the aluminium plate and remove the handle

STEP 7
Detach the foot from the gas spring by unscrewing the screws located at the bottom centre of the foot

STEP 8
Remove the wheels and steel pin from the foot

If your version is 243 or 244, with an upholstered cover or seat, please refer to the disassembly guide further down in this document for instructions on how to proceed.

DISASSEMBLY

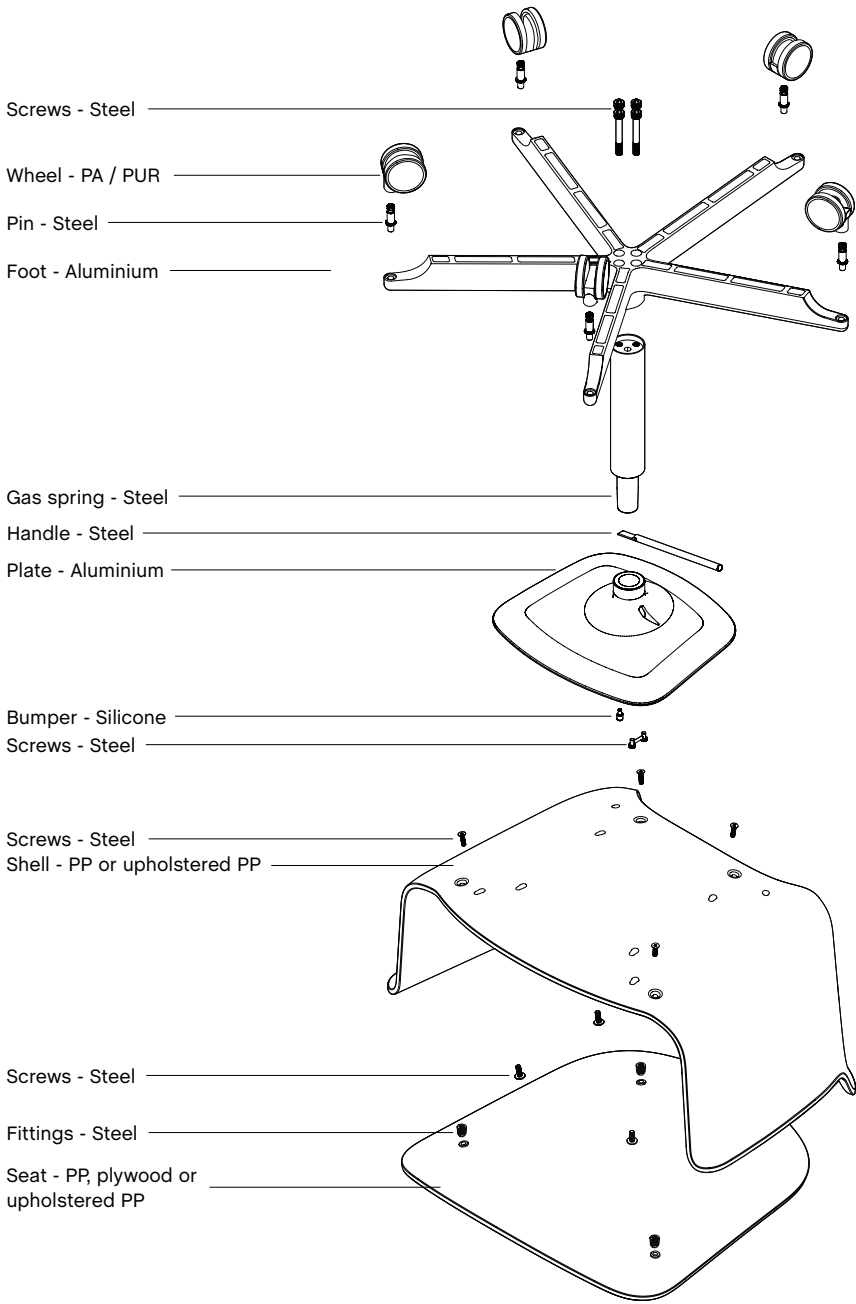



LAYOUT ARMCHAIR 251 | 252 | 253 | 254

STEP 1
Turn the chair upside down

STEP 2
Detach the seat from the shell by unscrewing the screws located at the bottom of the shell. Then, remove any fittings attached to the seat

STEP 3
Return the chair to its upright position

 
STEP 4
Unscrew the screws and separate the shell from the frame

STEP 5
Detach the aluminium plate from the swivel column by applying vertical force

STEP 6
Detach the foot from the swivel column by unscrewing the screws located at the bottom centre of the foot

STEP 7
Remove the gliders from the foot

DISASSEMBLY

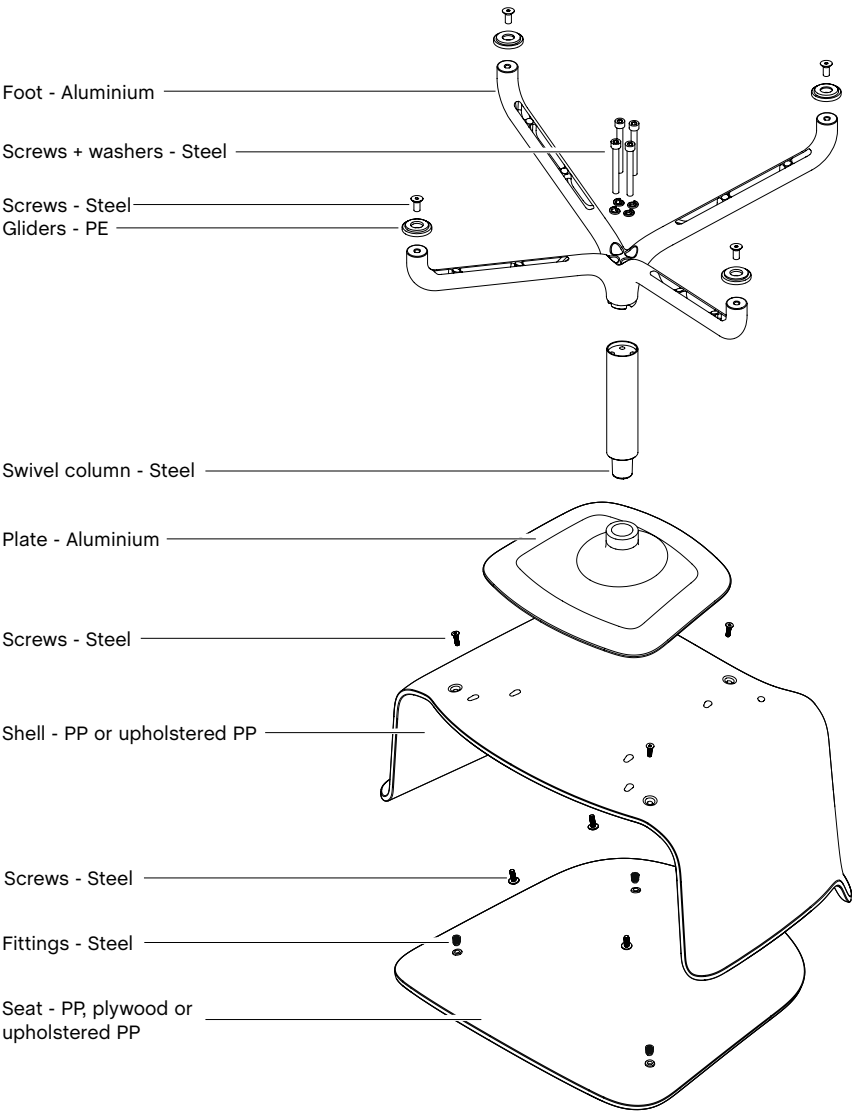

If your version is 253 or 254, with an upholstered cover or seat, please refer to the disassembly guide further down in this document for instructions on how to proceed.



LAYOUT ARMCHAIR 261 | 262 | 263 | 264

STEP 1
Turn the chair upside down

STEP 2
Detach the seat from the shell by unscrewing the screws located at the bottom of the shell. Then, remove any fittings attached to the seat

STEP 3
Return the chair to its upright position

 
STEP 4
Unscrew the screws and separate the shell from the frame

STEP 5
Detach the aluminium plate from the swivel column by applying vertical force

STEP 6
Detach the foot from the swivel column by unscrewing the screws located at the bottom centre of the foot

STEP 7
Remove the wheels and steel pin from the foot

DISASSEMBLY

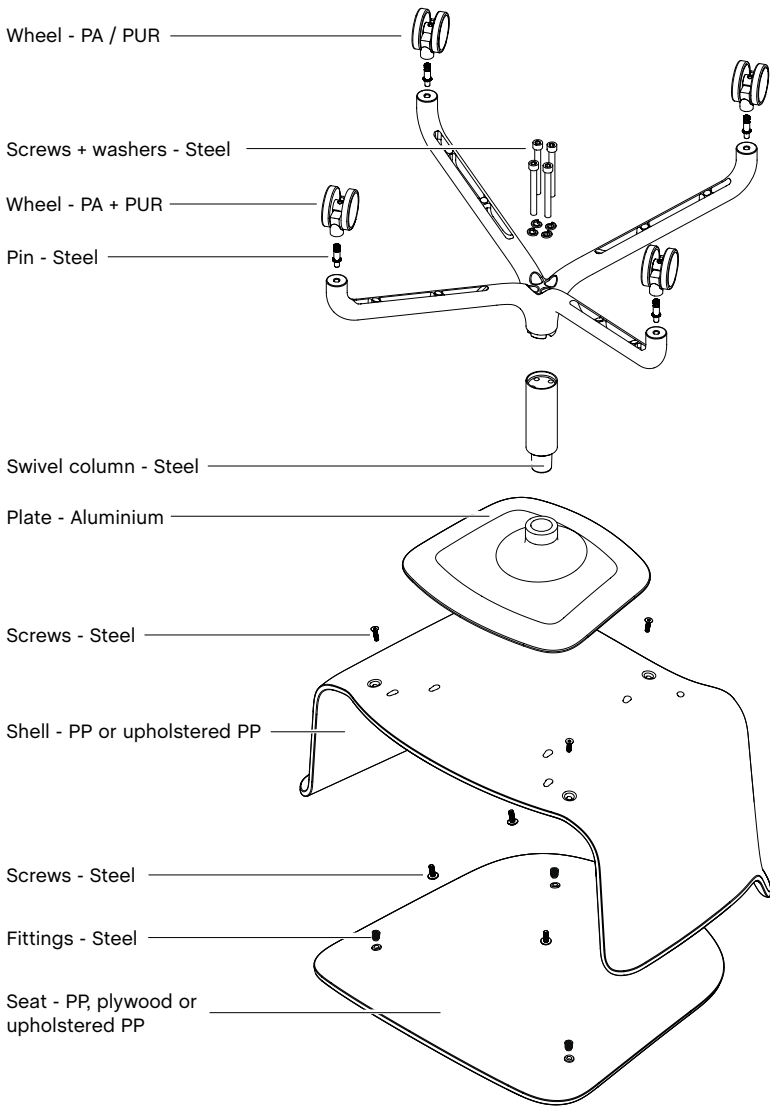

If your version is 263 or 264, with an upholstered cover or seat, please refer to the disassembly guide further down in this document for instructions on how to proceed.

 


LAYOUT SEAT UPHOLSTERY

STEP 1
Once the seat is removed from the frame, turn it upside down

STEP 2
Cut the string with scissors. Separate the PU foam and textile from the seat

DISASSEMBLY

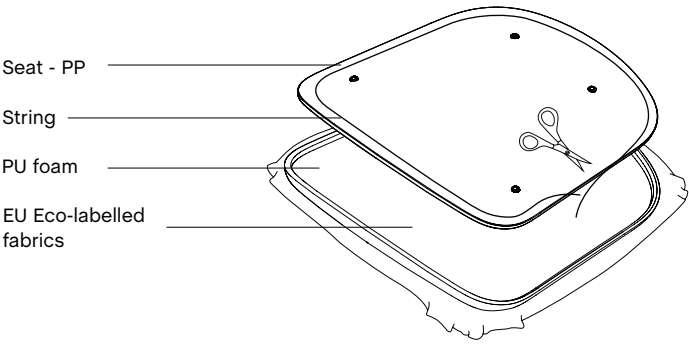




LAYOUT FULL UPHOLSTERY

STEP 1
Release the two Velcro flaps to reveal both ends of the zipper.
Then open the zipper, ensuring it is completely unzipped at the end

STEP 2
Release the Velcro securing the cover to the shell, then pull the cover off

 DISASSEMBLY

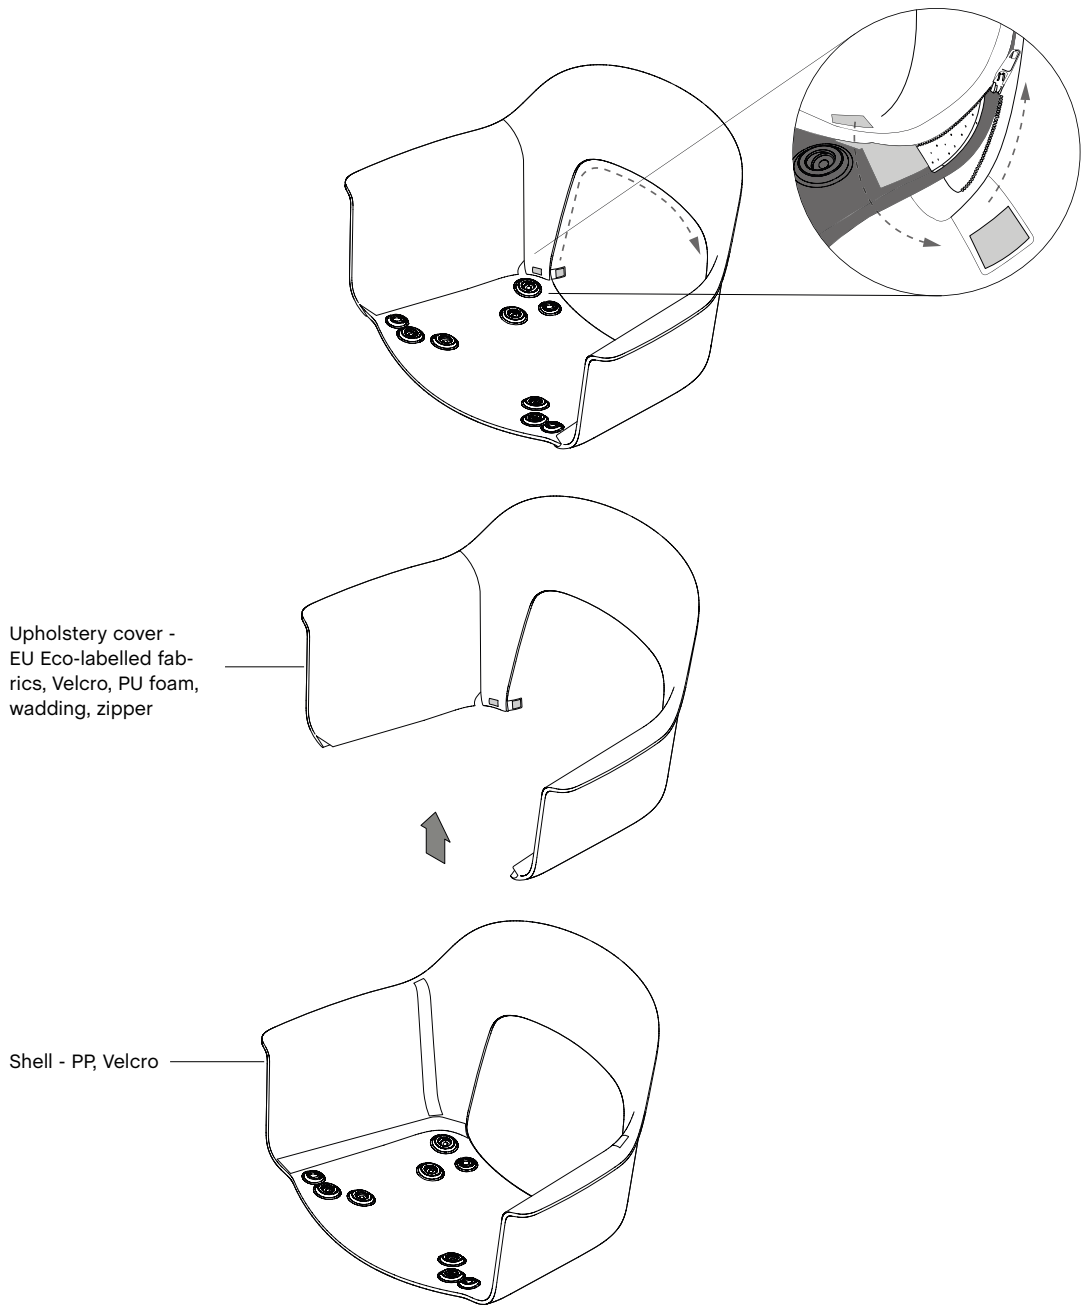



DEVILLE TABLE

 
STEP 1
Turn the table upside down. Unscrew the base from the column and remove all the glides with their screws

STEP 2
Detach the tilt cross from the tabletop by unscrewing the eight screws

STEP 3
Tilt cross and column have been removed from the tabletop, open the handle and take out the stopper. Unscrew the screw that connects the adaptor to the column. Remove the two axes and four plastic sleeves (you may need to use force). Then, unscrew and remove the remaining parts, including the bumper

STEP 4
Take apart the three main tabletop parts by unscrewing the support cross from the sheet metal and the rim. Remove all sleeves and spacers

DISASSEMBLY

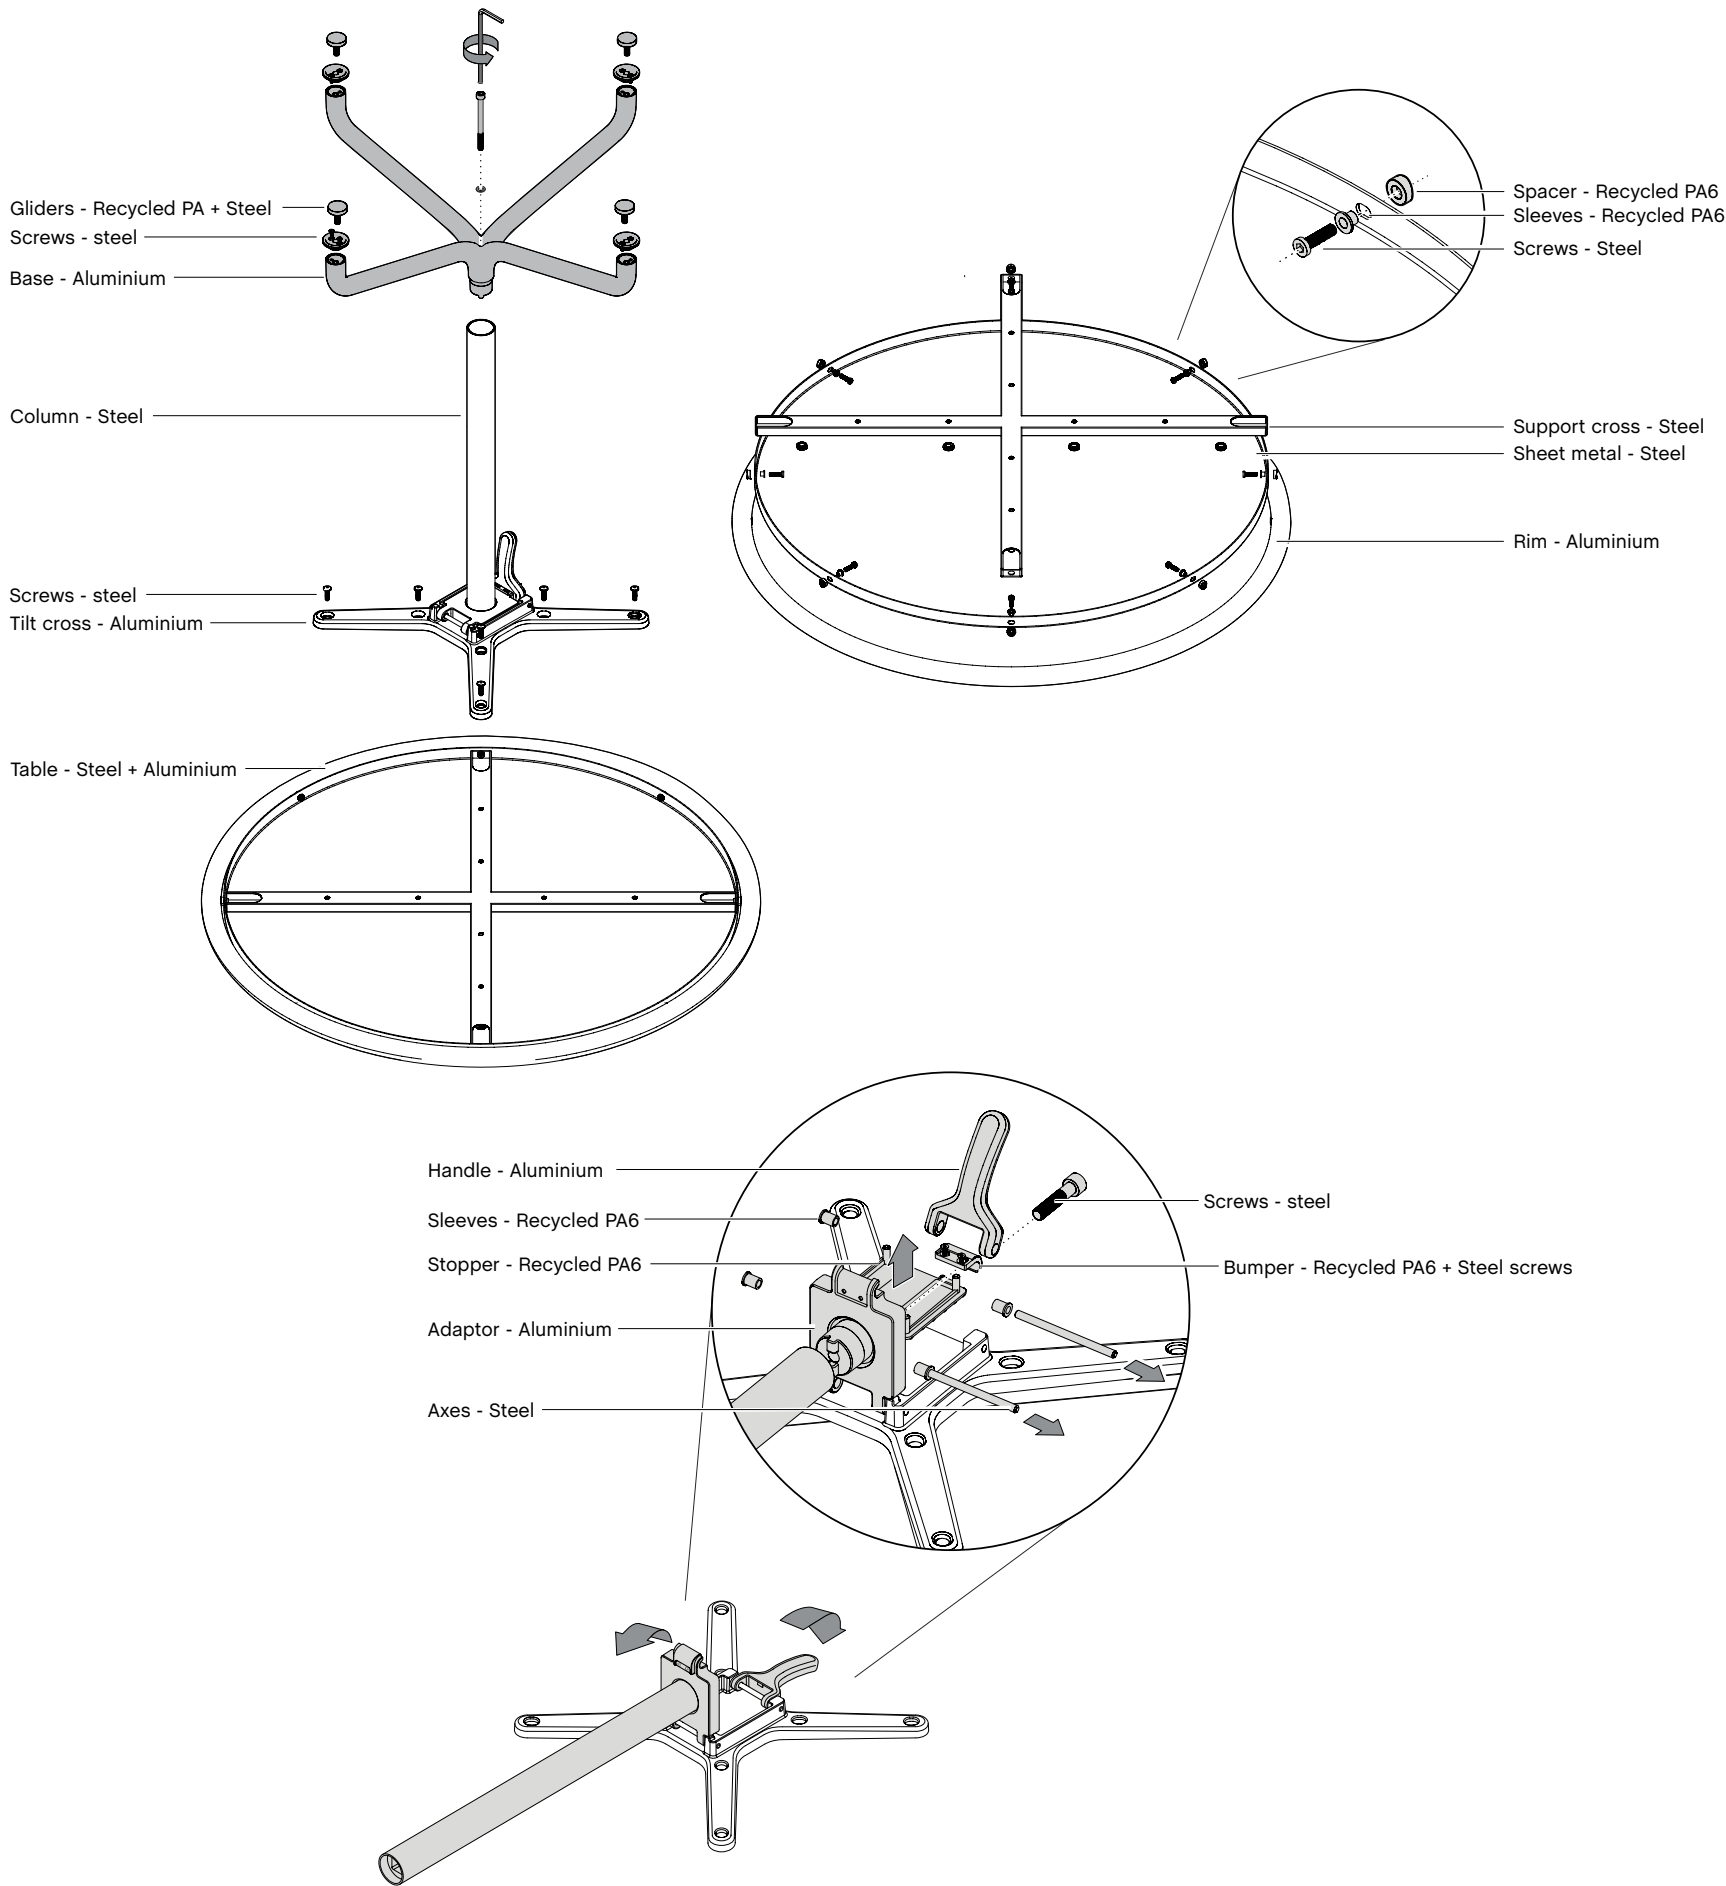



PACK CHAIR 10

 
STEP 1
Turn the chair upside down

STEP 2
Remove the screws that fix the legs to the seat

STEP 3
Detach the backrest from the back legs by pulling it firmly, and remove all inserts and receivers by unscrewing the screws

STEP 4
Remove the cap from the gliders. If the seat has an upholstery cover, please move to next page

DISASSEMBLY

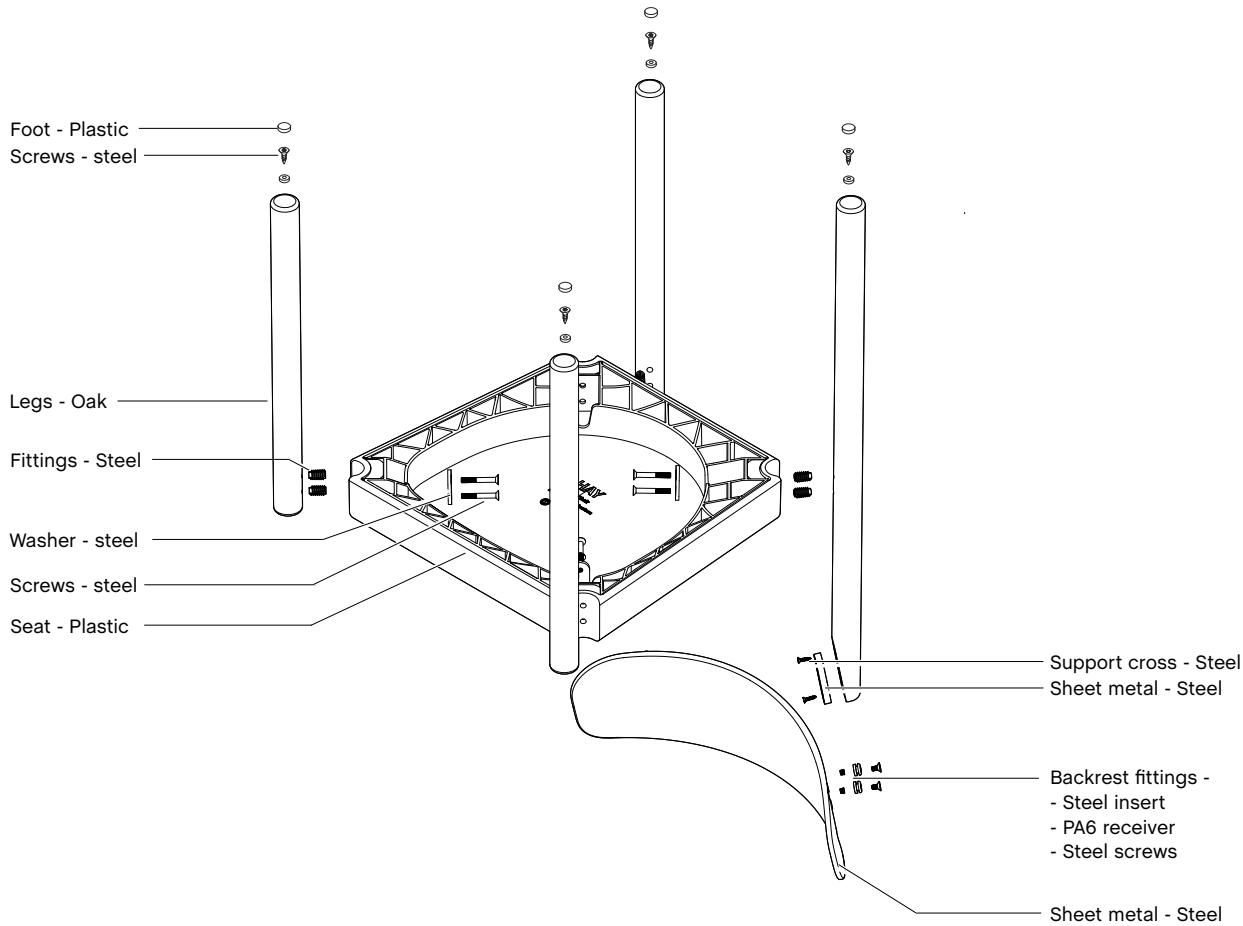





PACK CHAIR 11 | SEAT COVER

STEP 1
Locate the wire loops in two corners of the cover. Pull them upwards to release the black profile from the groove. Then remove the rest of the cover

STEP 2
After the seat cover is removed, use scissors to remove the stitched plastic OKE profiles

STEP 3
Separate the PU foam from the textile cover

  DISASSEMBLY

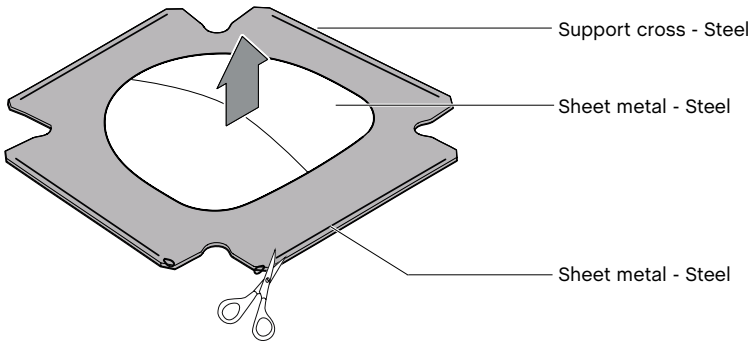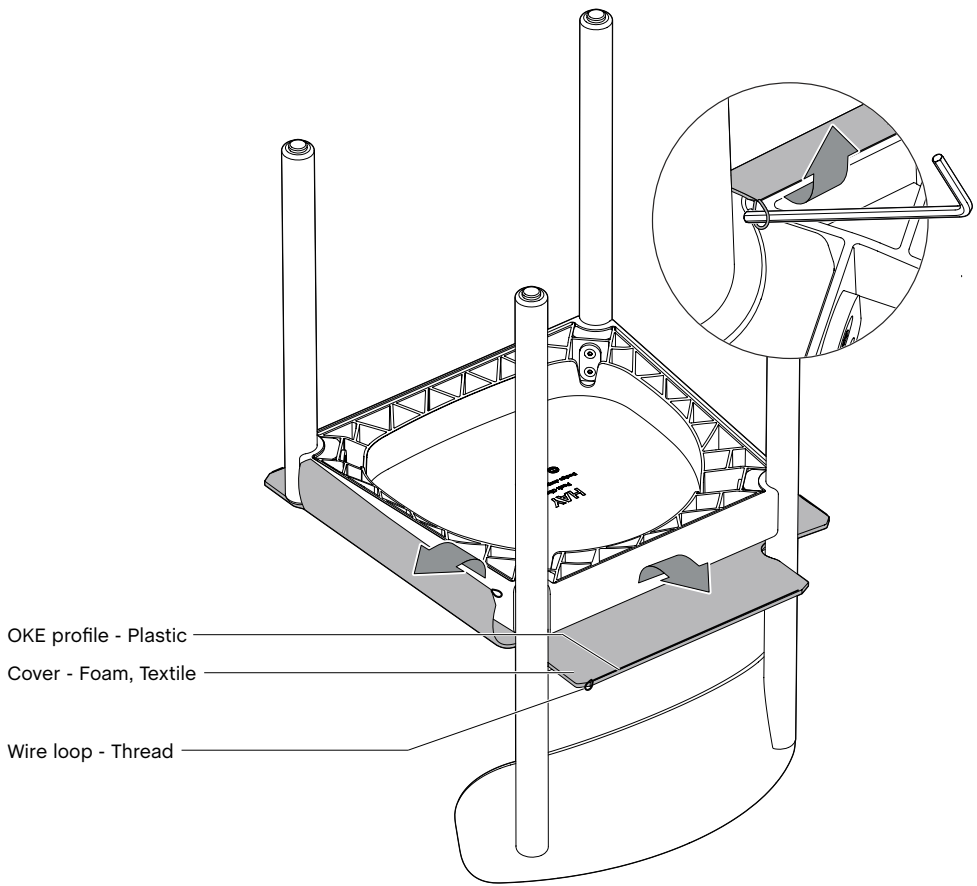



BACKFLIP CHAIR

 
STEP 1
Remove the glider cap

STEP 2
Unscrew the glider receiver

STEP 3
Unscrew all screws from the chair

STEP 4
Remove the mechanism parts

DISASSEMBLY

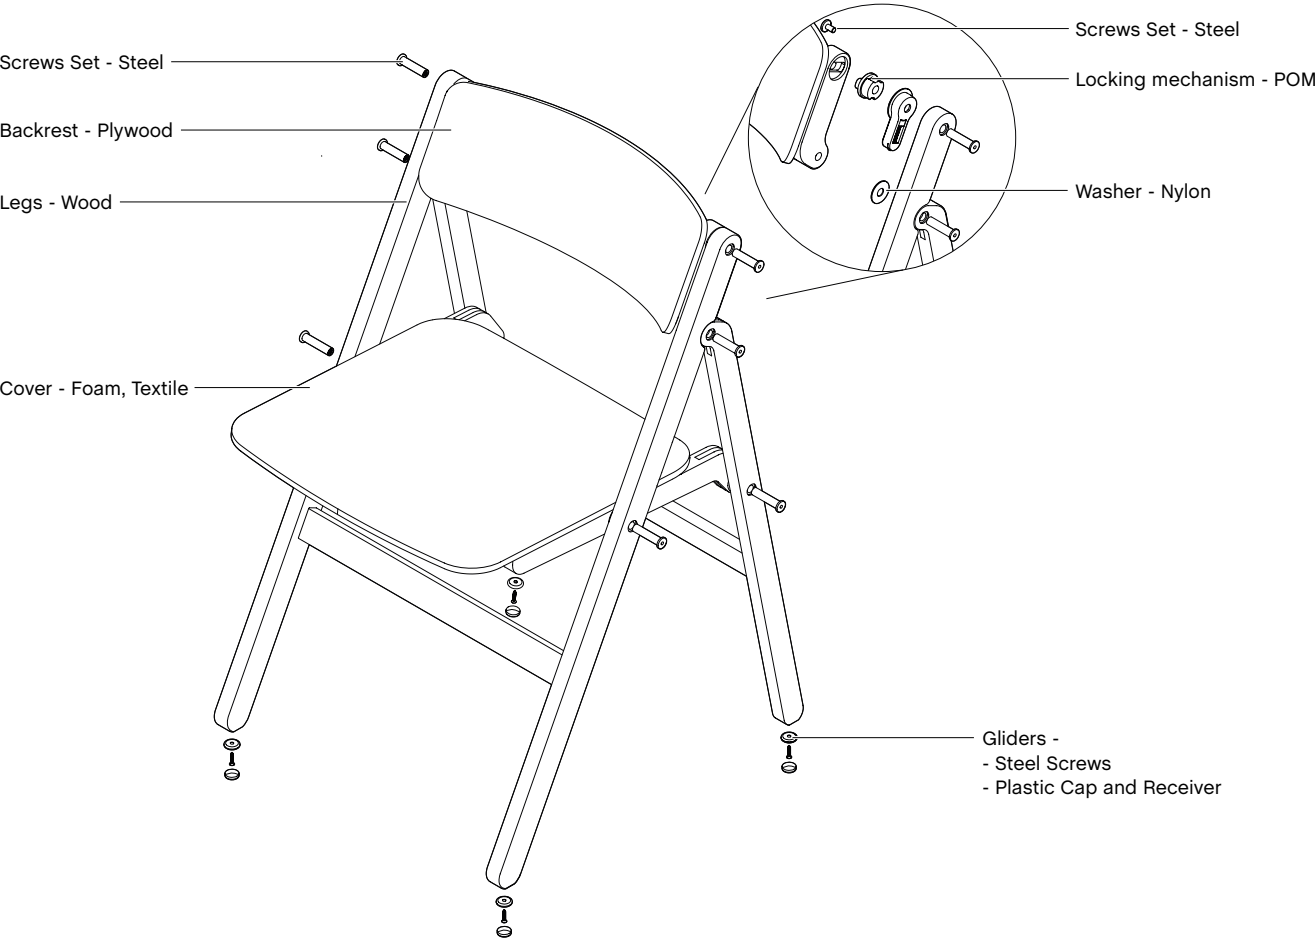



CHISEL SEATING COLLECTION

 
STEP 1
Turn the chair upside down

STEP 2
Remove all screws located underneath the chair

STEP 3
Remove the gliders from the legs

This guide applies to all Chisel Seating Collection models.

DISASSEMBLY

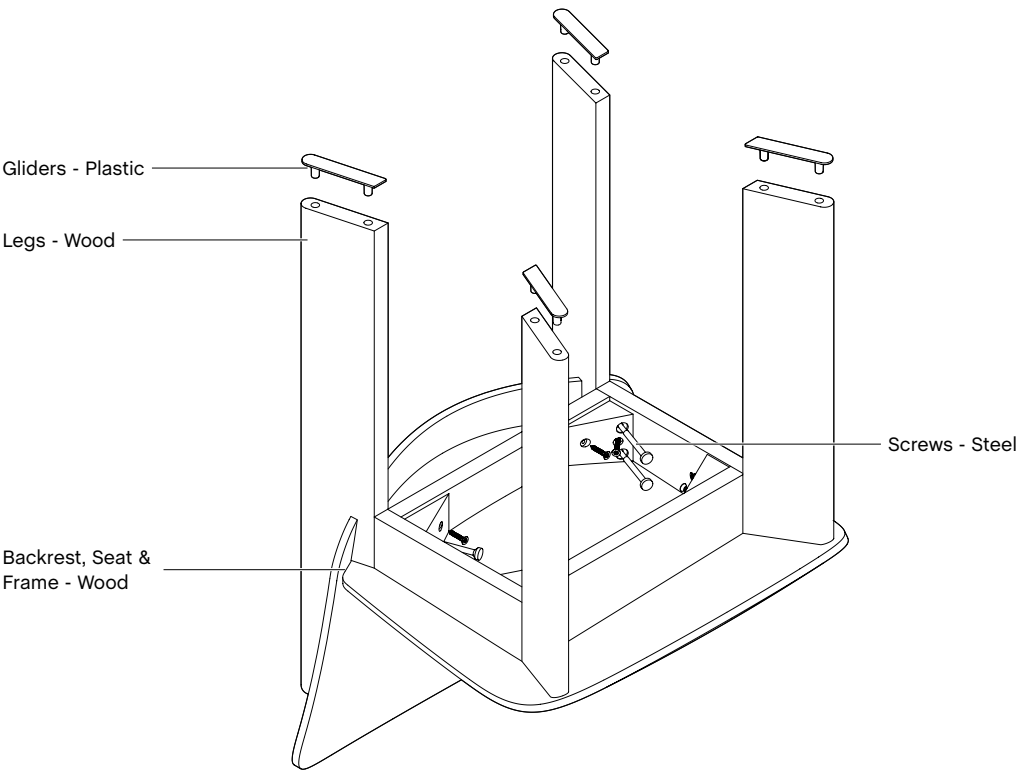



CHISEL 20 & 25 TABLE

 
STEP 1
Turn the table upside down

STEP 2
Unscrew all the screws holding the legs and apron

STEP 3
Separate the metal bracket on the legs by unscrewing the screws

STEP 4
Remove the gliders from the legs

DISASSEMBLY

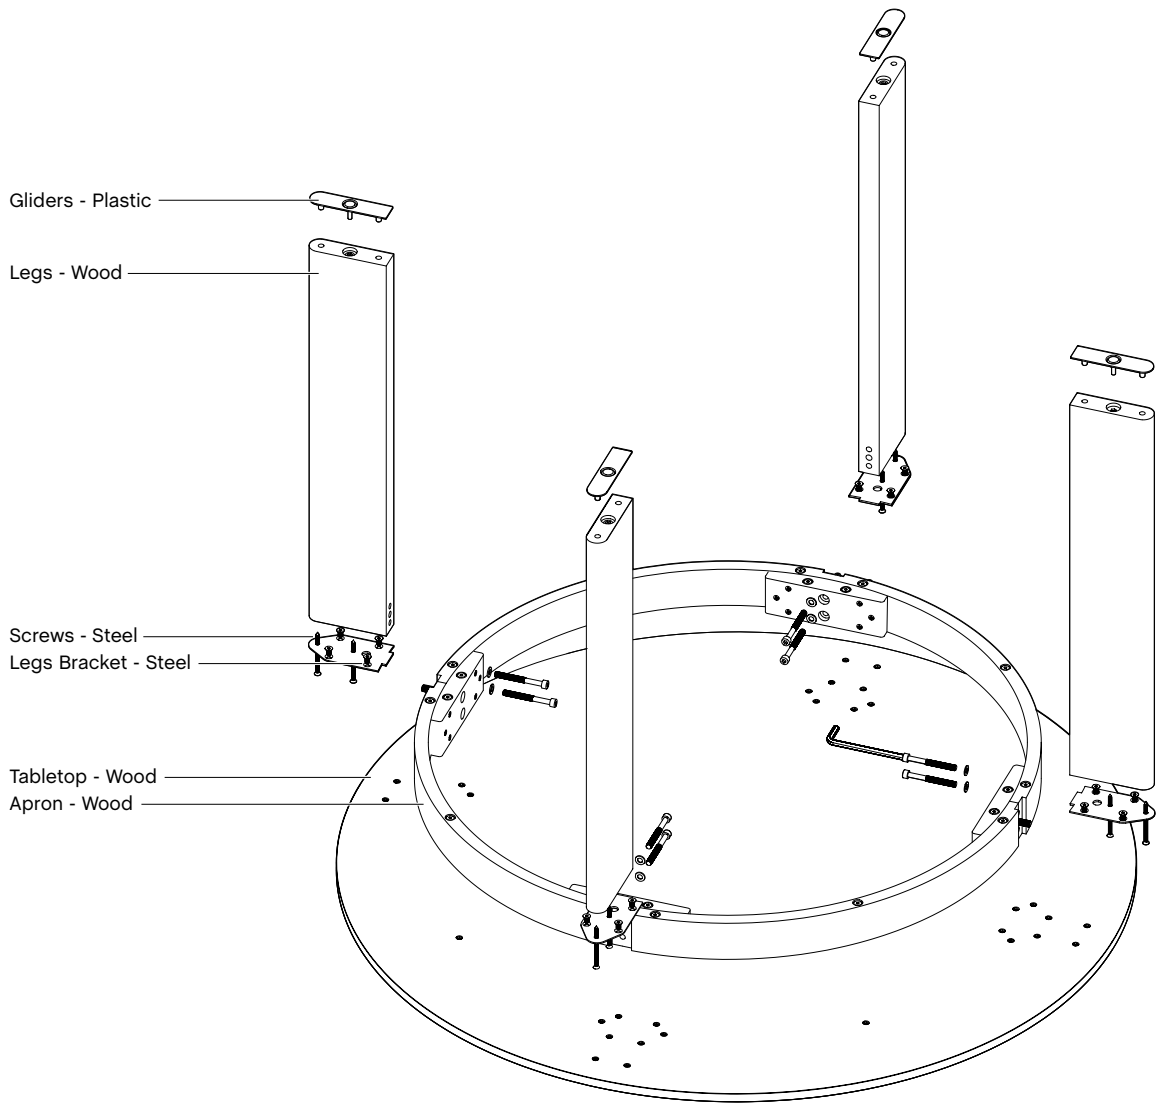



CHISEL 29 TABLE

 
STEP 1
Unscrew the screws that hold the metal bracket to the column

STEP 2
Once the tabletop is separated from the column, remove the metal bracket from the tabletop

STEP 3
Turn the column an the bottom base upside down and unscrew the screws. to separate the plastic glider and to separate the column

STEP 4
The column consists of three sections secured by a locking mechanism. To disengage the lock, pull the sections upward or downward to separate them

DISASSEMBLY

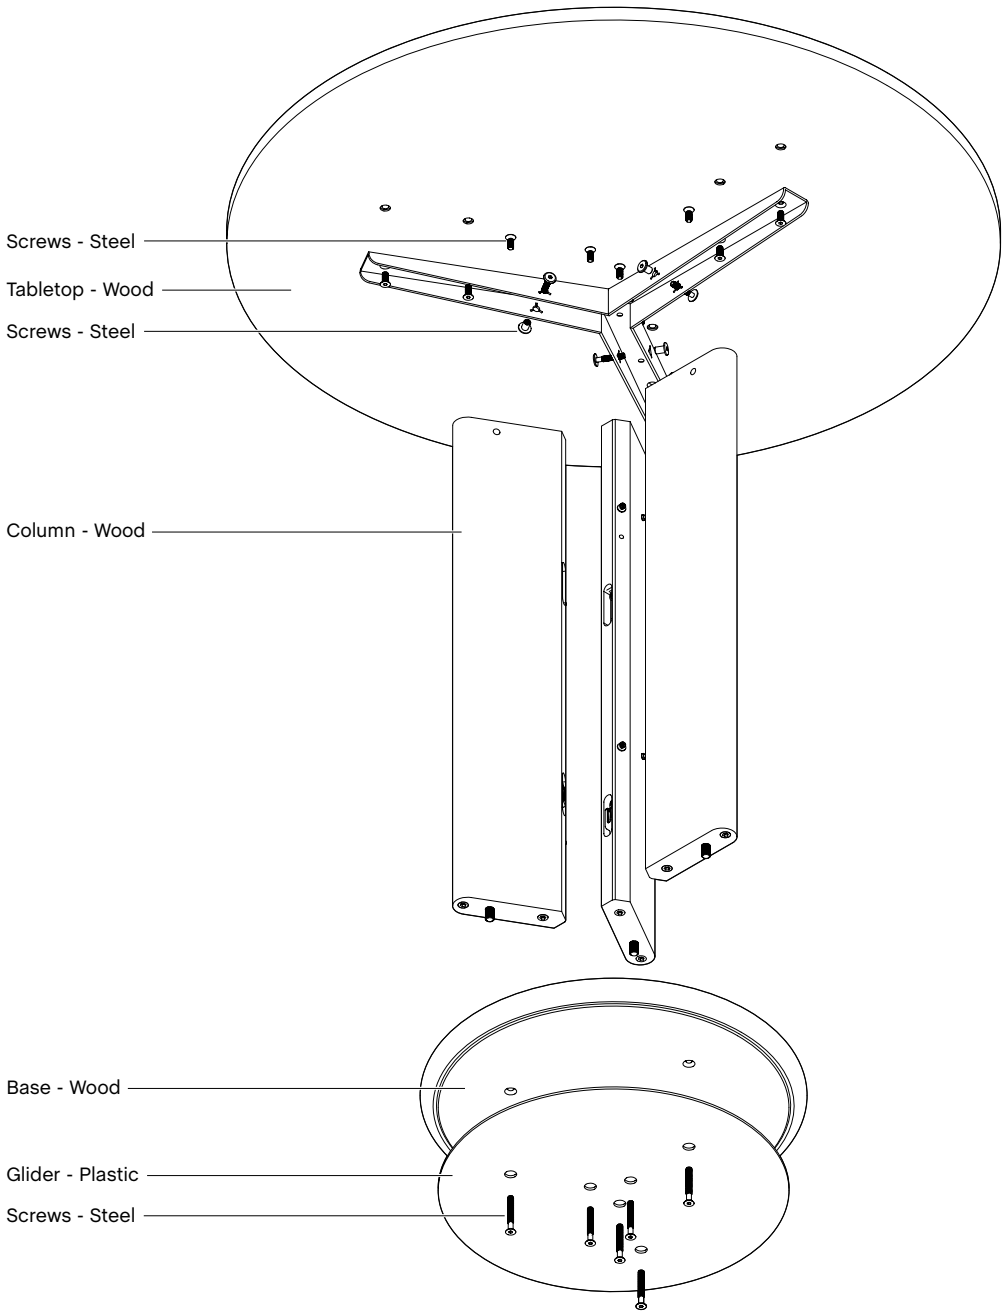



CHISEL 630 TABLE

STEP 1
Turn the table upside down. When turning it, grab the table by the frame

STEP 2
Remove all the legs by unscrewing the screws that attach them to the apron. Then remove the gliders

STEP 3
To separate the two parts of the tabletop, unscrew the screws that attach the sliding system to the tabletop. Remove all the locks and brackets that are attached

STEP 4
To finalize, unscrew the tabletop leaves from the rod of the tabletop leaf system

STEP 5
Then remove the sliding system attached to the apron with screws, and unscrew the screws that hold the apron frame together

DISASSEMBLY

