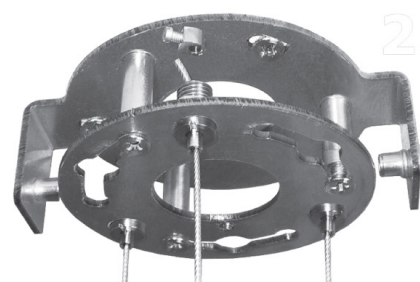
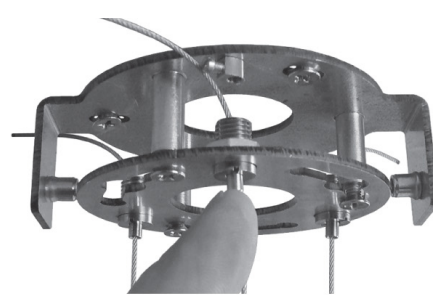
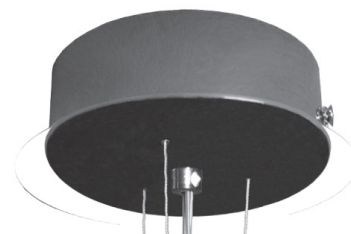


AFELIO


OFF
1

2

3

4

5

6


- 1 - Fissare la staffa al soffitto.
- 2 - Inserire il disco porta cavi ruotando sino a fine corsa, avvitare le viti. Non portare il disco porta cavi in alto insieme al rosone perchè i cavi si sfilano.
- 3 - Regolare l'altezza facendo scorrere i cavi all'interno del fermacavo.
- 4 - Per regolare l'altezza verso il basso agire sul perno del bloccacavo spingendolo verso l'alto e tirando il cavo in basso, dopo regolazione tagliare il cavo in eccedenza.
- 5 - Far scorrere il rosone in alto per riagganciarlo alla staffa con le due viti precedentemente svitare.
- 6 - Per regolare la lunghezza del cavo elettrico agire sul grano posto nel giunto sotto il rosone, svitare per farlo scorrere, riavvitare per bloccarlo.



- 1 - Fix the bracket to the ceiling.
- 2 - Insert the disk containing the cables turning until it stops and then screw the screws. Do not bring the disk containing the cables with the ceiling canopy because the cables would get unthreaded.
- 3 - Adjust the height sliding up the cables through the cable stoppage.
- 4 - To low down the height push up the support of the cable stoppage and pull down the cable in excess.
- 5 - Slide up the ceiling rose to hook it to the bracket.
- 6 - To adjust the length of the electric cable, unscrew the stoppage under the ceiling rose, then screw it until it stops.