

The size of the loop you make, determines the height of THE BOUQUET.

1. Unscrew and separate one of the wooden buttons to expose the metal rod end.
2. Lift the bouquet to create a loop wherever you wish on the braid and hold in place.
3. Push the metal rod end through all layers of the braids and hold in place.
4. Screw the loose wooden button onto the metal rod until it is fastened onto the braid.

If you can, check the height of THE BOUQUET before you fit the other wooden button.

The oak cord adjuster allows you to adjust the height of the braided linen cord and adds an extra design detail.

FITTING THE OAK CORD ADJUSTER

- Når lampen er hængt op kan skjærmene flyttes rundt/justeres for at give det ønskede udtryk.
- Lampen er monteret med en fletning på ca. 1,5 meter. Sikkert lampen skal hænges et sted med lavere loftshøjde benyttes den medfølgende tilbehørsdel.
1. Start med at skrue den ene træknap af.
 2. Fletningen vindes op med et loop.
 3. Igenem de to lag fletninger skubbes metalstaven hvorefter træknapen monteres igen.
 4. Loop'en kan gøres større eller mindre alt efter hvor højt lampen ønskes.

TILPASNING

MODEL 130 3/5/7

Denne smukke moderne lysekroner THE BOUQUET findes med både 3, 5 eller 7 skærme.

Designer Sinja Svarrer Damkjær er inspireret af naturens forårsbebudere, tulipanerne. De store bløde hoveder som gør sig smukt i store buketter såvel som i solitær form.

Ledningerne er valgt med en hørøverflade for at understrege tilknytningen til det naturlige univers.

I lampeserien THE BOUQUET findes desuden en pendel med en enkelt skærm.


This beautiful modern chandelier called THE BOUQUET is available with either three, five or seven lamp-shades.

Designer Sinja Svarrer Damkjær was so inspired by how big beautiful soft tulip petals, blossoms in the Spring. She even symbolically detailed the flower stem, as a braided linen covered electrical cord.

The series also includes a single pendant.



THE BOUQUET CHANDELIERS
MEDIUM · LARGE · X-LARGE

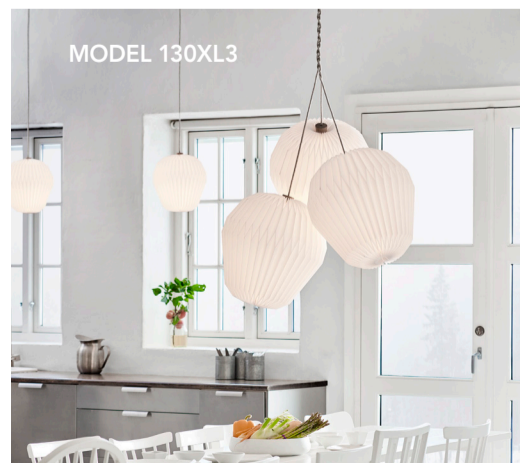

MODEL 130XL3



MODEL 130M7

Instruktion for Model 130 3/5/7

INDHOLD

THE BOUQUET Lysekroner med 3/5/7 skærme.
1,5 meter flettet hørledning samt 3 meter hvid tilslutningsledning, monteret i en baldakin.

LYS

Anbefalet max. wattage:
130M3/5/7: LED-/Sparepære max. 10 W, E14
130L3/5/7: LED-/Sparepære max. 10 W, E27
130XL3/5/7: LED-/Sparepære max. 15 W, E27

NB: Ved for højt wattforbrug kan det give varmeproblemer i lampen og skærmen ødelægges.

VEDLIGEHODELSE

Ved evt. behov for rengøring inden i skærmen foregår afmontering på samme måde som ved montage af lyskilden. Skærmen holdes ren ved aftørring med blød klud eller støvbørste, f.eks. **LE KLINT DUST BUSTER**.

DETALJERNE

Da fletningen til hver lampe er lavet i hånden, vil der kunne opstå små varianter, det er en del af udtrykket. Fletningen giver mulighed for selv at arrangere skærmene som ønsket for at give præcis den buket man har lyst til i sit hjem.

UDPAKNING & MONTAGE

Alle pap-indlæg tages forsigtigt op af kassen. Løft alle skærme, samt ledning ud af indlæggene og stil/læg dem på en plan overflade.

Følg nedenstående instruktion for montage:

1. De flettede ledninger er monteret med en baldakin og 3 meter tilslutningsledning.
2. Montér passende pærer i alle fatninger.
3. Skærmen åbnes forsigtigt i toppen ved at skubbe/trække ud med fingrene. Den er lukket med en speciel elastik, så det er muligt at udvide den uden den springer.
4. Skub pæren, fatning og akrylskive ned i skærmen og lad den herefter lukke sig om trækeglen.
5. Gentag for alle 3, 5 eller 7 skærme.
6. De to små skruer løsnes udvendigt på baldakinen, den medfølgende unbrakonøgle (str. 2) kan benyttes til dette.
7. Nu kan baldakinen trækkes ned af de flettede ledninger.
8. Monter nu den gennemsigtige akryldel på loftet via de 3 huller.
9. Baldakinen skubbes op på plads.
10. Fastgør den med de to skruer og tilslut ledningen til el-udtag.

NB: Baldakinen er ligeledes forberedt til direkte montage over el-udtag (LK loftsdåse), dette er gældende for det danske marked. Såfremt der er tvivl om fremgangsmåden, kontakt din autoriserede el installatør.

Instructions for Model 130 3/5/7

CONTENTS

THE BOUQUET Chandeliers - 3/5/7 lamp-shades.
1.5 m braided linen cord with 3 m white electric wire, within a canopy (with small allen key)
Oak Cord Adjuster.

LIGHT

Light bulbs not included.

Maximum Recommended Wattage for Models:
130M3/5/7: LED-/CFL bulb max. 10 W, E14
130L3/5/7: LED-/CFL bulb max. 10 W, E27
130XL3/5/7: LED-/CFL bulb max. 15 W, E27

NB: If wattage is too high, heat from the light-bulbs can damage the lamp-shades.

MAINTENANCE

To clean the shades, you can use **LE KLINT DUST BUSTER**, a damp cloth or a soft brush.
To remove the shades - follow instructions 4 & 5 as you would fit or replace a lightbulb.

DETAILS

The braid for each lamp is handmade, so there will be some small inflections on the braid, which is part of the overall natural look of the complete design. The braid allows you the freedom to adjust each shade to your liking.

UNPACKING

Lift out and remove all contents within the packaging, from the box and lay on a flat surface eg: table top. Carefully remove the electrical linen braided wire and all shades from their individual packaging.

Please read through all instructions and carefully observe all photos, before you start to assemble your chandelier.

ASSEMBLY

We recommend that you fit the light bulbs and shades one at a time to avoid any breakages.

1. Unwind the braided cord then insert and fit a lightbulb into each socket.
2. Use your fingers on both hands to gently open and expand the top of the shade while holding the light bulb.
3. Carefully push the lightbulb, socket and clear acrylic ring, inside the shade and release. The shade will automatically close around the small wooden cone.
4. Repeat steps 1 – 3 to fit all 3,5 or 7 lamp shades.
5. Once all the lampshades are fitted, gather all to one side to prepare the canopy for the electric connection.

ELECTRICAL CONNECTION

NB: the white electric power cord can be attached to the electrical outlet, either directly through the centre of the acrylic plate or through the side hole of the canopy before connecting to the electrical outlet.

If in doubt please contact a qualified electrician.

6. Use the included allen key, screwdriver or a size 2 hand drill bit to loosen the 2 small screws on the sides of the canopy.
7. Once loosened, pull the canopy down the linen braided cord away from the electrical components.
8. Push the electrical cord through the side-hole on the canopy then mount and fasten the acrylic plate with the electrical components onto the ceiling via the 3 holes.
9. Push the canopy up the braid and secure the two screws to fasten in place.
10. Connect the white electric power cord to the electrical outlet.
Adjust each of **THE BOUQUET** lampshades as you wish.

