


T1456. 01

T1456. 20

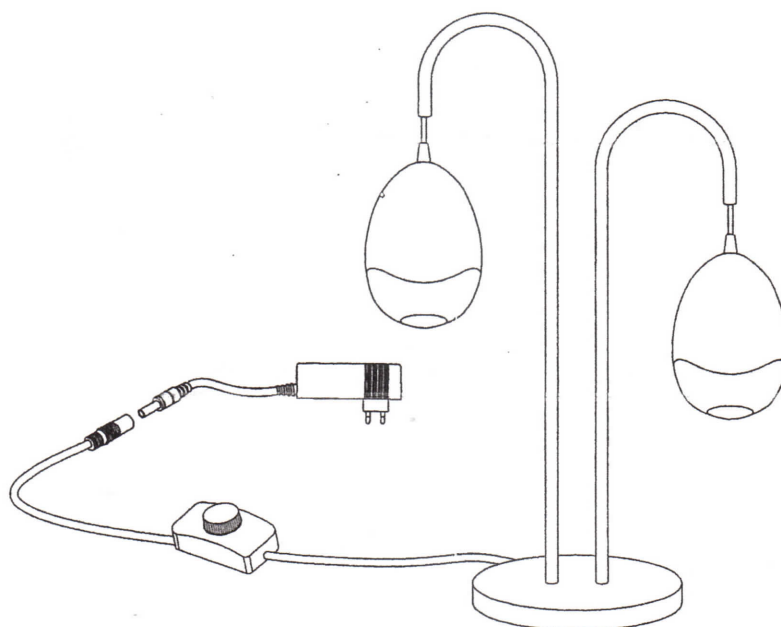


1. This light fitting operates at a normal supply voltage of 220-240V.
2. When changing the bulb or fuses, always switch off at the mains and allow the old bulb to cool down before handling.
3. If the external flexible cable of the lamp is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.


How to clean the inside of glass

Step A: Disassemble the head

01

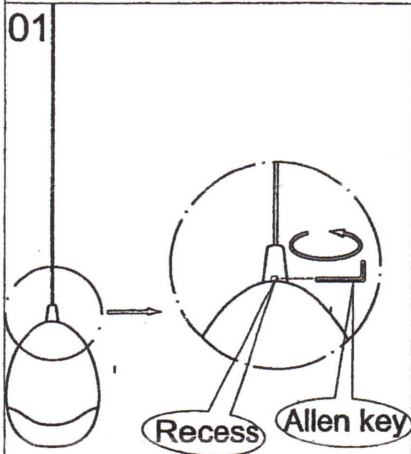


02

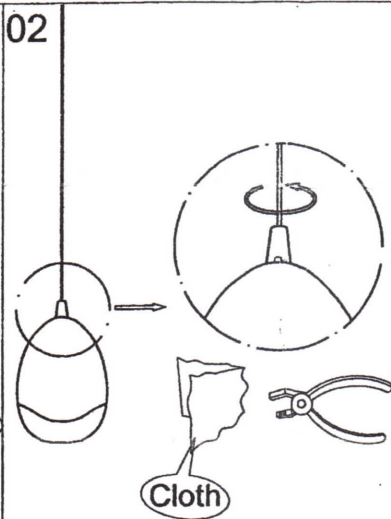

03




04

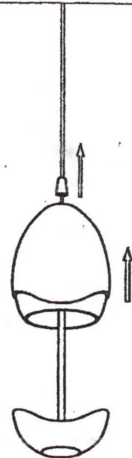

Step B: Wipe the inner surface of glass with soft clean dry cloth gently

Step C: Reassemble the head


05

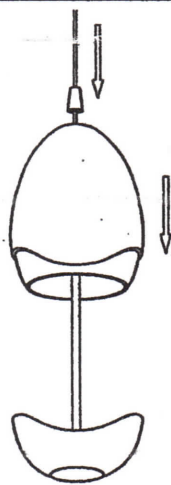

06



07

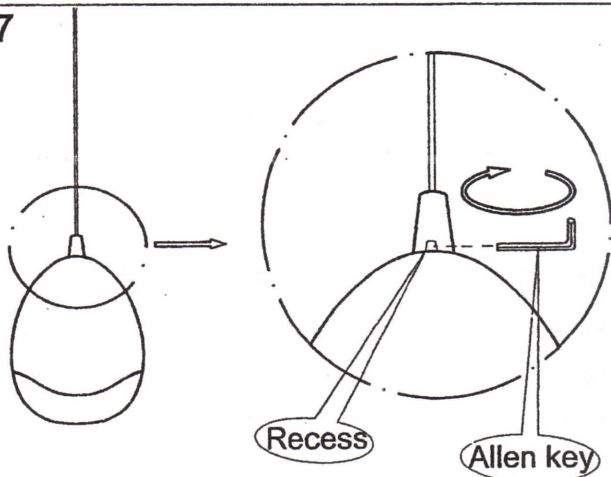

08

