

1. This light fitting operates at a normal supply voltage of  $220^{\sim}240\text{V}$ . 2. When changing the bulb or fuses, always switch off at the mains and allow the old bulb to cool down before handling.