

- 1. This light fitting operates at a normal supply voltage of 220-240V.
- 2. When changing the bulb or fuses, always switch off at the mains and allow the old bulb to cool down before handling.

## How to clean the inside of glass

