

Instructions

Flowerpot VP12 Verner Panton 1968



Please read these instructions carefully and retain them for future reference to ensure the product is used correctly. For your own safety, please study each step of this instruction manual first. &Tradition is not responsible for any faults or damage caused by not following these instructions correctly. Do not modify this product in any way. If you have any questions or comments, please do not hesitate to contact us by mail on: info@andtradition.com

&Tradition®

Safety precautions

- Dispose of plastic bag from packaging immediately and keep out of reach of children.
- The lamp is only intended for indoor use.
- Do not place the cable within reach of small children or anywhere there is a risk of it becoming a trip hazard.
- If the external cable or cord of the lamp is damaged, it must be replaced by the manufacturer or a similarly qualified person to avoid any potential hazards.
- Consult a professionally qualified electrician if in any doubt.
- Keep the product well out of reach of children.

Cleaning instructions

- Wipe surface of the shade with a dry cloth.
- Do not use any abrasive cleaning tools such as steel wool, scouring sponges or stiff brushes.
- Never use strong cleaning agents such as white spirit, turpentine, household glass cleaner or cellulose thinners.


For indoor use only
E27 Maximum 40W
Bulb not included



Contents

A Lamp

B Bottom shade

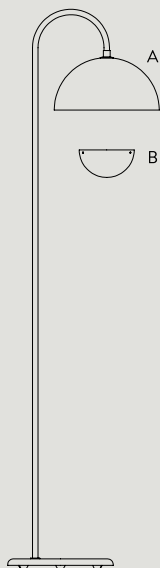

Tools needed


- Bulb type E27

&Tradition®

Please follow steps 1 to 3 to assemble the product.

Step 1 / 3


Install the light bulb.

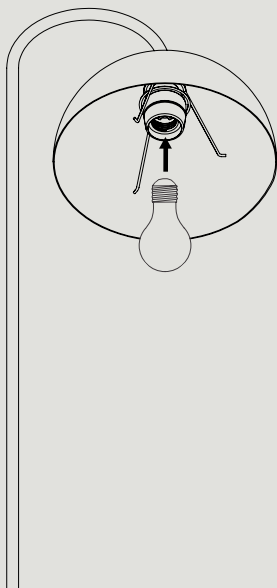

&Tradition®


Step 2 / 3

Mount the bottom lamp shade onto the three pronged arms inside the shade.

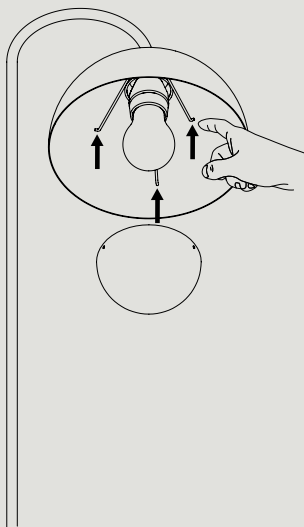

Step 3 / 3

Insert the plug into a wall socket and use the switch on the cord to turn the lamp on and off.

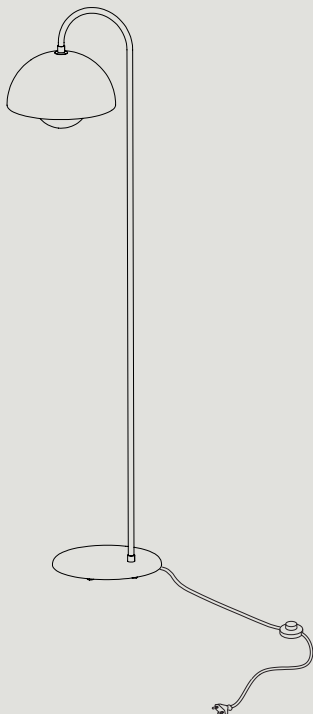

&Tradition®

