QUOIZEL 6 CORPORATE PARKWAY 600SE CREEK, SC. 29445

Elstead Lighting Ltd Elstead House, Mill Lane, Alton , Hampshire GU34 2QJ Customer Service

T:-+44 (0)1420 82377. www.elsteadlighting.com

Assembly Instruction Sheet #IS-UPGO5004IS For Style **UPGO5004IS**

strippers, electrical tape, safety glasses. Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire

Bulb Recommended: (4) Frosted G9 Halogen 40W Maximum (supplied) EstimatedAssembly Time: 30-45 minutes

ordamaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts. content list and diagrams below to be sure all parts are present. If any parts are missing **Preparation:** Identify and inspect all parts before beginning installation. Check package



Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.


Do not touch the bulb with bare hands use a cloth or glove.

Package Contents

0	z	Z	Г	ス	J	_	I	G	п	ш	D	C	В	Þ	Part	
G9 Bulb	Bulb Shield	Diffuser	Socket Collar	Shade	Socket Assembly	Fixture Loop	Fixture Chain	Canopy Lock Ring	Canopy Chain Loop	Ceiling Canopy	Hex Nut	Lock Washer	Nipple	Crossbar	Description	
4 pcs.	4 pcs.	4 pcs.	4 pcs.	4 pcs.	1 pc.	1 pc.	1 pc.	1 pc.	1 pc.	1 pc.	2 pcs.	2 pcs.	1 pc.	1 pc.	Quantity	

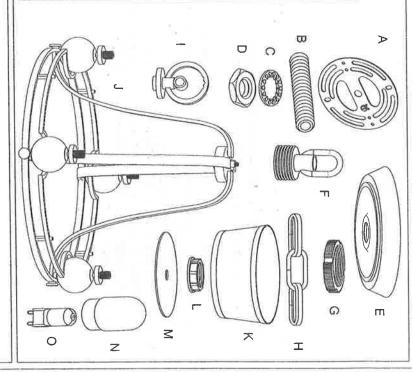


Thank you for purchasing a Quoizel product

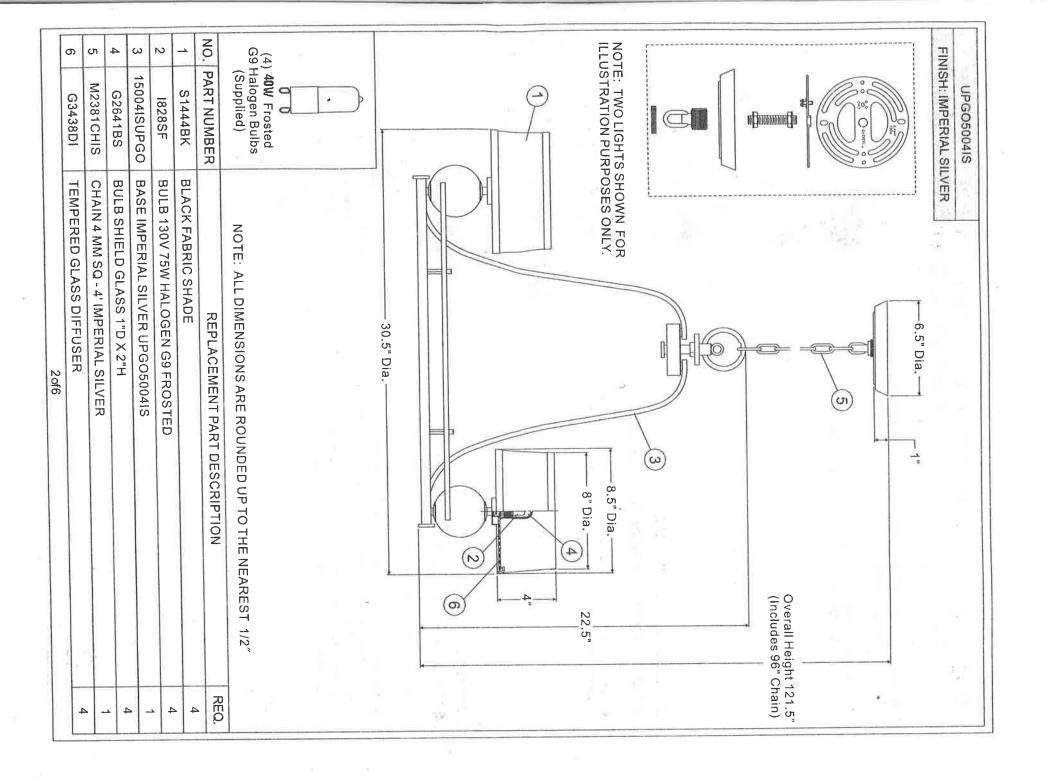

Assembly Instruction For Style **UPGO5004IS** Sheet #IS-UPGO5004IS


STEP 1 -Assembly Assemble Fixture Loop to Socket

⋗ snug. Thread Fixture Loop (I) onto the nipple on the top center of the Socket Assembly (J). Hand tighten until

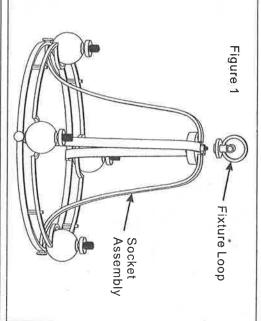

STEP 2 Attach Crossbar to Outlet Box


₽ Secure the Crossbar (A) to the outlet box with outlet box screws (not supplied). Tighten until snug.

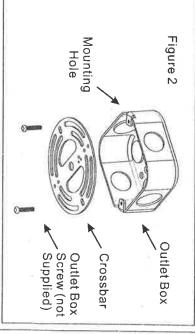

STEP ယ Attach Nipple to Crossbar

- P (B). Thread one Hex Nut (D) onto the top end of the Nipple
- œ Place one Lock Washer (C) over the top end of the Nipple (B) and then thread the Nipple (B) into the center lock hole of the Crossbar (A).

 Using pliers, thread the Hex Nut (D) against the Crossbar (A) and hand tighten until snug.
- Ç

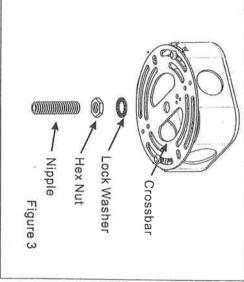


Thank you for purchasing a Quoizel product

Assembly Instruction For Style **UPGO5004IS** Sheet #IS-UPGO5004IS

ST m U 9 1 **Attach Shade** and Diffuser

- ⋗ Place the Diffuser (M) over the Socket with Sandblasted surface upward and secure with the Socket Collar (L). Hand tighten until snug.

 Seat the Shade (K) onto the Diffuser (M).
- Ď

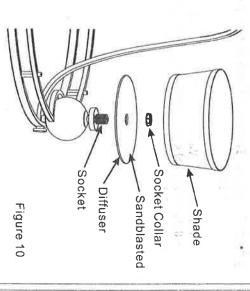


STEP 10 1 Install Bulb and Bulb Shield

- This fixture uses Frosted G9 Halogen Bulbs (supplied). Maximum 40 watts.
- $O_{\mathbb{R}}$ until snug.

 IMPORTANT: Do not touch the bulb with bare hands use cloth or glove. Insert bulb and seat properly into place.
 Screw Bulb Shield (N) onto the Socket and hand tighten Ø

Your fixture is now assembled and ready to use. Enjoy

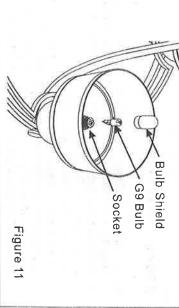

CAUTION FOR BULB REPLACING

- DOB>

- When replace bulb, turn off power and allow lamp to cool. For safety purpose, wear gloves and eye protection. If bulb is scratched or cracked, DO NOT use the lamp to avoid breakage during use or installation. Use only in fixtures rated for lamps wattage and voltage.

 Lamp operate under high pressure generating intense heat. Prevent contact with liquid and combustible materials.


Thank you for purchasing a Quoizel product

UOIZEL 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445

Assembly Instruction For Style **UPGO5004IS** Sheet #IS-UPG O5004IS

S TEP Pass Supply Wires through Fixture Chain

⋗ Pull the Supply Wires and Ground Wire up through the Fixture Chain (H) alternating links. Push the wires up through the Canopy Chain Loop (F) into the outlet box.

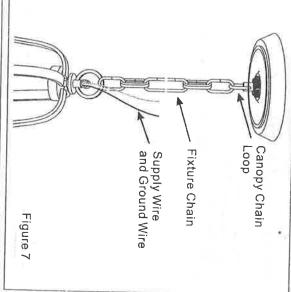

STEP 00 **Make Wire Connections**

- œ
- 0 Un-thread the Canopy Lock Ring (G) and slide Canopy Lock Ring (G) and Ceiling Canopy (E) down the Fixture Chain (H). Push all slack fixture wire through Canopy Chain Loop (F) into Outlet Box. Trim excess fixture wire leaving a minimum of 6 inch. Hanging out of the Outlet Box.
- D wire ends according to instructions supplied with connectors Connect White Supply Wire from the Outlet Box to White (Connectors are not included with fixture.) Strip and prepare Use standard wire connectors to make all wire connections.
- Wire from fixture.
- Connect Ground Wire from the Outlet Box to Ground Wire Black Wire from fixture Connect Black (or Red) Supply Wire from the Outlet Box to
- from fixture Twist connectors until wires are tightly joined together.
- $\pm o$ Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.
- Θ. Re-attach the Ceiling Canopy (E) as shown in Step 5

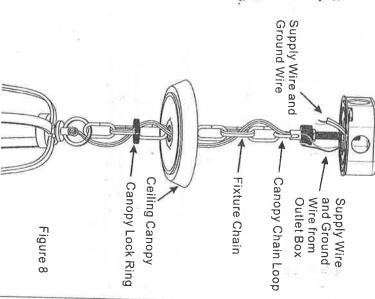




Figure 9


Thank you for purchasing a Quoizel product

0 6 CORPL GOOSE 01

Assembly Instruction For Style UPGO5004IS Sheet #IS-UPGO5004IS


STEP 4 **Attach Canopy Chain Loop to Nipple**

- ₽ (B) Thread another Hex Nut (D) onto the end of the Nipple
- $\overline{\omega}$ Place the Lock Washer (C) over the end of the Nipple (B) and then thread the Canopy Chain Loop (F) onto the end of the Nipple (B).
 Using pliers, thread the Hex Nut (D) against the Canopy Chain Loop (F) and hand tighten until snug.
- 9

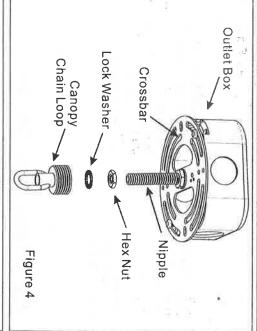


STEP S **Assemble Ceiling Canopy**

⋗ Push the Ceiling Canopy (E) upward over the Outlet Box. Thread the Canopy Lock Ring (G) onto the Canopy Chain Loop (F) and tighten until snug to secure the Ceiling Canopy (E).

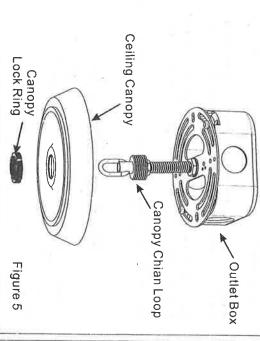

STEP 0 Attach Fixture Chain to Cano Chain Loop and Fixture Loop Canopy

- ₽ Adjust the Fixture Chain (H) to your desired length by removing the links if needed. You may need to use plier to protect the finish from the pliers. to open the chain links. If so, put a cloth over the chain
- œ Attach one end of the Fixture Chain (H) onto the Canopy Chain Loop (F) and then attach the other end of the Fixture Chain (H) onto the Fixture Loop (M) on the top of the fixture.

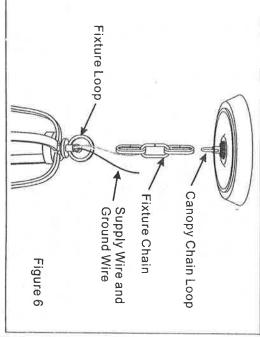

Thank-you for purchasing a Quoizel product