

- 1. This light fitting operates at a normal supply voltage of 220V-240V.
- 2. Make sure the power is off before installing the luminaire.