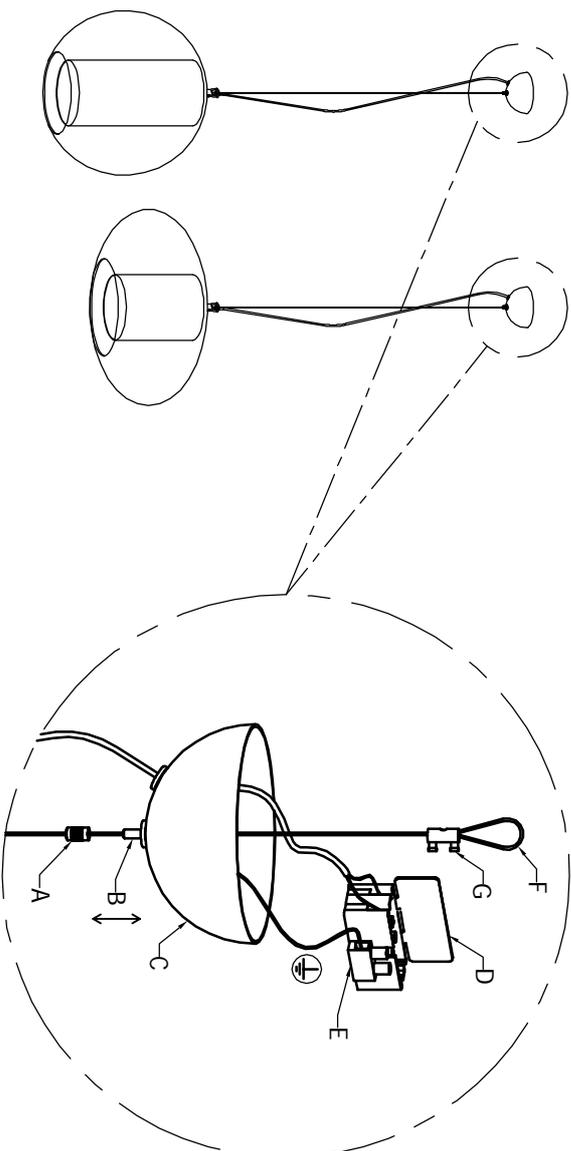


modo

L U C E

BOLLA ϕ 40, 50, 60 PMMA
 ELLISSE ϕ 60, 80 PMMA
 BOLLA ϕ 40, 50, 60 PMMA
 ELLISSE ϕ 60, 80 PMMA

**ISTRUZIONI DI MONTAGGIO**

- Staccare la corrente di alimentazione.
- Svitare il particolare (A) ed estrarre il cavo in acciaio.
- Agganciare l'ascia del cavo (F) al gancio a soffitto precedentemente montato e regolare l'altezza della lampada agendo sul morsetto (G).
- Collegare i cavi di rete nel morsetto (E) rispettando le polarità e richiudere la scatola (D).
- Regolare la tensione del cavo elettrico facendo attenzione che il cavo rimanga morbido.
- Sollevare il rosone (C) tenendo premuto il particolare (B) in modo che il cavo in acciaio scorra all'interno di esso fino al completo appoggio del rosone al soffitto.
- A posizionamento effettuato rilasciare il particolare (B) e farvi ruotare con cura il particolare (A).
- Il diffusore è già montato.

ATTENZIONE

Gli apparecchi di nostra costruzione sono idonei all'uso in ambienti ordinari con temperatura ambiente ad umidità relativa standard. Tutte le operazioni devono essere eseguite da un tecnico specializzato.

PULIZIA**Staccare la corrente di alimentazione o la spina dalla presa.**

Per la pulizia periodica degli apparecchi di illuminazione usare sempre i quanti ed uno straccio morbido (in caso di superfici liscie) o un piumino del tipo con manico per la finitura in tessuto o plissé. Non usare mai solventi o alcool. Evitare nel modo più assoluto di piegare parti non previste per la mobilità delle stesse. In quanto ciò potrebbe indebolire o rompere le stesse.

Il diffusore interno di tutte le serie e versioni è montato su uno snodo che ne permette una leggera inclinazione in tutte le direzioni per un perfetto bilanciamento della sospensione. L'oscillazione è utile anche per effettuare la pulizia interna.

INSTRUCTION


- Switch off the power or pull the plug out.
- Unscrew the detail (A) and take out the steel cable.
- Hang up the loop of the steel cable (F) at the hook on the ceiling and regulate the position of the lamp using the regulation clamp (G).
- Connect the network cables at the clamp (E), check the polarity and close again the box (D).
- Pay attention that the electric cable is always in a soft tension.
- Lift up the ceiling rose (C) and press the detail (B) during the movement, so that the steel cable slides inside the detail until the ceiling rose lean against the ceiling.
- After this operation release the detail (B) and screw with care the detail (A).
- The lampshade is already mounted.

ATTENTION

The products of our production are suitable for the using in usual surroundings with standard temperature and humidity levels. All the operations have to be done with the power off.


CLEANING

Switch off the power or pull the plug out.
 For the periodical cleaning of the lamp use always gloves and a soft cloth. Use spray for glasses or all-purpose. Avoid absolutely to fold parts which are not expected for folding, in this case welded parts are going to be damaged.

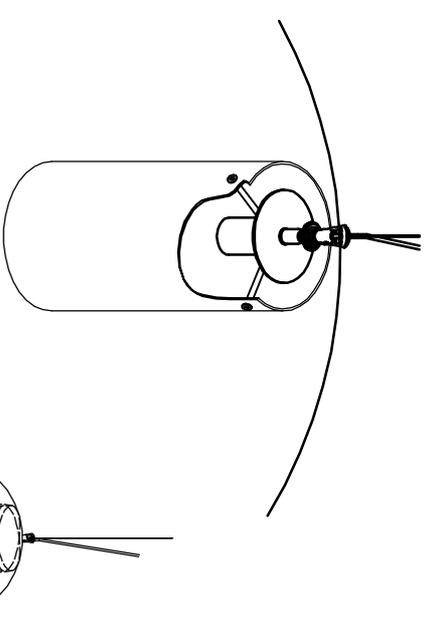

BOLLA ϕ 40
 BOLLA ϕ 50
 BOLLA ϕ 60
 ELLISSE ϕ 60
 ELLISSE ϕ 80

1 x max 42W E27 HES
 1 x max 42W E27 HES



1 x 20W E27 fluo
 1 x 29W E27 fluo
 1 x 29W E27 fluo
 1 x 20W E27 fluo
 1 x 29W E27 fluo

IMPORTANT

Nelle versioni con plissé nero e marrone usare **SOLO** lampade a risparmio.

IMPORTANT

With black or brown plissé use **ONLY** saving energy light bulbs.