



1. Make a fold on the inner shade and lift it out of the lamp.



3. Put the new shade inside the old shade.



2. Fold the new inner shade with the adhesive tape pointing inward.



4. Holding the two shades firmly, use the old shade as a template and make the thee small cutouts with scissors.




ASSEMBLY INSTRUCTION CHANGING THE INNER SHADE ON A PEDRERA H2O TABLE LAMP



5. The new inner shade is now ready to be inserted in the lamp with the adhesive tape pointing inward.



6. Make sure the inner shade is held firmly against the metal and that it fits well

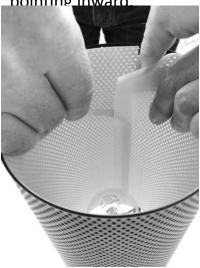

7. Carefully remove the yellow protection strip and press the overlap together. This last operation is delicate, so be careful!
PEDRERA // by Barba Corsini & Joaquim Ruiz Millet