




ASSEMBLY INSTRUCTION / CHANGING THE INNER SHADE ON A PEDRERA PD2 LAMP




1. Make a fold on the inner shade and lift it out of the lamp.



2. Fold the new inner shade with the adhesive tape pointing inward and place it inside the lamp.

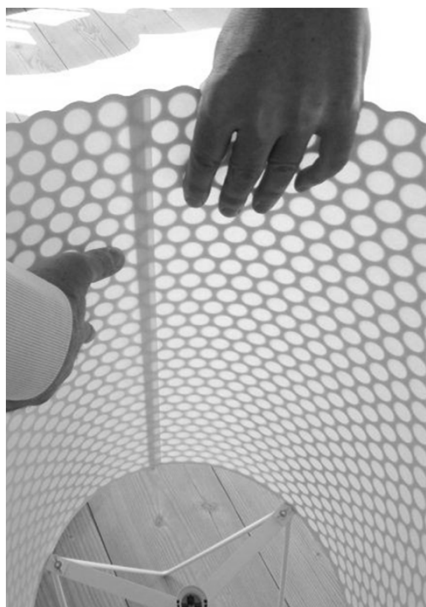

3. Make sure the inner shade is held firmly against the metal and the top edges are aligned.

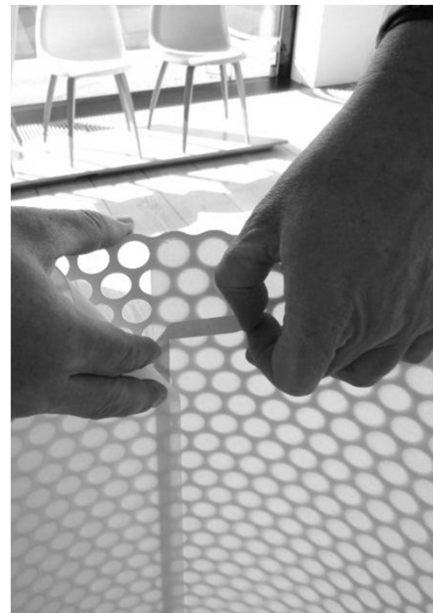

4. Carefully remove the yellow protection strip and press the overlap together. This last operation is delicate, so be careful!