LED DIMMABLE LIGHT TUBE APP BASED SHORT AND LONG

By Rune Krøjgaard Instruction





ATTENTION

In some countries, electrical installation must be carried out by authorised electricians/contractors; please check with your local authority for guidance. The product must not be modified in any way.


Gejst accepts no responsibility for any products that have been modified or tampered with. This product is designed for indoor use only.

TECHNICAL DATA

This product is a LED Dimmable Light Tube App Based, warm white LED Tube, 3000/6500 Kelvin. Average lifespand 25.000 Hours.

Please NOTE to place the electrical end towards the end of the lamp where the power is connected.

Content of the box



1 Insert LED Dimmable Light Tube in your lamp. Please make sure to place the LED tube with the L and N towards the end of the lamp where the power is connected.

Fasten the LED tube by holding the lamp and turn the LED tube with your thumbs 90 degrees.

 Download Tuya Smart app on App Store or Google Play.



- 3 Ensure that your phone is connected to the Wi-Fi.
- Open Tuya Smart app and press "Sign up" to register an account, if you do not already have an account.



- Turn on your lamp. When it is your first time connecting, the LED Tube is blinking.

 If the LED Tube is not blinking, please turn it on and off 3 times, and then wait 3 seconds.
- Tap the "+" button on the app and then press "Add Device".



Choose the light tube that is showing automatically after Tuya Smart app has searched for nearby devices. If your device has been found automatically then skip to step 9.


category "Lightning" and choosing

"Light Source (Wi-Fi)".



Add Device If the LED Tube is not showing you can manually add the device by tapping the




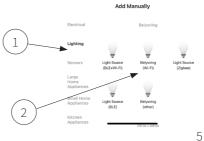

Select your Wi-Fi and enter your Wi-Fi password.



Your LED device is now added successfully.
You can rename the device now or choose to
do it later.
Press "Done".

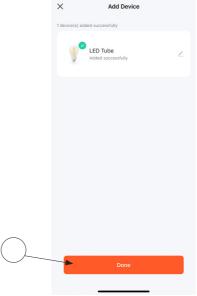

When the light is added successfully, you are now able to control your LED Dimmable Light Tube.

